Your common sense, good judgement and general alertness are crucial to safe and successful service work. Before attempting any work on your Volkswagen, be sure to read **00 Warnings and Cautions** and the copyright page at the front of the manual. Review these warnings and cautions each time you prepare to work on your car. Please also read any warnings and cautions that accompany the procedures in the manual.

### Α

#### ABS

see Antilock brakes (ABS)

# Accelerator pedal assembly

20-38

# Air conditioning (A/C)

blower motor 87-5 Climatic 87-3 Climatronic 87-8 components 87-3, 87-8 compressor 87-21 condenser 87-20 controls 87-4, 87-9 dashboard air outlets 70 dust and pollen filter 03-65, 87-3, 87-8, 87-10 evaporator 87-10 evaporator drain hose 87-11 expansion valve 87-1, 87-19 flap motors 87-3, 87-8 functions 87-2 housing 87-10 overview 02-30 pressure sensor 87-19 refrigerant oil 87-17 refrigerant system 87-16 sunlight photo sensor 87-9 vents 87-6, 87-7

### Air filter

03-49

### Air outlets

center dashboard 70-9

### **Airbags**

69-1, 69-10 spiral spring 96-10 visual inspection 03-63

### Alarm system

96-16

### Alignment

44-3

### Alternator (generator)

2.0L gasoline 27-12 2.5L 27-15 belt 03-38 diesel 27-9

### **Amplifier**

91-5, 91-9 pin assignments 91-10

#### Antenna

91-5

#### **Antifreeze**

03-24

### Antilock brakes (ABS)

electrical component 45-4 hydraulic components 45-5 variants 45-1 warning lights 45-3 wheel speed sensor 45-7 see also Electronic stabilization program (ESP)

### Antislip regulation (ASR)

45-2

#### Anti-theft

96-15 radio 91-6

# A-pillar trim

70-21

# Arm rest

rear 72-8

### ASR (antislip regulation)

45-2

see also Antilock brakes (ABS)

### ATF

see Automatic transmission

### **Automatic transmission**

applications 02-23
ATF servicing 37-5
ATF cooler 37-11
ATF pump drive 32-1
identification 03-8
electrical components 37-3
shift mechanism 37-8
specifications 37-2

### **Auxiliary heater**

87-3, 87-8, 87-10, 87-11

### Axle

40-9

boot, checking 03-61

### В

# **Back-up lights**

switch 96-5 switch function automatic transmission 37-1 DSG 34b-3

# Badge, rear

66-6

### **Balance shaft**

02-10, 02-11, 15c-32, 17-12

### Battery

27-3
charging 27-6
procedure following interruption of
voltage supply 27-6
remote control batteries 57-11
removing and installing 27-7
tests 27-4
service 03-35

### **Belts**

ribbed belt 03-38 tensioner 27-9, 27-12, 27-15 timing belt checking 03-43 replacing 1.9L TDI 15a-6 2.0L TDI 15b-8 2.0L FSI gasoline 15c-6

### **Bleeding brakes**

47-2

### Blower motor

87-5

#### Body

engine hood lock carrier 50-1 fender 50-3 grille 66-5 overview 02-26 sound absorber panels 03-14 underbody trim 50-4 wheel housing liner 66-1 see also Trim

# B-pillar trim

70-23

### Brake fluid

bleeding 47-2 level 03-26 replacing 03-27

### **Brake light**

94-12, 94-14 switch 23-8, 46-11

02-9, 26-5, 26-10, 26-14, 26-17

Brakes	Cautions	Coolant
antilock 45-1	00-2	see Engine cooling system
bleeding 47-2	see also begining of each repair group	
booster 47-8		Coolant pump
disc 46-1, 46-3, 46-6	CD changer	1.9L TDI 19-8
fluid specification 47-3	91-5	2.0L TDI 19-10
master cylinder 47-8	Center console	2.0L gasoline
overview 02-25	70-4	code BPY 19-12
pads 46-3, 46-6	70-4	code CBFA, CCTA 19-13
checking 03-54	Central locking	2.5L 19-17
front 46-3	57-10	O a set a see Harbet
rear 46-6		Coutesy light
parking brake 46-9	Climatic	94-11
pedal 46-10	87-3	C-pillar trim
rotor 46-1, 46-3, 46-6	see also Air conditioning (A/C)	sedan 70-24
	Climatronic	wagon 70-27
tandem pump 20-14, 47-7	87-8	magon / o =/
troubleshooting 47-1		Crankshaft
vacuum check-valve 47-7	see also Air conditioning (A/C)	seal 02-23
vacuum pump 47-6	Clutch	Ometa a santual
see also Antilock brakes (ABS)	assembly	Cruise control
see also Caliper	DSG 30-10	27-2
Bulkhead, plenum	manual 30-8	Cupholder
50-4	hydraulics	rear arm rest 72-8
30 <del>1</del>	bleeding 30-6	Todi dilli Tost 72 o
Bumpers	5-speed 30-4	CV joint
front 63-1	6-speed 30-5	40-15, 40-16
rear	pedal 30-2	boot 03-61
sedan 63-4		
wagon 63-6	pedal position sensor 23-8, 30-3	Cylinder head (1.9L TDI engine)
	release bearing	15a-3
Bus systems	5-speed 30-4	assembly 15a-4
components 97-3	6 <b>-s</b> peed 30-5	diagnosis 15a-2
overview 9-3	Coil, ignition	<b>cover 15a-</b> 5
	2.0L gasoline 28-6	valvetrain 15a- <b>16</b>
	2.5L 28-7	Cylinder head (2.01 TDI engine)
C	2.02.20 /	Cylinder head (2.0L TDI engine) 15b-18
	Coil spring	
Caliper	front 40-8	assembly 15b-19
bleeding 47-3	rear 42-5	cover 15b-3
front 46-3	O a mark and a constant	diangosis 15b-2
rear 46-6	Comfort system	valvetrain 15b-20
1001 40 0	9-4	Cylinder head (2.0L gasoline engine)
Camshaft	Common rail	assembly
2.0L gasoline 02-14, 15c-24	basics 23-13	code BPY 15c-4
2.5L 02-22	545165 25 15	code CBFA, CCTA 15c-27
adjustment	Component locations (electrical)	cover cove BPY 15c-5
2.0L gasoline	97-3	diagnosis 15c-2
code BPY 15b-21		valvetrain
code CBFA, CCTA 15c-29	Compression test	code BPY 15c-20
2.5L 15d-9	1.9L TDI 15a-2	code CBFA, CCTA 15c-29
sensor	2.0L TDI 15b-2	Code CBI A, CCIA 15C-29
1.9L TDI 23-4, 23-7	2.0L gasoline15c-2	Cylinder head (2.5L engine)
2.0L gasoline	2.5L 15d-2	assembly 15d-4
FSI 24-4, 24-5, 28-6	Compressor	cover 15d-5
TSI 24-11, 24-13, 28-6	87-21	diagnosis 15d-2
2.5L 24-16, 28-7	see also Air conditioning (A/C)	valvetrain 15d-10
see also Timing belt	See also All Collulioning (A/O)	
see also rinning soft	Condenser	
CAN-bus	87-20	
components 97-26		
overview 9-3	Console, center	
Ostalistic samusidas	70-4	
Catalytic converter	Constant velocity (CV) joint	
02-9, 26-5, 26-10, 26-14, 26-17		Ť

see CV joint Control arm 40-3

Your common sense, good judgement and general alertness are crucial to safe and successful service work. Before attempting any work on your Volkswagen, be sure to read **00 Warnings and Cautions** and the

00 Warnings and Cautions and the copyright page at the front of the manual. Review these warnings and cautions each time you prepare to work on your car. Please also read any warnings and cautions that accompany the procedures in the manual.

### D

#### Dashboard

air outlets 70-9
center cover 70-15
center trim 70-10
footwell cover, left 70-16
instrument cluster lower trim 70-17
left side trim 70-11
right side trim 70-14
side covers 70-10
switches 96-5

Diagnostic link connector (DLC) 24-2, OBD-1

# Diagnostic trouble code (DTC)

general OBD-1 P-codes OBD-4 U-codes OBD-35

### Diesel

fuel gelling 20-4 ignition 28-2

### **Dimensions**

02-3

### Direct Shift Gearbox (DSG)

02-24 clutch 30-10 electrical components 34b-3 oil cooler 34b-12 oil, servicing 34b-4 shift mechanism 34b-8 specifications 34b-2

### Disc brakes

see Brakes

### DLC

see Data link connector (DLC)

### Door

front 57-2 rear 57-7

### Door hinge, lubricating

03-64

#### Door lock

front 57-3 rear 57-8

### Door panel

inner trim 70-19 outer 57-5

### **Door window**

assembly front 64-1 rear 64-2 glass front 64-2 rear 64-3 rear quarter glass 64-5 regulator 64-5

### D-pillar trim

70-27

### Drive axle

40-9

boot, checking 03-61

### **Drive belt**

03-38

### **Drive plate**

32-1

### DSG (Direct Shift Gearbox)

see Direct Shift Gearbox (DSG)

### DTC table

see Diagnostic trouble code (DTC

### **Dual-mass flywheel**

30-7

# **Dust and pollen filter**

03-65, 87-3, 87-8, 87-10

### Ε

### E-box (electronics box)

cover 97-32 fuses 97-34 relays 97-42

# ECM (engine control module)

23-23, 24-23

### EDL (electronic differential lock)

45-1

### EGR (exhaust gas recirculation)

26-9

### **Electrical component designation**

15c-1

### **Electrical component locations**

97-3

### Electrical system

fuses 97-32 grounds 97-46 load management 9-6 overview 02-31, 9-1 relays 97-42 troubleshooting 9-7 wiring diagrams EWD-7 index EWD-1

### Electrolyte

27-4

## **Electro-mechanical steering**

see Steering

### Electronic differential lock (EDL)

45-1

### Electronic immobilizer

90-3, 96-15

# Electronic power control (EPC)

20-38

# Electronic stabilization program (ESP)

45-2 motion sensor -45-4, 45-8

see also Antilock brakes (ABS)

# Electronics box (E-box)

see E-box

# **Emergency flasher switch**

96-7

# Emergency

car opening 96-17 sunroof closing 60-7

### **Engine**

02-5 applications 20-2 balance shaft, 2.0L gasoline 02-10, 02-11 compartment

components 97-16 views 03-13

engine / transmission mount torques

see Engine mounts identification 03-6

overview 1.9L TDI 02-5

2.0L TDI 02-8

2.0L FSI gasoline 02-10

2.0L TSI gasoline 02-15

2.5L 02-21

sound absorber panels 03-14

### Engine control module (ECM)

23-23, 24-23

#### F Engine coolant temperature (ECT) **Engine management** components sensor 1.9L TDI 19-7, 23-4, 23-6, 23-7 1.9L TDI 23-4 Fan 2.0L TDI 19-9 2.0L TDI 23-16 see Blower motor 2.0L gasoline 2.0L gasoline see also Engine cooling system code BPY 19-11, 24-4, 24-5 code BPY 24-4 Fender, front code CBFA, CCTA 19-13, 24-11, code CBFA, CCTA 24-11 50-3 24-13 2.5L 24-16 2.5L 19-16, 24-16, 24-17 diagnosis 26-2 Flywheel, dual-mass electronic power control (EPC) 20-18 30-7 Engine cooling fan engine control module (ECM) 23-23, 19-21 24-23 **Foglight** gasoline 24-2 94-2, 94-9 Engine cooling system on board diagnostics OBD-1 anti-freeze concentration 03-24 Footwell cover, left see also Engine coolant temperature components 70-16 1.9L TDI 19-7 see also Engine speed (rpm) sensor 2.0L TDI 19-9 Front suspension see also Fuel rail 2.0L gasoline ball joint 40-4 code BPY 19-11 see also Ignition checking 03-60 see also Intake manifold code CBFA, CCTA 19-13 coil spring 40-8 2.5L 19-10, 19-15 CV joint 40-15, 40-16 **Engine mounts** coolant level 03-24 drive axle 40-9 1.9L TDI 15a-17 cooling fans 19-21 strut assembly 40-5 2.0L TDI 15b-18 draining, filling 19-5 subframe, stabilizer bar, control arm 2.0L gasoline 15c-19 hoses assembly 40-3 2.5L 24-16 inspecting 03-25 triple roller joint, 40-17, 40-18 overview code CBFA, CCTA 19-14 Engine speed (rpm) sensor wheel bearing 40-1 1.9L TDI 23-4, 23-7 pressure testing 19-4 Fuel filler flap thermostat 2.0L gasoline 55-9 1.9L TDI 19-8 FSI 24-4 2.0L TDI 19-10 TSI 24-11, 24-12 Fuel filter 2.5L 19-10 2.5L 24-16, 24-17 diesel engine 03-30 testing 19-4 gasoline engine 03-33 EPC (electronic power co radiator 19-21 20-38 Fuel injection troubleshooting 19-3 see Engine management see also Coolant pump ESP (electronic stabilization program) see Electronic stabilization program **Fuel injector Engine hood** 1.9L TDI 23-10 55-1 2.0L TDI 23-20 lock 55-3 **Evaporative emissions control (EVAP)** 2.0L gasoline lock carrier service position 50-1 20-40 code BPY 24-9 **Engine lubrication** code CBFA, CCTA 24-15 **Evaporator** components 87-10 2.5L 24-20 1.9L TDI 17-6 see also Air conditioning (A/C) pump injector (diesel) 23-10 2.0L TDI 17-8 Exhaust gas recirculation (EGR) Fuel level sensor 2.0L gasoline see EGR (exhaust gas recirculation) 20-10 code BPY 17-10 code CBFA, CCTA 17-11 **Exhaust manifold** Fuel pressure 2.5L 17-17 1.9L TDI 21-5, 26-9 20-13, 20-23, 20-33 oil change 03-18 2.0L TDI 21-7 relieving high pressure 20-30 oil pan 2.0L gasoline 02-12, 21-11 1.9L TDI 17-6 Fuel pump 2.5L 02-22 2.0L TDI 17-8 see Fuel system 2.0L gasoline **Exhaust system** Fuel rail code BPY 17-10 components 2.0L TDI 23-15, 23-16 code CBFA, CCTA 17-11 1.9L TDI 26-7 2.0L gasoline 2.5L 17-16 2.0L TDI 26-12 code BPY 24-9 oil pressure warning system 17-2 2.0L gasoline 26-14 code CBFA, CCTA 24-15 2.5L 26-17 see also Oil 2.5L 24-20 installation details 26-3

Expansion valve 87-1, 87-19

Your common sense, good judgement and general alertness are crucial to safe and successful service work. Before attempting any work on your Volkswagen, be sure to read **00 Warnings and Cautions** and the copyright page at the front of the manual. Review these warnings and cautions each time you prepare to work on your car. Please also read any warnings and cautions that accompany the procedures in the manual.

### Fuel system

02-7, 02-14, 20-2 bleeding 20-10 delivery unit 20-9 evaporative emissions control 20-40 fuel cooler 20-16 fuel level sensor 20-10 fuel pump check valve 20-35 current draw 20-12 electric 20-9 high pressure TDI 20-18, 20-18 high pressure gasoline 20-14 tandem 20-14 priming 20-20 problems 20-4 safety 24-2 tests 20-22, 20-33

### Fuel tank

20-7, 20-8 flap 55-9

### Fuses

97-3

### G

### Gear selector

automatic transmission 37-8 Direct Shift Gearbox (DSG) 34b-3 manual transmission 34a-3

### Generator

see Alternator (generator)

### **Glass**

see Door window

# Glove compartment

70-15

# Glow plugs

28-2, 28-4 relay 23-9

### Grab handle

70-18

#### Grille

bumper 63-3 radiator 66-5

### Grounds

97-46

### Н

#### Hand brake

see Parking brake

### Hatch and lock (SportWagon)

55-8

### Headlight

94-4 adjusting 03-66 vehicle level sensor 40-3

#### Headliner

printed circuits 96-2

### Heating and ventilation

dust and pollen filter 03-65, 87-3, 87-8, 87-10 heater core 87-12 see also Air conditioning (A/C) see also Auxiliary heater

# **HID** headlight

94-4

### Hood

engine hood 55lock carrier 50-1

### Horn

acoustic 96-15 alarm 96-17

## ı

### Ignition coil

2.0L gasoline 28-6 2.5L 28-7

# Ignition system

components
2.0L gasoline 28-6
2.5L 28-7
disabling 28-2

### Immobilizer

96-15

### Instrument cluster

90-1 dimmer 96-6 lower trim 70-17 recoding 90-5 removing, installing 90-5

# Intake flap motor (2.0L)

removing and installing 24-7

### Intake manifold

1.9L TDI 23-3 2.0L TDI 23-17 2.0L gasoline 02-13 code BPY 24-7 code CBFA, CCTA 24-14 2.5L 02-22, 24-18 tightening mounting bolts 03-49

#### Intercooler

1.9L TDI 21-6 2.0L TDI 21-9 2.0L gasoline 21-17

### Interior lights

96-2

### iPod adapter

91-5

### J

# Jacking vehicle

03-11

# K

# Key

battery 57-11

# Knock sensor

2.0L gasoline 28-6 2.5L 28-7

### L

### License plate

bracket, front 63-2 light 94-13

### Lid

see Rear hatch see also Trunk

# Lifting vehicle

03-11

# Lights, exterior

controls 94-2 convenience 94-2 foglights 94-2, 94-9 headlights 94-4 rear lights 94-12 side lights 94-11 switch 96-5 see also Headlight

# Lights, interior

96-2

### LIN-bus

components 97-28 overview 9-3

Lock carrier	Muffler	Power window
front service position 50-1	26-18	see Door window
rear hatch, cover 70-29		
10di 11dioii, 00v01 70 20		Pump injector (Diesel)
	NI .	23-10
	N	
M		Pumpe Düse
	Navigation	02-5, 23-1
Maintenance	91-4	,
	31-4	
air filter 03-49		_
battery 03-35		R
body and interior 03-63	0	
brake fluid 03-26		Radiator
brake system 03-54	"	
· · · · · · · · · · · · · · · · · · ·	OBD II	19-21
cooling system 03-23	OBD-2	Padiator grillo
drive axle boots 03-61	plug 24-2	Radiator grille
dust and pollen filter 03-65	1 3	66-5
engine oil 03-17	Oil	<b>.</b>
exhaust system 03-62	03-17, 17-2	Radio
•	capacities 17-2	91-2, 91-7
fuel filter 03-29	·	antenna 91-5
maintenance schedules 03-70	filter 03-18, 03-22	anti-theft 91-6
parking brake 46-9	1.9L TDI 17-7	
ribbed belt 03-38	2.0L TDI 17-9	satellite 91-4
road test 03-69	2.0L gasoline	Rain sensor
	<u> </u>	
sound absorber panels 03-14	code BPY 17-13	70-2, 92-2
spark plugs 03-45	code CBFA, CCTA 17-14	Dear batch and last (CnartWagen)
timing belt 03-43	2.5L 17-18	Rear hatch and lock (SportWagon)
tires and wheels 03-56	oil filter cap (2.5L) repairing 17-19	55-8
transmission fluid service 03-63	pressure 17-2	trim 70-30
	specifications 03-17	
underbody sealant 03-62	·	Rear parcel shelf
under car maintenance 03-54	see also Engine lubrication	70-24
windshield wipers and washers 03-65		754
	On Board Diagnostics	Rear suspension
Manifold	03-68, OBD-1	coil spring 42-5
see Exhaust manifold	orrered a money	curb weight position 42-2
see also Intake manifold	Oxygen sensor	
See also marke marked	26-6, 26-7, 26-10, 26-14. 26-17	overview 42-3
Manual transmission		shock absorber 42-5
		stabilizer bar 42-8
applications 02-23	D	wheel bearing 42-4
engine / transmission mount torques	P	Wilder Searing 12
1.9L TDI 15a-71		Refrigerant
2.0L TDI 15b-18	Parking aid	see Air conditioning (A/C)
2.0L gasoline code BPY 15c-19	_	see All conditioning (A/O)
	94-3	Relays
engine to transmission torques	Parking brake	97-42
34a-18	•	97-42
gear selector 34a-6	46-9	Remote control (locking)
identification 03-8	Double of the City	
oil, servicing 34a-3	Particulate filter	57-11
, 3	26-11	Ribbed belt
removing and installing	December of the state of	
5-speed 34a-13	Passenger occupant detection	03-38
6-speed 34a-17	system (PODS)	
specifications 34a-2	69-10	rpm sensor
see also Direct Shift Gearbox (DSG)		see Engine speed (rpm) sensor
coo also Birott Grint Goalbox (Boa)	Photo sensor	
Master cylinder	87-9	Run-on mode
brakes 47-8		9-5
	Plenum	
clutch 30-2, 30-4, 30-5	bulkhead 50-4	
Mirror	plastic cover 66-5	S
	ριαστίο συνοί συ-σ	3
interior 70-2	PODS (passenger occupant detection	
outside 66-3		Safety, passenger
	system)	02-29
Motion sensor (ESP)	69-10	VL 20
45-4, 45-8	00-10	Satellite radio
	Pollen filter	91-4
Motronic	03-65, 87-3, 87-8, 87-10	J1-4
24-1	03-03, 07-3, 07-0, 07-10	Scan tool
	Power steering	on-board diagnostics II OBD-2
	_	S .
	see Steering	scan tool suppliers OBD-35

BentleyPublishers.com
BentleyPublishers.com—All Rights Reserved

Your common sense, good judgement and general alertness are crucial to safe and successful service work. Before attempting any work on your Volkswagen, be sure to read

**00 Warnings and Cautions** and the copyright page at the front of the manual. Review these warnings and cautions each time you prepare to work on your car. Please also read any warnings and cautions that accompany the procedures in the manual.

### Seatbelts

child seat anchors 69-5 front 69-6 rear 69-8

#### Seats

front 72-1 rear 72-5 rear arm rest 72-8 side upholstery (rear seat) 72-6

### Secondary air injection

pump 24-16 system 26-20

Service position, engine hood lock carrier

50-1

Service reminder indicator, resetting 03-70

### Shift-lock

automatic transmission 37-3 Direct Shift Gearbox (DSG) 34b-3

### Shock absorber

42-5

### Sill panel trim

70-17

### Siren

see Horn, alarm

### Slave cylinder, clutch

30-4, 30-5

## Sleep mode

9-5

### Sound absorber panels

03-14

# Sound system

91-1 amplifier 91-5, 91-9 CD changer 91-5 overview 91-3 speakers 91-11

# Spark plugs

03-45

### **Speakers**

91-11

### Special tool suppliers

OBD-35

# Specifications

02-3

### Speedometer reading

90-1

#### Spoiler

front 63-3 rear 63-5, 63-7

### Spring, suspension

front 40-8 rear 42-5

#### Stabilizer bar

front 40-3 rear 42-8

### Starter

27-17

### Steering

column components 48-3

switches 96-8 trim 70-11, 96-8

components 48-3

electro-mechanical 02-26, 48-3, 48-4

lock 96-13

overview 02-25

rack 48-3, 48-4

steering angle sensor 48-2, 11

wheel 48-5

# Storage compartment

70-4

# Strut, front suspension

40-5

# Sunlight photo sensor

87-9

# Sunroof

components 60-2 drain hoses 60-8 drive motor 60-6 emergency closing 60-7 lubricating 03-64 repairs 60-3

# Sun visor

70-14

### Subframe

front 40-3 rear 42-3

# Suspension

overview 02-15 see Front suspension see also Rear suspension

#### **Switches**

dashboard 96-5 door 96-13 emergency flasher 96-7 exterior lights 96-5 ignition and steering lock 96-11 instrument cluster dimmer 96-6 steering column stalk 96-8

# T

### **Tailgate**

see Rear hatch

# **Taillight**

94-2, 94-12

# Tandem pump

20-14, 47-7

### TDI

02-5

# **Technical data**

1.9L TDI 02-6 2.0L TDI 02-8 2.0L FSI gasoline 02-10 2.0L TSI gasoline 02-15 2.5L 02-22

### Thermostat

1.9L TDI 19-8

2.0L TDI 19-10

2.5L 19-10

testing 19-4

see also Engine cooling system

### Throttle valve

24-10, 24-22

### Timing belt

checking 03-43 removing and installing 1.9L TDI 15a-6 2.0L TDI 15b-13 2.0L gasoline 15b-6

# Timing chain (camshaft drive chain)

2.0L gasoline 02-15, 15c-31 2.5L 02-21 chain guard cover 15c-6 chain guard cover seal 15c-9

### **Tiptronic**

02-23

switch 34b-3, 37-3

### Tires

03-56, 44-1 pressure monitoring 44-5

### **Toothed belt**

see Timing belt

# **Tool suppliers**

OBD-35

### **Torque converter**

32-1

### Towing 03-9

#### **Transmission**

applications and codes 02-23 identification 03-8 see also Automatic transmission see also Direct Shift Gearbox (DSG) see also Manual transmission

#### Trim

center console 70-4
door inner trim 70-19
pillar and side trim 70-21
rear fender inner trim 70-18
rear hatch 70-30
sill panel trim 70-17
steering column trim 70-11
trunk trim 70-25
underbody 50-4
wagon 70-26
see also Body
see also Door panel

# Trip computer readings

90-1

# Triple roller joint

40-16, 40-17

#### Trunk

lid 55-5 lock 55-6 trim 70-25

# Tumble flaps

02-13

### Turbocharger

21-2
1.9L TDI 21-5
2.0L TDI 21-7
2.0L gasoline 21-2
code BPY 21-10
code CBFA, CCTA 21-14
diagnosis 21-4
see also Intercooler

# Turn signal

front 94-8 rear 94-13

### ٧

### Vacuum pump

02-7, 02-20, 02-22, 47-6

# VAG 1551/1552 operating overview flow chart

OBD-37

### Valvetrain

1.9L TDI 15a-18 2.0L TDI 15b-20 2.0L gasoline FSI 15c-20 2.5L 15s-10

### Value Edition Jetta

02-3

# Vehicle identification number (VIN)

01-1, 03-4

#### Ventilation

dust and pollen filter 03-65, 87-3, 87-8, 87-10 see also Air conditioning (A/C) see also Heating and ventilation

### Visor

70-14

### Voltage

9-8

### W

### Warnings

00-1 see also begining of each repair group

### Wastegate

21-14, 23-5

# Water pump

1.9L TDI 19-8 2.0L TDI 19-10 2.0L gasoline code BPY 19-12 code CBFA, CCTA 19-13 2.5L 19-17

### Water separator

03-32

## Weight, vehicle

02-3

### Wheel

03-56, 44-1 alignment 44-3 bearing front 40-1 rear 42-4 housing inner trim (wagon) 70-26 housing liner 66-1 lock 03-56 speed sensor 45-7 steering 48-5

### Window

see Door window

### Wipers and washers

blades 03-66 washers 92-7 wipers 92-3

# Wiring

diagrams EWD-7 index EWD-1

# Working under vehicle

03-12


### Xenon headlight

94-4

ublishers





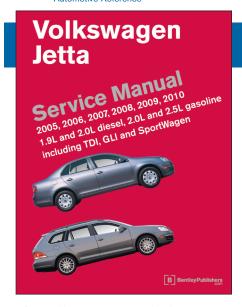

The Volkswagen Jetta (A5) Service Manual: 2005-2010 is a definitive reference source of technical automotive repair and maintenance information for Volkswagen Jetta models built on the "A5" platform. The do-it-yourself Volkswagen owner will find this manual indispensable as a source of detailed maintenance and repair information.

### **Technical Features**

- Covers Jetta models 2005-2010 based on the A5 platform.
- Maintenance procedures from oil changes to belt replacement.
- Engine and cylinder head service, including timing belt replacement.
- Removal and installation of Motronic (gasoline) and diesel fuel injection system components, including Pumpe Düse (PD) and common rail diesel.
- Emission control tests, repairs and adjustments, including exhaust gas recirculation and secondary air injection system.
- Drivetrain maintenance, troubleshooting, adjustment and repair, including clutch, gearshift linkage, and drive axles.
- Suspension component replacement including front struts, rear shocks, coil springs, wheel bearings and wheels.
- Heating and air-conditioning repair, including A/C component replacement for Climatronic and Climatic systems.
- Body adjustment and repairs including front and rear doors, fenders, front radiator support and sunroof.
- Wiring schematics with fuse/relay locations including an easy-to- use illustrated component locator section.
- Volkswagen OBD II diagnostic trouble codes, SAE-defined OBD II P-codes, as well as basic scan tool operation.
- Comprehensive Volkswagen factory tolerances, wear limits, adjustments, and tightening torques.

### BentleyPublishers .com

# Volkswagen Jetta (A5) Service Manual: 2005-2010

1.9L and 2.0L diesel, 2.0L and 2.5L gasoline including TDI, GLI and SportWagen

Price: \$129.95 Bentley Stock No: VJ10 Publication Date: 2009.dec.18 ISBN: 978-0-8376-1616-2 Softcover, 8 3/8 in. x 11 in.


Case quantity: 5 1352 pages

2484 technical photos and illustrations including 991 electrical wiring diagrams

Includes 32 page full color
Volkswagen A5 platform Jetta familiarization section



 Bentley technical editors working on a 2005 Jetta.



Tensioner being rotated to remove ribbed belt.

03 Maintenance



Detailed brake pad and rotor service procedure.

46 Brakes-Mechanical

### **Engines covered**

- 1.9L TDI PD diesel (engine code: BRM)
- 2.0L TDI common rail (engine code: CBEA, CJAA)
- 2.0L FSI turbo gasoline (engine code: BPY)
- 2.0L TSI turbo gasoline (engine code: CBFA, CCTA)
- 2.5L gasoline (engine code: BGP, BGQ, CBTA, CBUA)

### Transmissions covered

- 0A4 5-speed manual
- 02Q 6-speed manual
- 09G 6-speed automatic
- 02E 6-speed DSG



Bentley Publishers, 1734 Massachusetts Avenue, Cambridge, MA 02138-1804 USA Tel: 617-547-4170 • Toll Free: 800-423-4595 • Fax: 617-876-9235 http://www.bentleypublishers.com/contact-sales