

# 2005 VOLVO S80



This manual deals with the operation and care of your Volvo.



Welcome to the world-wide family of Volvo owners. We trust that you will enjoy many years of safe driving in your Volvo, an automobile designed with your safety and comfort in mind. To help ensure your satisfaction with this vehicle, we encourage you to familiarize yourself with the equipment descriptions, operating instructions and maintenance requirements/recommendations in this manual. We also urge you and your passengers to wear seat belts at all times in this (or any other) automobile. And, of course, please do not operate a vehicle if you may be affected by alcohol, medication or any impairment that could hinder your ability to drive.

Your Volvo is designed to meet all applicable safety and emission standards, as evidenced by the certification labels attached to the driver's door opening and on the left wheel housing in the engine compartment.

**For further information please contact your retailer, or:**

In the USA:

In Canada:

Volvo Cars of North America  
Customer Care Center  
P.O. Box 914

Rockleigh, New Jersey 07647-0914  
800-458-1552

<http://www.volvocars.us>

Volvo Cars of Canada Ltd.  
National Customer Service  
175 Gordon Baker Road

North York, Ontario M2H 2N7  
800-663-8255

<http://www.volvocanada.com>

## Contents

### Contents

[Chapter 1 - Safety](#)

[Chapter 2 - Instruments, switches and controls](#)

[Chapter 3 - Climate control system](#)

[Chapter 4 - Interior](#)

[Chapter 5 - Keys, Locks, Alarm](#)

[Chapter 6 - Starting and driving](#)

[Chapter 7 - Wheels and tires](#)

[Chapter 8 - Maintenance/Serviceing](#)

[Chapter 9 - Specifications](#)

[Chapter 10 - Audio systems](#)

[HomeLink® Universal Transceiver \(option\)](#)

[Index](#)

[Back Cover](#)

© 2004 Volvo Cars of North America LLC.

## General information

### Shiftlock

When your car is parked, the gear selector is locked in the (P)ark position. To release the selector from this position, turn the ignition key to position II (or start the engine), depress the brake pedal, press the button on the front side of the gear selector and move the selector from (P)ark.

### Keylock

This means that when you switch off the ignition, the gear selector must be in the (P)ark position before the key can be removed from the ignition switch.

### Anti-lock Brake System (ABS)

The ABS system in your car performs a self-diagnostic test when the vehicle first reaches the speed of approximately 12 mph (20 km/h). The brake pedal will pulsate several times and a sound may be audible from the ABS control module. This is normal.

## Fuel filler door

The fuel filler door, located on the right rear fender, is connected to your car's central locking system. Press the button on the light switch panel (see [page 32](#)) when the car is at a standstill to unlock the fuel filler door. Please note that the fuel filler door will remain unlocked until the car begins to move forward. An audible click will be heard when the fuel filler door relocks.

## Fuel filler cap

After refueling, close the fuel filler cap by turning it clockwise until it *clicks* into place. If this cap is not closed tightly or if the engine is running when the car is refueled, the Malfunction Indicator Lamp ("Check Engine" light) may indicate a fault. **WARNING!** If your vehicle is

### **Warning!**

If your vehicle is involved in an accident, unseen damage may affect your vehicle's driveability and safety.

## Important

**Before you operate your car for the first time, please familiarize yourself with the new-engine oil consumption information on [page 136](#). You should also be familiar with the information in chapters one, two and four of this manual.**

**Information contained in the balance of the manual is extremely useful and should be read after operating the vehicle for the first time.**

**The manual is structured so that it can be used for reference. For this reason, it should be kept in the car for ready access. Do not export your Volvo to another country before investigating that country's applicable safety and exhaust emission requirements. In some cases it may be difficult or impossible to comply with these requirements. Modifications to the emission control system(s) may render your Volvo not certifiable for legal operation in the U.S., Canada and other countries.**

**All information, illustrations and specifications contained in this manual are based on the latest product information available at the time of publication. Please note that some vehicles may be equipped differently, depending on special legal requirements and that optional equipment described in this manual may not be available in all markets.**

**Volvo reserves the right to make model changes at any time, or to change specifications or design, without notice and without incurring obligation.**

### **CALIFORNIA Proposition 65 Warning**

**WARNING!** Engine exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to the state of California to cause cancer, and birth defects or other reproductive harm. In addition, certain fluids contained in vehicles and certain products of component wear contain or emit chemicals known to the State of California to cause cancer, and birth defects or other reproductive harm.

## Volvo and the environment

Volvo is committed to the well being of its customers. As a natural part of this commitment, we care about the environment in which we all live. Caring for the environment means an everyday involvement in reducing our environmental impact.

Volvo's environmental activities are based on a holistic view, which means we consider the overall environmental impact of a product throughout its complete life cycle. In this context, design, production, product use, and recycling are all important considerations.

In production, Volvo has partly or completely phased out several chemicals including freons, lead chromates, naphthanates, asbestos, mercury and cadmium; and reduced the amount of chemicals used in our plants 50% since 1991.

In use, Volvo was the first in the world to introduce into production a three-way catalytic converter with a Lambda sond, now called oxygen sensor, in 1976. The current version of this highly efficient system reduces emissions of harmful substances (CO, HC, NOx) from the exhaust pipe by approximately 95% and the search to eliminate the remaining emissions continues. Volvo is the only automobile manufacturer to offer CFC-free retrofit kits for the air conditioning system for all models as far back as the M/Y 1975 240. Advanced electronic engine controls, refined purification systems and cleaner fuels are bringing us closer to our goal.

After Volvo cars and parts have fulfilled their use, recycling is the next critical step in completing the life cycle. The metal content is about 75% of the total weight of a car, which makes the car among the most recycled industrial products. In order to have efficient and well controlled recycling, many Volvo variants have printed dismantling manuals, indicating the weight and material of individual components. For Volvo, all homogeneous plastic parts weighing more than 1.7 oz. (50 grams) are marked with international symbols that indicate how the component is to be sorted for recycling.

In addition to continuous environmental refinement of conventional gasoline-powered internal combustion engines, Volvo is actively looking at advanced technology alternative-fuel vehicles.

When you drive a Volvo, you become our partner in the work to lessen the car's impact on the environment.

To reduce your vehicle's environmental impact, you can:

- Maintain proper air pressure in your tires. Tests have shown decreased fuel economy with improperly inflated tires
- Follow the recommended maintenance schedule in your Warranty and Service Records Information booklet.
- Drive at a constant speed
- See an authorized Volvo retailer as soon as possible for inspection if the check engine (malfunction indicator) lamp illuminates, or stays on after the vehicle has started
- Properly dispose of any vehicle related waste such as used motor oil, used batteries, brake pads, etc.
- When cleaning your car, use Volvo's own car care products, all of which have systematically been adapted to the environment.

### **PremAir®**

On the surface of the radiator in the engine compartment, there is a special coating called PremAir®. PremAir® works as a catalytic converter, converting most of the ozone passing through the radiator into oxygen, thereby reducing harmful ground-level ozone.

PremAir is a registered trademark of Engelhard Corporation.



[Top of Page](#)

# 2005 VOLVO S80

## Chapter 1 - Safety

### pg. 1 Safety

Not wearing a seat belt is like believing "It'll never happen to me!" Volvo, the inventor of the three-point seat belt, urges you and all adult occupants of your car to wear seat belts and ensure that children are properly restrained, using an infant, car or booster seat determined by age, weight and height. Volvo also believes no child should sit in the front seat of a car.

**Fact:** In every state and province, some type of child-restraint legislation has been passed. Additionally, most states and provinces have already made it mandatory for occupants of a car to use seat belts.

So, urging you to "buckle up" is not just our recommendation - legislation in your state or province may mandate seat belt usage. The few seconds it takes to buckle up may one day allow you to say, "It's a good thing I was wearing my seat belt."

[Seat belts](#) [2](#)

[Center head restraint](#) [3](#)

[Front airbags \(SRS\)](#) [4](#)

[Side impact airbags \(SIPS\)](#) [10](#)

[Volvo Inflatable Curtain \(VIC\)](#) [11](#)

[Whiplash Protection System \(WHIPS\)](#) [12](#)

[Occupant safety](#) [13](#)

[Child safety](#) [14](#)

[Brake system](#) [18](#)

[Anti-lock Brake System \(ABS\)](#) [19](#)

[Stability Traction Control \(STC\)](#) [20](#)

[Dynamic Stability and Traction Control \(DSTC\)](#) [20](#)

### pg. 2 Seat belts

#### Seat belts

**Always fasten the seat belts before you drive or ride. A chime will sound several times if the driver has not fastened his seat belt.**

**To buckle:**

Pull the belt out far enough to insert the latch plate into the receptacle until a distinct click is heard. The seat belt retractor is normally "unlocked" and you can move freely, provided that the shoulder belt is not pulled out too far. The retractor will lock up as follows:

- if the belt is pulled out rapidly
- during braking and acceleration
- if the vehicle is leaning excessively
- when driving in turns

For the seat belt to provide maximum protection in the event of an accident, it must be worn correctly. When wearing the seat belt remember:

- The belt should not be twisted or turned.
- The lap belt must be positioned low on the hips (not pressing against the abdomen).

Make sure that the shoulder belt is rolled up into its retractor and that the shoulder and lap belts are taut.

The seat belts are equipped with tensioners that reduce slack in the seat belts. These tensioners are triggered in situations where the airbags deploy.


The front seat belts also include a tension reducing device which, in the event of a collision, limits the peak forces exerted by the seat belt on the occupant.

Before exiting the car, check that the seat belt retracts fully after being unbuckled.

If necessary, guide the belt back into the retractor slot.

**NOTE:** Legislation in your state or province may mandate seat belt usage.

*Adjusting shoulder belt*

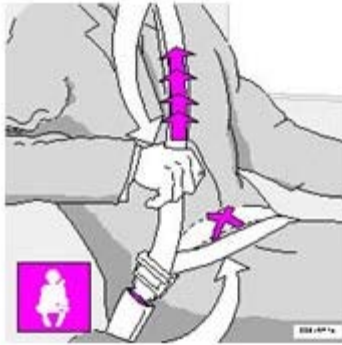

*Lap portion of the belt should sit low*

**Child seats:** Please refer to [page 16](#) for information on securing child seats with the seat belts.




## During pregnancy

Pregnant women should always wear seat belts. Remember that the belt should always be positioned in such a way as to avoid any possible pressure on the abdomen. The lap portion of the belt should be located low, as shown in the above illustration.

pg. 3 Seat belts, Center head restraint

### WARNING!

- Never use a seat belt for more than one occupant.
- Never wear the shoulder portion of the belt under the arm, behind the back or otherwise out of position. Such use could cause injury in the event of an accident.
- As the seat belts lose much of their strength when exposed to violent stretching, they should be replaced after any collision, even if they appear to be undamaged.
- Never repair the belt on your own; have this work done by an authorized Volvo retailer only.
- Any device used to induce slack into the shoulder belt portion of the three-point belt system will have a detrimental effect on the amount of protection available to you in the event of a collision.
- The seat back should not be tilted too far back. The shoulder belt must be taut in order to function properly.
- Do not use child safety seats or child booster cushions/backrests in the front passenger's seat. We also recommend that children who have outgrown these devices sit in the rear seat with the seat belt properly fastened.

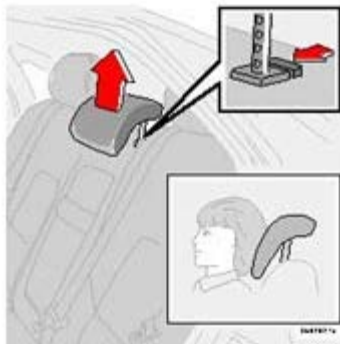

*Adjust head restraint height*


## Center head restraint

The center head restraint can be adjusted according to the passenger's height. The restraint should be carefully adjusted to support the occupant's head.

The head restraint can be **raised** by pulling straight up or **lowered** by pressing the catch at the base of the left head restraint support and pushing down.

### WARNING!

- Please note that the lowest head restraint position is only intended for use when the backrest is to be folded down, or when the seat is not occupied.
- The head restraint is intended to help protect the head/neck in a collision. Ensure that it is properly adjusted for the

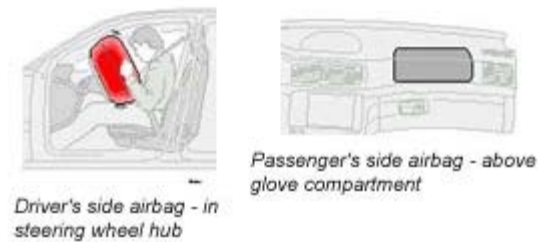


As an enhancement to the three-point seat belt system, your Volvo is equipped with a Supplemental Restraint System (SRS). The Volvo SRS consists of an airbag (2) on both the driver's and passenger's sides and seat belt tensioners in both front door pillars (4). The system is designed to supplement the protection provided by the three-point seat belt system. All three rear seat belts are also equipped with tensioners.

The SRS system is indicated by the "SRS" embossed on the steering wheel pad and above the glove compartment, and by decals on both sun visors and on the front and far right side of the dash.

The airbags are folded and located in the steering wheel hub and above the glove compartment. They are designed to deploy during certain frontal or front-angular collisions, impacts, or decelerations, depending on the crash severity, angle, speed and object impacted. The airbags may also deploy in certain non-frontal collisions where rapid deceleration occurs.

The airbag system includes gas generators (1) surrounded by the airbags (2) and front seat belt tensioners for both of the front seats (4). To deploy the system, the sensor (3) activates the gas generators causing the airbags to be inflated with nitrogen gas. As the movement of the seats' occupants compresses the airbags, some of the gas is expelled at a controlled rate to provide better cushioning. Both seat belt tensioners also deploy, minimizing any seat belt slack.

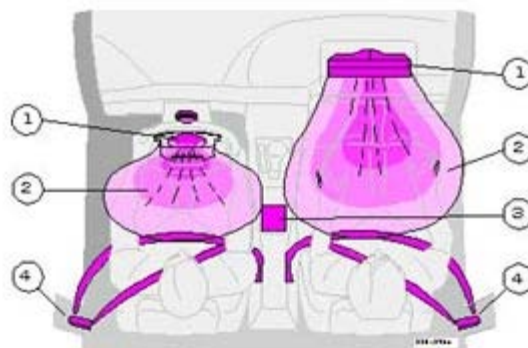

The entire process, including inflation and deflation of the airbags, takes approximately two-tenths of a second.

### **WARNING!**

- As its name implies, SRS is designed to be a **SUPPLEMENT** to - not a replacement for - the three-point belt system. For maximum protection, wear seat belts at all times. Be aware that no system can prevent all possible injuries that may occur in an accident.



- When installing any optional equipment, make sure that the SRS system is not damaged. Do not attempt to service any component of the SRS yourself. Attempting to do so may result in serious personal injury. If a problem arises, take your car to the nearest authorized Volvo retailer for inspection as soon as possible.

pg. 5 Front airbags - SRS



A self-diagnostic system incorporated in the sensor monitors certain safety system components. A check is performed on components such as seat belt locks, SRS, SIPS, and/or the VIC system. If a fault is detected, the warning light will illuminate. The light is included in the warning/indicator light cluster in the instrument panel. Normally, the safety system warning lamp should light up when the ignition key is turned to positions I, II or III and should go out after approximately 7 seconds or when the engine is started. Check that this light is functioning properly every time the vehicle is started.

**WARNING!**

- Never drive an SRS equipped car with your hands on the steering wheel pad / airbag housing.
- No objects, accessory equipment or stickers may be placed on, attached to or installed near the SRS cover in the center of the steering wheel, the SRS cover above the glove compartment or the area affected by airbag deployment.
- If the SRS warning light stays on after the engine has started or if it comes on while you are driving, drive the car to the nearest authorized Volvo retailer for inspection as soon as possible.



Above: Sample label found on all tensioner-equipped seat belts. The label is sewn into the belt near its lower anchorage point



Above: Sample SRS service decal, which can be found on the edge of the left rear door

There is no maintenance to perform on the SRS yourself. The month and year shown on the decal on the door pillar indicate when you should contact your Volvo retailer for specific servicing or replacement of airbags and seatbelt tensioners. This service must be performed by an authorized Volvo retailer.

Should you have any questions about the SRS system, please contact your authorized Volvo retailer or Volvo Customer Support:

In the USA:

Volvo Cars of North America, LLC.  
Customer Care Center  
P.O. Box 914  
Rockleigh, New Jersey 07647-0914  
800-458-1552

In Canada:

Volvo Cars of Canada Ltd.  
National Customer Service  
175 Gordon Baker Road  
North York, Ontario M2H 2N7  
1-800-663-8255



SRS texts on outside of both sun visors



SRS texts on inside of both sun visors



SRS texts on the passenger's dash



SRS decals at far right of instrument panel

**WARNING!**

Do not use child safety seats or child booster cushions/backrests in the front passenger's seat. We also recommend that children under 4 feet 7 inches (140 cm) in height who have outgrown these devices sit in the rear seat with the seat belt fastened.

**NOTE:** Deployment of SRS components occurs only one time during an accident. In a collision where deployment occurs, the airbags and seat belt tensioners activate. Some noise occurs and a small amount of powder is released. The release of the powder may appear as smoke-like matter. This is a normal characteristic and does not indicate fire.

**NOTE: Volvo's dual-threshold airbags** use special sensors that are integrated with the front seat buckles. The point at which the air bag deploys is determined by whether or not the seat belt is being used, as well as the severity of the collision. Collisions can occur where only one of the airbags deploys.

**NOTE: Volvo's dual-stage airbags:** If the impact is less severe, but severe enough to present a clear injury risk, the dual-stage airbags are triggered at just 70% of its total capacity. If the impact is more severe, the dual-stage airbags are triggered with full capacity.

## pg. 7 Front airbags - SRS

### **WARNING!**

- Children must never be allowed in the front passenger seat. Volvo recommends that ALL occupants (adults and children) shorter than 4 feet 7 inches (140 cm) be seated in the back seat of any vehicle with a front passenger-side front airbag. See [page 16](#) for guidelines.
- Occupants in the front passenger's seat must never sit on the edge of the seat, sit leaning toward the instrument panel or otherwise sit out of position. The occupant's back must be as upright as comfort allows and be against the seat back with the seat belt properly fastened.
- Feet must be on the floor, e.g. not on the dash, seat or out of the window.
- No objects or accessory equipment, e.g. dash covers, may be placed on, attached to or installed near the SRS hatch (the area above the glove compartment) or the area affected by airbag deployment (see illustration on [page 4](#)).
- There should be no loose articles, e.g. coffee cups, on the floor, seat or dash area.
- Never try to open the SRS cover on the steering wheel or the passenger side dash. This should only be done by an authorized Volvo service technician.
- Failure to follow these instructions can result in injury to the vehicle occupants.

## pg. 8 Front airbags - SRS

**NOTE:** The information on this page does not pertain to the Side Impact Protection System airbags.

### **When are the airbags deployed?**

The SRS system is designed to deploy during certain frontal or front-angular collisions, impacts, or decelerations, depending on the crash severity, angle, speed and object impacted. The SRS sensor is designed to react to both the impact of the collision and the inertial forces generated by it and to determine if the intensity of the collision is sufficient for the airbags to be deployed.

### **WARNING!**

The SRS is designed to help prevent serious injury. Deployment occurs very quickly and with considerable force. During normal deployment and depending on variables such as seating position, one may experience abrasions, bruises, swellings, or other injuries as a result of airbag(s) deployment.

If the airbags have been deployed, we recommend the following:

- Have the car towed to an authorized Volvo retailer. Never drive with the airbags deployed.
- Have an authorized Volvo retailer replace the SRS system components.
- Use only new, Genuine Volvo Parts when replacing SRS components (airbags, seat belts, tensioners, etc.).

### **When are the airbags NOT deployed?**

Not all frontal collisions activate the SRS system. If the collision involves a nonrigid object (e.g., a snow drift or

bush), or a rigid, fixed object at a low speed, the SRS system will not necessarily deploy. Front airbags do not normally deploy in a side impact collision, in a collision from the rear or in a rollover situation. The amount of damage to the bodywork does not reliably indicate if the airbags should have deployed or not.

### Seat belts - the heart of the Volvo safety system

The heart of the Volvo safety system is the **three-point seat belt** (a Volvo invention)! In order for the SRS system to provide the protection intended, seat belts must be worn at all times by everyone in the car. **The SRS system is a supplement to the seat belts.**

## pg. 9 Front airbags - SRS

### **WARNING!**

If your car has been subjected to flood conditions (e.g. soaked carpeting/standing water on the floor of the vehicle) or if your car has become flood-damaged in any way, do not attempt to start the vehicle or put the key in the ignition before disconnecting the battery (see below). This may cause airbag deployment which could result in personal injury. Have the car towed to an authorized Volvo retailer for repairs.

### **Automatic transmission:**

Before attempting to tow the car, use the following procedure to override the shiftlock system to move the gear selector to the neutral position.

- Switch off the ignition for at least 10 minutes and disconnect the battery
- Wait at least one minute
- Insert the key in the ignition and turn it to position II
- Press firmly on the brake pedal.
- Move the gear selector from (P)ark to the (N)eutral position.

### **WARNING!**

Never drive with the airbags deployed. The fact that they hang out can impair the steering of your car. Other safety systems can also be damaged. The smoke and dust formed when the airbags are deployed can cause skin and eye irritation in the event of prolonged exposure.

## pg. 10 Side impact airbags (SIPS)



*SIPS airbag \**

### **SIPS airbag (front seats only)**


As an enhancement to the structural Side Impact Protection System built into your car, the car is also equipped with Side Impact Protection System (SIPS) airbags. The SIPS airbag system consists of airbag modules built into the sides of both front seat backrests (1), wires (2) and gas generators/sensor units (3).

The SIPS airbag system is designed to help increase occupant protection in the event of certain side impact collisions. The SIPS airbags are designed to deploy only during certain side-impact collisions, depending on the crash severity, angle, speed and point of impact. The airbags are not designed to deploy in all side impact situations.

**NOTE:** SIPS airbag deployment (one airbag) occurs only on the side of the vehicle affected by the impact.

#### **WARNING!**

- The SIPS airbag system is a supplement to the Side Impact Protection System and the three-point seat belt system. It is not designed to deploy during collisions from the front or rear of the car or in rollover situations.
- The use of seat covers on the front seats may impede SIPS airbag deployment.
- No objects, accessory equipment or stickers may be placed on, attached to or installed near, the SIPS airbag system or in the area affected by SIPS airbag deployment (see illustration below). Never try to open or repair any components of the SIPS airbag system. This should only be done by an authorized Volvo service technician.
- In order for the SIPS airbag to provide its best protection, both front seat occupants should sit in an upright position with the seat belt properly fastened.

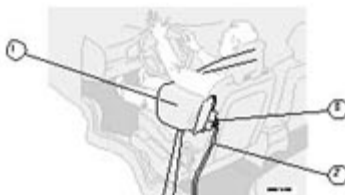


*1 - Airbag, 2 - wire, 3 - gas generator/sensor unit*

#### **WARNING!**

- Never drive with the airbags deployed. The fact that they hang out can impair the steering of your car. Other safety systems can also be damaged. The smoke and dust formed when the airbags are deployed can cause skin and eye irritation in the event of prolonged exposure.
- If your car has been subjected to flood conditions (e.g. soaked carpeting/standing water on the floor of the vehicle) or if your car has become flood-damaged in any way, do not attempt to start the vehicle or put the key in the ignition before disconnecting the battery. This may cause airbag deployment which could result in personal injury. Have the car towed to an authorized Volvo retailer for repairs.

\*A SIPS airbag warning decal is also located at the end of the instrument panel on the driver's side of the car.

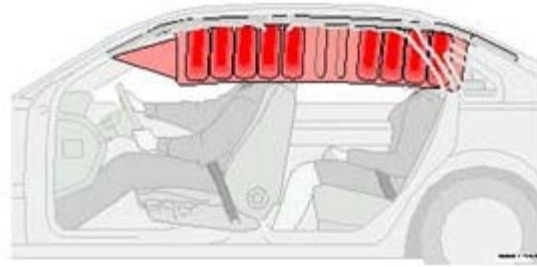


### Volvo Inlatable curtain (VIC)

This system consists of inflatable curtains located along the sides of the roof liners, stretching from the center of both front side windows to the rear edge of the rear side windows. It is designed to help protect the heads of the occupant of the front seat and the occupant of the outboard rear seat position in certain side impact collisions.

**NOTE:** IC system deployment occurs only on the side of the vehicle affected by the impact.

In certain side impacts, **BOTH** the Inflatable Curtain (IC) and the Side Impact Airbag System (SIPS-bag) will deploy, whereas, in some cases, **ONLY** the Inflatable Curtain (IC) will deploy. In cases where **BOTH** the IC and the SIPS-bag deploy, deployment will occur simultaneously.

If the inflatable curtain deploys, it remains inflated for approximately 3 seconds.

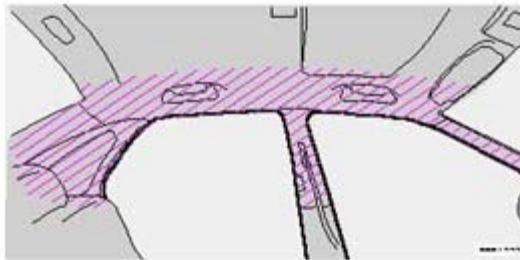

### WARNING!

- The IC system is a supplement to the Side Impact Protection System. It is not designed to deploy during collisions from the front or rear of the car or in rollover situations.
- Never try to open or repair any components of the IC system. This should only be done by an authorized Volvo service technician.
- The inflatable curtains are designed to deploy only during certain side-impact collisions, depending on the crash severity, angle, speed and impact. The inflatable curtains are not designed to deploy in all side impact situations.
- In order for the IC to provide its best protection, both front seat occupants and both outboard rear seat occupants should sit in an upright position with the seat belt properly fastened; adults using the seat belt and children using the proper child restraint system. Only adults should sit in the front seats. Children must never be allowed in the front passenger seat. See [page 16](#) for guidelines. Failure to follow these instructions can result in injury to the vehicle occupants in an accident.





2005  
VOLVO  
S80


Chapter 2 - Instruments, switches and controls

pg. 23 Instruments, switches and controls

<u>Interior</u>	<u>24</u>
<u>Exterior</u>	<u>25</u>
<u>Instruments</u>	<u>26</u>
<u>Instrument panel</u>	<u>27</u>
<u>Indicator and warning lights</u>	<u>28</u>
<u>Text information window</u>	<u>30</u>
<u>Switches in center console</u>	<u>31</u>
<u>Trip computer</u>	<u>32</u>
<u>Cruise control</u>	<u>33</u>
<u>Light switch panel</u>	<u>34</u>
<u>Manually unlocking the fuel filler door</u>	<u>35</u>
<u>Turn signals</u>	<u>36</u>
<u>Windshield wipers/washers</u>	<u>37</u>
<u>Steering wheel adjustment/lock, ignition switch</u>	<u>38</u>
<u>Warning flashers, heated mirrors/rear window, heated front seats</u>	<u>39</u>
<u>Parking brake, auxiliary socket, ashtrays</u>	<u>40</u>
<u>Electrically operated windows</u>	<u>41</u>
<u>Rearview/sideview, vanity mirrors</u>	<u>42</u>
<u>Power moonroof</u>	<u>43</u>
<u>Sun visor, sun blinds</u>	<u>44</u>

pg. 24 Interior



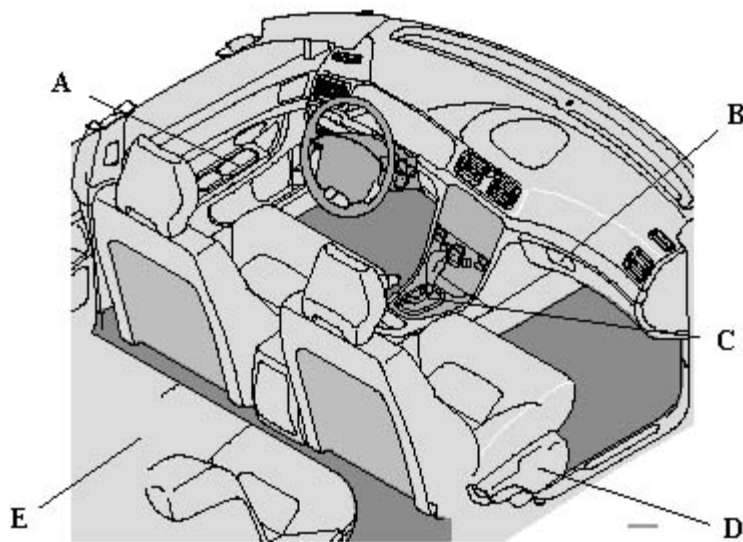

**A**

- Locking and unlocking the car [63/65](#)
- Alarm [67](#)
- Electrically operated windows [41](#)
- Sideview mirror controls [42](#)

**B**

- Glove compartment [57](#)

**C**


- Automatic transmission [76](#)
- Geartronic [80](#)
- Parking brake [40](#)
- Center console switches [31](#)

**D**


- Power seat adjustment [54](#)
- Heated seats (option) [39](#)
- Cleaning upholstery [129](#)

**E**

- Folding rear seat [60](#)
- Panel for long loads [58](#)
- Folding down head restraint [31](#)
- Adjusting center head restraint [3](#)
- Child safety locks [69](#)
- Integrated booster cushion [15](#)

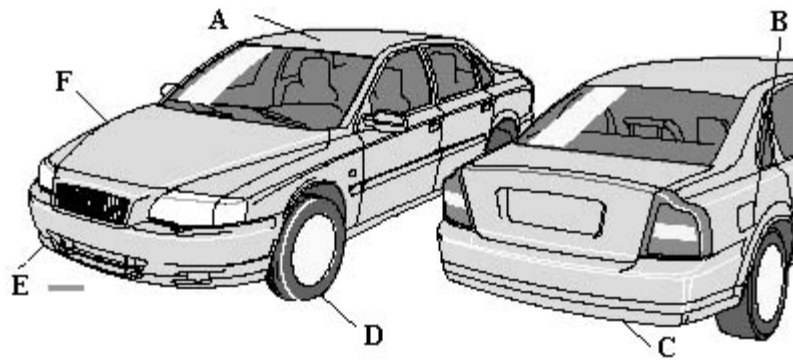

<b>A</b>	
Moonroof (option)	<a href="#">43</a>
<b>B</b>	
Fuel filler door	<a href="#">74</a>
Refuelling	<a href="#">74</a>
Economical driving	<a href="#">84</a>
<b>C</b>	
Replacing a back-up light	<a href="#">121</a>
Replacing a brake light	<a href="#">121</a>
Replacing a tail light	<a href="#">121</a>
Replacing a turn signal	<a href="#">121</a>
Replacing a rear fog light	<a href="#">121</a>
Replacing license plate lights	<a href="#">123</a>
<b>D</b>	
Tires	<a href="#">98</a>
Wheels	<a href="#">98</a>
Brake system	<a href="#">18</a>
Spare tire	<a href="#">109</a>
Changing wheels	<a href="#">110</a>
<b>E</b>	
Replacing a high beam	<a href="#">119</a>
Replacing a low beam	<a href="#">119</a>
Replacing a parking light	<a href="#">120</a>
Replacing a turn signal	<a href="#">120</a>
Replacing a front fog light (option)	<a href="#">122</a>
Replacing a headlight wiper	<a href="#">141</a>
<b>F</b>	
Washing the car	<a href="#">127</a>
Paint touch-up	<a href="#">126</a>

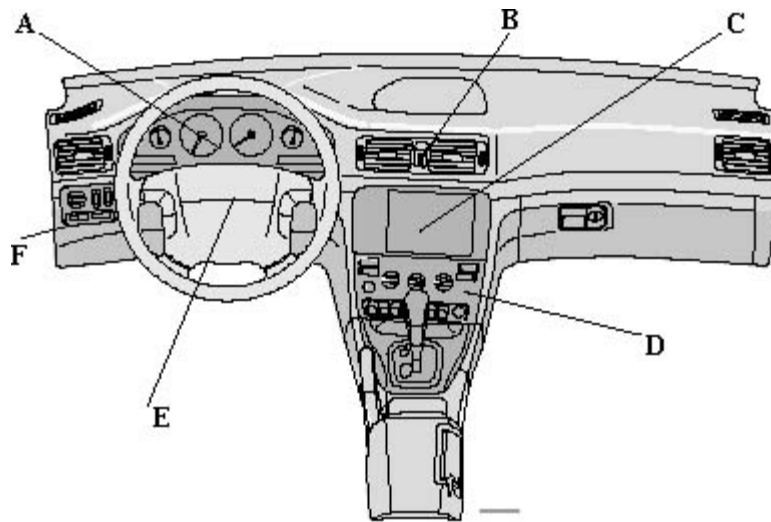

## A

Temperature gauge	<a href="#">27</a>
Speedometer	<a href="#">27</a>
Odometer	<a href="#">27</a>
Trip odometer	<a href="#">27</a>
Warning lights	<a href="#">27</a>
Text window	<a href="#">30</a>
Tachometer	<a href="#">27</a>
Clock	<a href="#">27</a>
Ambient temperature sensor	<a href="#">27</a>
Fuel gauge	<a href="#">27</a>

## B

Hazard warning flashers	<a href="#">39</a>
-------------------------	--------------------

## C

Audio system	<a href="#">151</a>
--------------	---------------------

## D

Electronic climate control	<a href="#">47</a>
Heated seats (option)	<a href="#">39</a>
Heated rear window/rearview mirrors	<a href="#">39</a>

## E

Steering wheel adjustment	<a href="#">38</a>
Airbag	<a href="#">4</a>
Cruise control	<a href="#">33</a>
Windshield wipers/washer	<a href="#">37</a>
Turn signal lever	<a href="#">36</a>
Trip computer	<a href="#">32</a>
Audio system controls	<a href="#">151</a>


## F

High/low beam headlights	<a href="#">34</a>
Parking lights	<a href="#">34</a>
Fog lights	<a href="#">34</a>

Instrument panel lighting [34](#)

Button to unlock fuel filler door [34](#)

pg. 27 Instrument panel

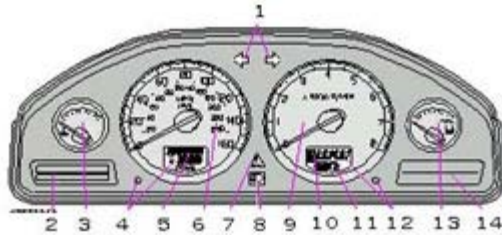

### 1 Turn signals

### 2 Text window

### 3 Temperature gauge

The pointer should be approximately midway on the gauge when driving.

**Do not drive the car if the warning light is on.** The text window will provide you with additional information.

If the engine temperature remains high, check coolant level - see [page 132](#).

### 4 Trip odometer/reset button

The trip odometer is used for measuring shorter distances. The last digit indicates 1/10 mile/kilometer. Press the button quickly to toggle between trip odometers 1 and 2. Hold in the button for more than 2 seconds to reset.

### 5 Odometer

### 6 Speedometer

### 7 General warning light (see [page 28](#)).

### 8 High beam indicator light

### 9 Tachometer

Indicates engine speed in thousands of rpm. Do not drive for long with the needle in the red section. The engine has an built-in function preventing too high an engine speed. When this function operates, you may discern some pulsation, which is normal.

### 10 Gear and driving mode indicator

The currently selected driving mode is displayed here. If you use the Geartronic function on the automatic transmission, the currently selected gear will be displayed.

### 11 Ambient temperature indicator

This sensor indicates the air temperature outside your car. A "snowflake" symbol in the text window is displayed when the temperature is in the range of 23 - 36° F (-5 - +2° C).

**Please note that this symbol does not indicate a fault with your car.**

At low speeds or when the car is not moving, the temperature readings may be slightly higher than the actual ambient temperature.

### 12 Clock/reset button

Turn the button to adjust the clock.



Canadian models are equipped with this warning light: 



### **Oil pressure warning light**

**If the light comes on while driving, stop the car and then stop the engine immediately and check the engine oil level.** See [page 137](#). If the light stays on after restart, have the car towed to the nearest authorized Volvo retailer. After hard driving, the light may come on occasionally when the engine is idling. This is normal, provided it goes off when the engine speed is increased.



### **Generator warning light**

If the light comes on while the engine is running, have the charging system checked.

\* Rear fog light, if used, and trailer turn signal, if towing a trailer, will go on while driving.

pg. 29 Indicator and warning lights



### **Rear fog light**


This light indicates that the rear fog light is on.

## **CHECK ENGINE**

### **Malfunction indicator lamp**

**On-Board Diagnostic II (OBDII):** As you drive, a computer called "OBDII" monitors your car's engine, transmission, electrical and emission systems. The CHECK ENGINE light will light up if the computer senses a condition that potentially may need correcting. When this happens, please have your car checked by a Volvo retailer as soon as possible.

A CHECK ENGINE light may have many causes. Sometimes, you may not notice a change in your car's behavior. Even so, an uncorrected condition could hurt fuel economy, emission cleanliness, and driveability. Extended driving without correcting the cause could even damage other components in your car.

Canadian models are equipped with this warning light: 

**NOTE:** If the fuel filler cap is not closed tightly or if the engine is running when the car is refueled, the Malfunction Indicator Lamp may indicate a fault. However, your vehicle's performance will not be affected. Use only Volvo original or approved fuel filler caps.



### **Anti-lock Brake System ABS**

If the warning light comes on, there is a malfunction of the ABS system (the standard braking system will however function). The vehicle should be driven to a Volvo retailer for inspection. See [page 19](#) for additional information.



### **Stability Traction Control (STC) system (option), or Dynamic Stability and Traction Control (DSTC) system (option)**

This indicator light will flash with STC or DSTC is actively working to stabilize the car. See [pages 20-21](#) for more detailed information.



### **Turn signal indicator - trailer (certain models)**

If you are towing a trailer, this light will flash simultaneously with the turn signals on the trailer. If the light does not flash when signaling, neither the trailer's turn signals nor the car's turn signals are functioning.



### **Seat belt reminder**

This symbol lights up to indicate that the driver has not fastened his/her seat belt.



### **Tire pressure warning light**

See [page 102](#) for more information on this function.



[Contents](#) | [Top of Page](#)

2005  
VOLVO  
S80

Chapter 3 - Climate control system

pg. 45 Climate control system


Ventilation 46

Electronic Climate Control (ECC) 47

Climate control system - general information 50

Interior Air Quality system (option) 51

pg. 46 Ventilation

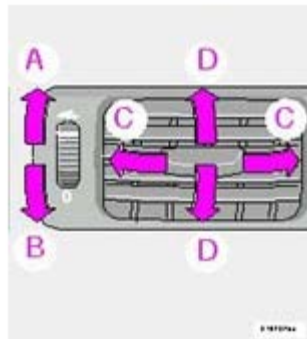

*Air vents in dash*

**Air vents (dash)**

A Open

B Closed


C Horizontal air flow

D Vertical air flow

Direct the outer air vents toward the side windows to demist.


In cold weather, close the air vents in the center of the dash to direct as much air as possible toward the windows.



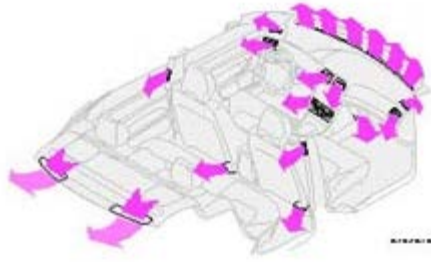

### **Air flow**

The air that is drawn into the passenger compartment is distributed from 14 ventilation points.

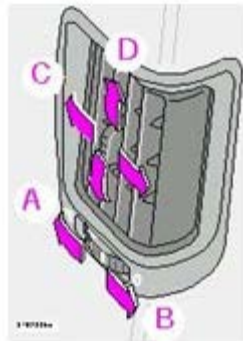


*Air vents in door pillars*

### **Air vents in door pillars**

- A Open
- B Closed
- C Horizontal air flow
- D Vertical air flow

Direct the air vents toward the rear side windows to demist.

Direct the air vents toward the rear seat for the best heating/cooling effect.

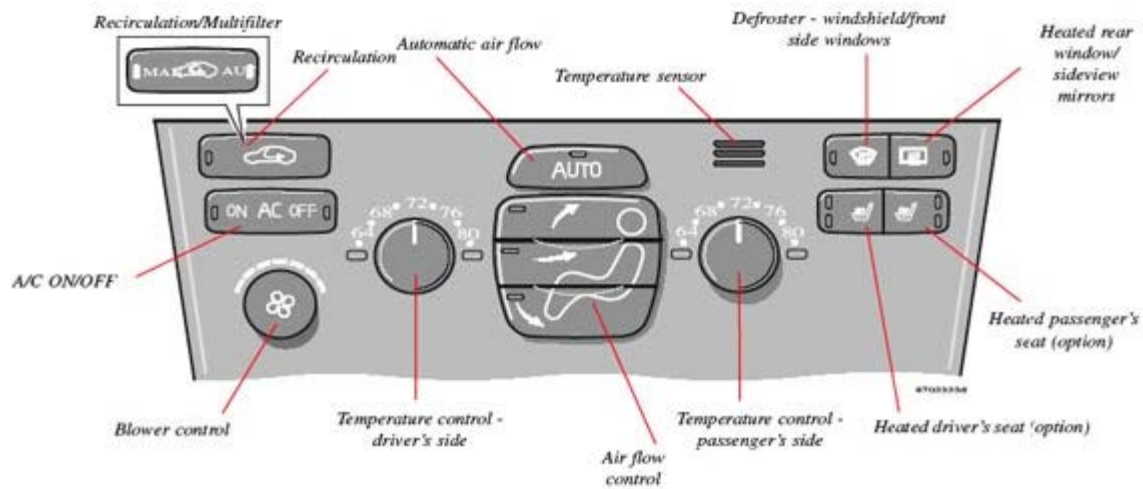

pg. 48 Electronic Climate Control (ECC)



**AUTO**

This function automatically regulates the Electronic Climate Control system so that the selected temperatures are maintained. The blower, heating, air distribution (air flow) and air conditioning are controlled. If you prefer to manually set any of these functions, the remaining functions will still be controlled automatically. Pressing the AUTO button overrides any settings that were previously made manually.



**Temperature**

These controls are used to individually set the temperature for both sides of the passenger compartment. Please note that the compartment will not be heated or cooled faster by setting the temperature higher or lower than necessary. Set the control to the temperature you prefer.



**Defroster**

This function demists/de-ices the windshield and front side windows. The LED in the switch will light up to indicate that the defrost function is engaged. Blower speed increases automatically and the air in the passenger compartment is dehumidified. Recirculation will not function while defrost is engaged.



**Heated rear window/sideview mirrors**

This function demists/de-ices the rear window and sideview mirrors. The LED in the switch will light up to indicate

that the heating function is engaged. See [page 39](#) for additional information on this function.

## CAUTION:

Never use ice scrapers made of metal as they can easily scratch the mirror surface.

pg. 49 Electronic Climate Control (ECC) - manual settings



### Recirculation (see also [page 51](#))

Press this switch to engage the recirculation function (air in the passenger compartment recirculates - no fresh air enters the compartment). The LED in the switch will light up to indicate that the function is engaged.

- Use this function if the outside air is contaminated with exhaust gases, smoke, etc or to heat/cool the car quickly.
- Recirculation should not be used for more than 15 minutes. *If your windows begin to fog or mist, make sure that the recirculation function is switched off.*
- Selecting Defroster automatically switches recirculation off.
- **Timer mode activation:** (Cars with Interior Air Quality system have no timer mode) Press and hold the recirculation button for at least 3 seconds to activate a recirculation timer mode. The amber LED in the recirculation button will flash 5 times to show that the timer mode is being activated. In the time mode, each time the recirculation button is pressed, the climate control system will recirculate the air in the passenger compartment for 5 to 12 minutes, depending on the outside air and then revert back to fresh air.
- **Timer mode deactivation:** Press and hold the recirculation button for at least 3 seconds. The amber LED in the recirculation button will illuminate steadily for 5 seconds to show a return to "normal" mode.
- In normal mode, when the recirculation button is pressed, the climate control system will recirculate the air in the passenger compartment until the recirculation button is pressed again.
- **Timer mode memory:** If the car is turned off while timer mode is active, timer mode will still be active when the car is restarted.



### Heated front seats (option)

Please see [page 39](#) for more information on this function.



Air flow to windows  
Air from panel vents  
Air through floor vents

### Air flow

Press **AUTO** to automatically regulate air flow or press any combination of the controls shown in the illustration to manually adjust air flow. An LED in the switch will light up if an air flow control has been pressed.



### Air conditioning ON/OFF

Press the switch to turn the air conditioning on or off. The "ON" or "OFF" LED will light up to indicate if the system is switched on or off. Other functions will still be regulated automatically (if the **AUTO** switch is on).

- The air conditioning functions only at temperatures above 32° F (0° C).
- While the **Defroster** function is selected, the air conditioning is temporarily activated to dehumidify the air, even if you have manually switched the air conditioning off. This will only function if the blower is *not* switched off.



### **Blower control**

Turn the control clockwise to increase or counterclockwise to decrease the blower speed. Pressing the AUTO switch will automatically regulate blower speed and override manual adjustment.

**NOTE:** Turning the blower control counterclockwise as far as possible (an orange LED next to the control will light up) will turn both the blower and the air conditioning off.

pg. 50 Climate control system - general information

### **Condensation on the inside of the windows**

Keeping the insides of the windows clean will help reduce the amount of condensation that forms on the windows. Use a commercial window cleaning agent to clean the windows.

### **Ice and snow**

Always keep the air intake grille at the base of the windshield free of snow.

### **Cabin air filter**

Replace the cabin air filter with a new one at the recommended intervals. Please refer to your Warranty and Service Records Information booklet, or consult your Volvo retailer for these intervals. The filter should be replaced more often when driving under dirty and dusty conditions. The filter cannot be cleaned and therefore should always be replaced with a new one.

### **Sensors**

The sunlight sensor on the dashboard and passenger compartment temperature sensor in the ECC control panel should not be covered in any way as this could cause incorrect information to be sent to the ECC system.

### **Parking the car in warm weather**

If your car has been parked in the sun in warm weather, opening the windows and sun roof (option) for several minutes before driving will help release the warm air from the passenger compartment. When the engine is running, close the windows and sun roof and use the recirculation function for several minutes to enable the air conditioning to cool the compartment as quickly as possible.

### **Windows and optional moonroof**

The ECC system will function best if the windows and optional moonroof are closed. If you drive with the moonroof open, we recommend that you manually adjust the temperature and blower control (the LED in the AUTO switch should be off).

### **Acceleration**

The air conditioning is momentarily disengaged during full-throttle acceleration.

### **ECC maintenance**

All maintenance on the climate control systems should be carried out by an authorized Volvo service technician only.

### **Refrigerant**

Volvo cares about the environment. The air conditioning system in your car contains a CFC-free refrigerant - R134a (HFC134a). This substance will not deplete the ozone layer. The system contains 2.2 lbs (1000 g) R134a and uses PAG oil.

### Passenger compartment blower

Approximately 50 minutes after the ignition is turned off, the blower may come on automatically, and run for five minutes, to remove condensation in the A/C evaporator.


pg. 51 Electronic Climate Control (ECC) - with Interior Air Quality system (option)

### Interior Air Quality system (option)

Some cars are equipped with a multifilter and air quality sensor. The filter separates gases and particles, thereby reducing the amounts of odors and contaminants entering the car. The air quality sensor detects increased levels of contaminants in the outside air. When the air quality sensor detects contaminated outside air, the air intake closes and the air inside the passenger compartment is recirculated, i.e. no outside air enters the car. The filter also cleans recirculated passenger compartment air. When the Air quality sensor is activated, the LED AUT comes on in the recirculation button




### Operation:

Press  to activate the Air quality sensor (normal setting).



Or select one of three functions by pressing 

1. Press  the LED *AUT* comes on.

The Air quality sensor is now activated.

2. Press  no LED is lighted.

Recirculation not activated.

3. Press  the LED *MAN* comes on. Recirculation is now activated. You can switch between these three functions by repeatedly pressing 

### Keep the following in mind:

- Make it a rule to have the air quality sensor activated at all times.
- Recirculation is limited in cold climates to avoid misting up.
- If misting occurs, you should deactivate the Air quality sensor.
- If the windows mist up, you can also use the windshield and side window defroster functions. See [page 48](#).
- The filter should be changed at the intervals listed in the Warranty and Service Records Information booklet. However, if the car is used in a severely contaminated environment, it may be necessary to change the filter more frequently.

pg. 52

This page intentionally left blank.



[Contents](#) | [Top of Page](#)

2005  
VOLVO  
S80

Chapter 4 - Interior

pg. 53 Interior

[Front seats](#) 54

[Coat hanger](#) 55

[Interior lighting](#) 56

[Storage compartments](#) 57

[Storage compartments in center console, Long loads](#) 58

[Spare tire, Cargo net in trunk](#) 59

[Folding rear seat backrests](#) 60

pg. 54 Front seats



1. Power seat control panel,
2. Lumbar support: turn for softer or firmer support

**Electrically operated seats**

**Operation**

**Driver's seat:**

The seat can be adjusted if the ignition key is in position I, II or if the engine is running.


It can also be adjusted as follows **with the ignition off**:

- Within 10 minutes after the driver's door has been unlocked from the outside and has been opened and remains open.
- Within 40 seconds, if the driver's door has just been closed.
- Within 40 seconds, if the driver's door has not been opened after the ignition has been switched off.

### **Passenger's seat:**

The seat can only be adjusted if the ignition key is in position I, II or if the engine is running.

### **Electrically operated driver's seat controls**

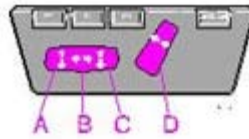

- A Front edge of seat (raise/lower)
- B Forward - rearward
- C Rear edge of seat (raise/lower)
- D Backrest tilt

### **WARNING!**

- Because the driver's seat can be adjusted with the ignition off, children should never be left unattended in the car.
- Movement of the seat can be STOPPED at any time by pressing any button on the power seat control panel.
- Do not adjust the seat while driving. The seat should be adjusted so that the brake pedal can be depressed fully. In addition, position the seat as far rearward as comfort and control allow.
- The seat rails on the floor must not be obstructed in any way when the seat is in motion.



### **Programming the driver's seat memory (option)\***

Three different seating and door mirror positions can be stored in the driver seat's memory.

The following example explains how button 1 can be programmed.

Buttons 2 and 3 can be programmed in the same way.

#### **To program (store) a seat position in button 1:**

1. Move the seat to the desired position using the seat adjustment controls (see the previous page).
2. Press and hold down the MEM (memory) button.
3. With the MEM button depressed, press button 1 briefly to store the seat's current position.



## To move the seat to the position that it was in when button 1 was programmed:

Press and hold down button 1 until the seat stops moving.

As a safety precaution, the seat will stop automatically if the button is released before the seat has reached the preset position.

\* This option is only available on the driver's seat.

pg. 55 Front seats, Coat hanger

## Remote keyless entry system and the driver's seat

The remote control transmitter also controls the position of the electrically operated driver's seat in the following way:

1. Adjust the seat to your preferences.
2. When you leave your vehicle, lock it using the remote control.

The position of the seat is now stored in the remote control.

## Automatic seat adjustment

To move the seat to the position in which you left it:

1. Unlock the driver's door with the same remote control (the one used to lock the doors).
2. Open the driver's door within 2 minutes.

The driver's seat will automatically move to the position in which you left it.

## NOTE:

- The seat will move to this position even if someone else has moved it to a different seating position and locked the car with a different remote control.
- This feature will work in the same way with all of the remote control transmitters (up to 3) that you use with your vehicle.
- This feature will not function if you lock your vehicle with the key.



*Folding front seat backrest*

## Folding front seat backrest


The passenger seat backrest can be folded down to the horizontal position for carrying long loads. To fold down the backrest:

- Move the seat as far rearward as possible
- Adjust the backrest tilt to the most upright position
- Lift the catches on the lower rear side of the backrest

- Without releasing the catches, push the backrest forward
- Move the seat as far forward as possible so that the head restraint slides under the glove compartment.

**WARNING!**

Cover sharp edges on the load to help prevent injury to occupants. Secure the load to help prevent shifting during sudden stops.

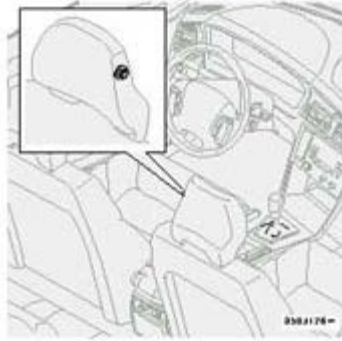

*Coat hanger*

**Coat hanger**

Use the coat hanger for light jackets, etc.

pg. 56 Interior lighting

*Courtesy light*



*Front reading lights*

**Courtesy light**

The courtesy light can be turned on or off by pressing the button. The light also has a timer function which turns the light (in dark conditions) on for 30 *seconds* if:

- You unlock the car from the outside with the key or remote control.
- You switch off the ignition (turn the key to position 0).

The courtesy light stays on for 10 *minutes* if one of the doors is left open after the car is unlocked.

The courtesy light switches off if:

- The engine is started.
- The car is locked from the outside with the key or remote control.

The interior courtesy light can be switched on or off at any time by pressing the center button in the panel above the rearview mirror. When switched on with the engine off, the light will stay on for 10 minutes. When switched on with the engine running, the light will stay on indefinitely. The light may be switched off at any time by pressing the center button a second time.

The courtesy light timer periods can be changed. Consult your Volvo retailer.

### **Overriding the Interior and Trunk Courtesy Lights**

Normally if a car door is left open with the engine turned off, the interior courtesy light will stay on for 10 minutes. Normally, if the trunk is left open with the engine turned off, the trunk courtesy lights will stay on for 10 minutes. If a car door is left open or the interior courtesy lights are turned on while the engine is left running, the interior courtesy lights will stay on indefinitely. Likewise, if the trunk is left open while the engine is running, the trunk courtesy light will stay on indefinitely.


At times, you may wish to be assured that the courtesy lights will stay off regardless of door or trunk lid position. To switch off the interior and trunk courtesy lights indefinitely, press and hold the center button in the panel above the rearview mirror for 3 seconds. The courtesy lights will go off and remain off until the center button is pressed again.



*Rear reading lights*


### **Reading lights - front/rear**

The reading lights can be switched on or off by pressing the respective buttons. These lights switch off automatically after 10 minutes if the engine is not running. If the engine is running, the lights stay on indefinitely. The lights can be switched off at any time by pressing the button.

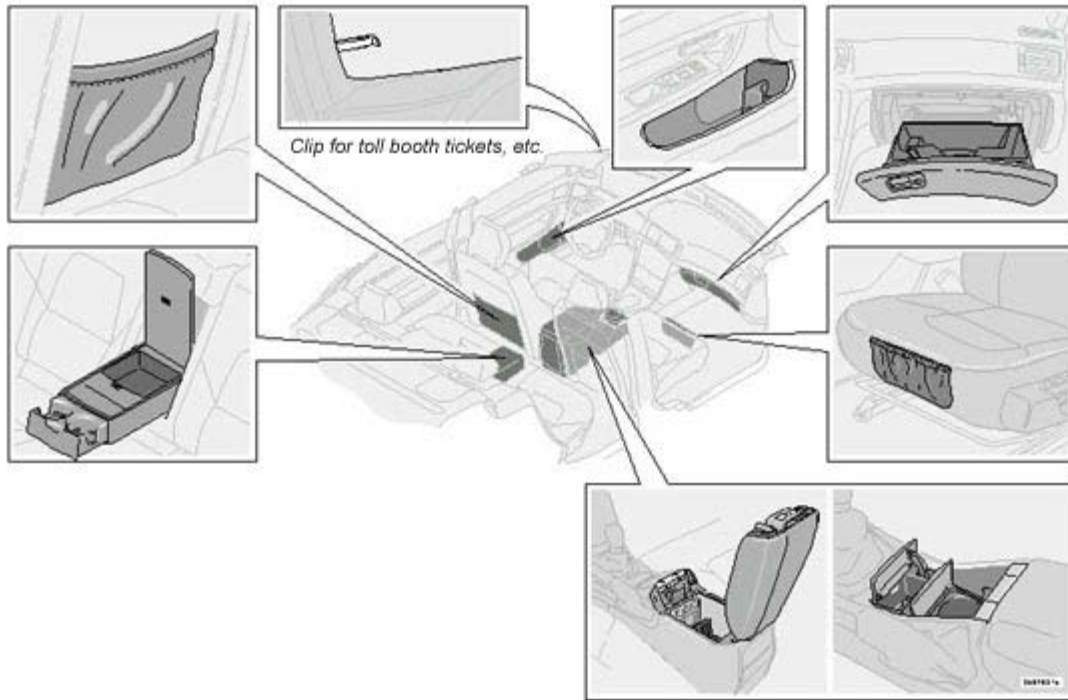

**WARNING!**  
 Packages on the rear window shelf can obscure vision and may become dangerous projectiles in the event of a sudden stop or an accident.  
 Anchor any heavy objects to help prevent them from moving during sudden stops.


pg. 58 Storage compartment in center console, Long loads

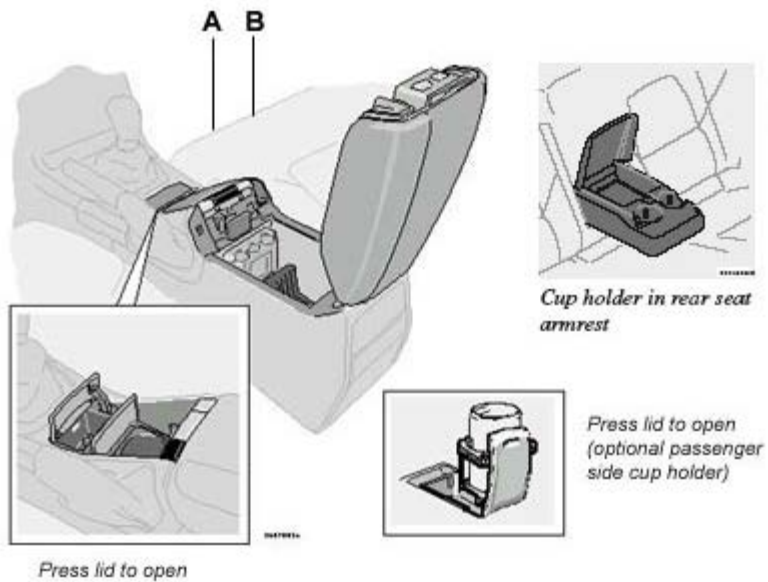

**Storage compartment in center console/cup holders**

- Press button A to pop open the cup holder.

- Press button B to open the storage space in the center console for cassettes, accessory coin holder, etc.

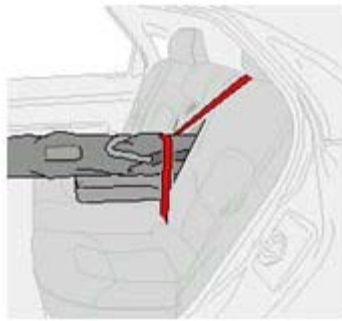


*Secure long loads with the seat belt*

### **Carry long loads**

The center backrest cushion folds forward, allowing you to transport long, light cargo such as skis in the trunk of your car. To lower the backrest:

- Pull the right release control handle in the trunk to release the backrest (see [page 58](#)).
  - From the rear seat, fold down the right section of the backrest slightly\*.
  - Release the flap by pushing the catch (located on the rear side of the backrest) upward and pulling the flap forward.
  - Return the backrest to the upright position.
- \* If your car is equipped with the optional integrated child booster cushion, this cushion must be folded *down* before you fold down the backrest (see [page 15](#)).

pg. 59 Spare tire, Cargo net in trunk

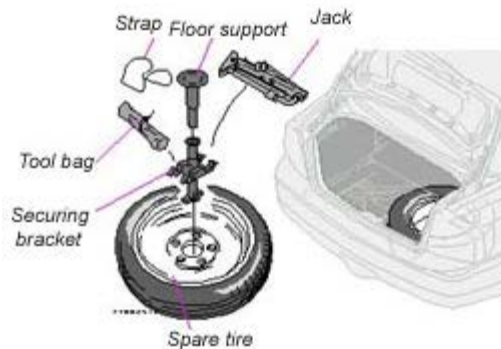

### **Spare tire**

The spare tire, jack and tool bag are located under the floor of the trunk. To access the spare tire:

- Raise the rear edge of the trunk floor and fold it back toward the rear seat backrest.
- Lift out the trunk floor support (certain models) from the spare tire securing bracket.
- Release the strap to lift out the jack and tool bag.
- Unscrew the securing bracket and lift out the spare tire.

· To return the spare tire to the trunk, follow the reverse procedure.

**WARNING!**

Make sure that the spare tire, jack and tool bag are properly secured with the securing bracket and strap to help keep these components in place in the event of a sudden stop.

**NOTE:** See [page 110](#) for information on how the jack should be used.

**Cargo net in the trunk**

The cargo net in the trunk can be used to secure light objects. Pull the net out and slide the runner in the handle down into one of the two slots provided at the rear edge of the trunk. Use the release tab to release tension on the net while it is being placed around an object. Be sure the net is then pulled taut around the object.

The net can be retracted when not in use.




*Cargo net in trunk*

**NOTE:** If you have purchased the accessory plastic floor cover for the trunk, it may be necessary to cut notches in the rear edge of this cover so that the runner on the cargo net can be securely pressed into the slots provided.

**WARNING!**

Never use this net to secure sharp or heavy objects. In such cases, tie down the object using the cargo eyelets provided. Both rear seat backrests should be secured in the upright position when the cargo net is in use.

pg. 60 Folding rear seat backrests

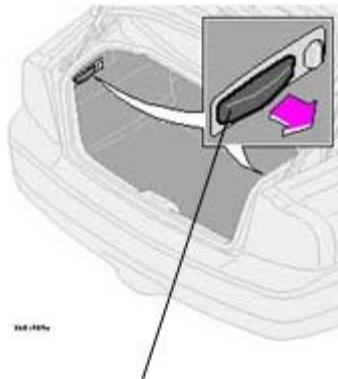

## *Backrest controls (on opposite sides of trunk)*

### **Folding rear seat backrest**

The rear seat backrest is split into two sections. Each section can be folded independently to allow you to transport long objects.

To fold down the backrest(s):

- Pull the release control handle(s) in the trunk to release the backrest(s) (see illustration above). If the outboard rear head restraints are folded down, they should be returned to the upright position before folding the backrest down. It may be necessary to manually adjust the center head restraint.
- Fold the backrest down.

#### **WARNING!**


All S80 cars feature 60/40 split fold-down rear seats. This function is performed by handles inside the trunk, and also provides a means for children and adults to enter the passenger compartment in the event they become locked inside the trunk.

Adults are advised to familiarize themselves with the operation and location of the release handles.

To fold down the rear seats from inside the trunk, pull the release control handles located on either side of the trunk.

#### **WARNING!**

- Keep vehicle doors and the luggage compartment locked and keep keys out of a child's reach. Unsupervised children could lock themselves in an open trunk and risk injury. Children should be taught not to play in vehicles.
- On hot days, the temperature in the trunk or vehicle interior can rise very quickly. Exposure of people to these high temperatures for even a short period of time can cause heat-related injury or death. Small children are particularly at risk.

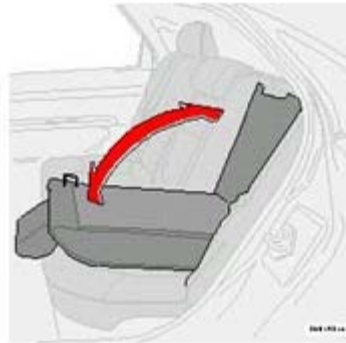

#### **WARNING!**

- When the backrest is returned to the upright position, check that it is properly locked in place. Return the head restraints to the upright position.
- Long loads should always be securely anchored to help avoid injury in the event of a sudden stop.
- Always turn the engine off and apply the parking brake when loading/unloading the vehicle.
- Place the transmission in the P (PARK) position to help prevent inadvertent movement of the gear selector.



[Contents](#) | [Top of Page](#)



# 2005 VOLVO S80

## Chapter 5 - Keys, Locks, Alarm

pg. 61 Keys, Locks, Alarm

[Keys, Exterior courtesy lights, Locking and unlocking the car](#) 62

[Remote keyless entry system](#) 63

[Locking and unlocking the car](#) 65

[Alarm](#) 67

[Child safety locks - rear doors](#) 69

pg. 62 Keys, Exterior courtesy lights, Locking and unlocking the car



### Keys

Two types of keys are provided with your car; master keys and a service key. The master key, the remote control, and the central locking button may all be used to lock and unlock all of your car's locks.

The service key will operate only the driver's door and the ignition switch. It is intended to help deter unwanted entry into the glove compartment and trunk.

**Turn the key once** to unlock the driver's door only.

**Turn the key again (within 10 seconds)** to unlock all doors and the trunk.

One turn with the key towards lock in the drivers door locks all doors, trunk.

Use the switch on the front door armrests to lock/unlock the car from the inside.

### **WARNING!**

If the doors are locked while driving, this may hinder rapid access to the occupants of the car in the event of an accident. (Also see information on "Child safety locks").

**Note:** To help prevent accidentally locking the keys in the car, the central locking system is designed to unlock the doors immediately if the key is left in the ignition switch, the car is locked using the lock button on the door and the door is then closed. **A sound from the lock will be audible at this time.**

*Please note that this function will not unlock the doors if the engine is running.*

### **Immobilizer (start inhibitor)**

Each of the keys supplied with your car contains a coded transmitter. The code in the key is transmitted to an antenna in the ignition switch where it is compared to the code stored in the start inhibitor module. The car will start only with a properly coded key.

If you misplace a key, take the other keys to an authorized Volvo retailer for reprogramming as an antitheft measure.

---

This device complies with part 15 of the FCC rules. Operation is subject to the following condition: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

---

### **Exterior Courtesy lights**

#### **Home Safe System**


When you leave your car at night, you can make use of the courtesy lighting function:

- Remove the key from the ignition switch.
- Pull the turn signal lever towards the steering wheel (as when using the headlight flasher function).
- Exit the car and lock the doors.

The headlights, parking lights, license plate lights and the lights in the sideview mirrors will now come on and remain on for 30, 60 or 90 seconds (the time interval is at your discretion and can be changed by an authorized Volvo retailer).

### **Approach lighting**

When approaching the car at night, press the yellow button in the central locking remote control (see illustration on [page 63](#)). This lights up the interior courtesy light, parking lights, license plate lights and the lights in the sideview mirrors.

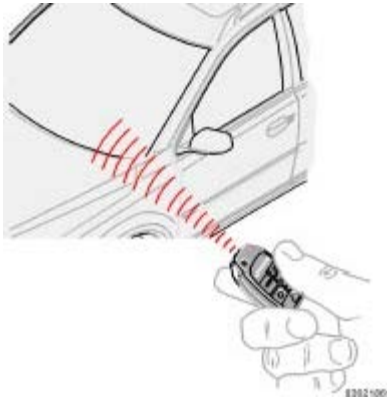


### **Remote keyless entry system**

Your car is equipped with two coded remote control transmitters with integrated ignition keys called Key Integrated Remote (KIR). These transmitters use a radio frequency that will enable you to lock/unlock all doors and the trunk from a distance of 10-15 feet (3-5 meters).

The transmitters will also activate or allow "keyless" entry into the passenger compartment or the trunk. They will also activate or deactivate the vehicle's alarm system(s).

The car can also be locked/unlocked with the key.

If one of the transmitters is misplaced, contact your nearest authorized Volvo retailer for replacement.

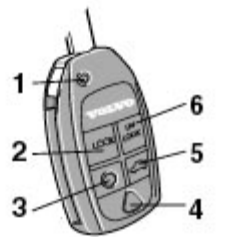

*Buttons in remote control*

*1 - Fold key in/out, 2 - Lock, 3 - Approach lighting,  
4 - "Panic" function, 5 - Open trunk, 6- Unlock*

### **Using the remote control**

**Button 1:** Press to extend the key. This button must also be pressed when the key is folded back into the slot in the side of the remote control unit.

**Button 2 (Lock):** Press once to lock all doors, and the trunk.

**Button 3 (Approach lighting):** Press this button when approaching the car at night to light up the interior courtesy light, parking lights, license plate lights and the lights in the sideview mirrors.

**Button 4 (Panic):** See [page 67](#) for more information on this function.

**Button 5 (Open trunk):** Press this button twice within 3 seconds to pop open the trunk (without unlocking the other doors).

**Button 6 (Unlock):** Press this button once to unlock the driver's door only. Wait for at least 1 second and press the button again (within 10 seconds) to unlock all doors, and the trunk.

**NOTE:**

- If the doors are unlocked with the remote, the locks will automatically reengage (re-lock) and the alarm will rearm after 2 minutes unless a door has been opened.
- The lock/unlock and alarm features can also be utilized by using the keys.

FCC ID:LQNP2T-APU

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Canadian 2306104388

Model 504 2927 by Donnelly

Operation is subject to the following conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Canadian 2306104388A

Model 509 977 by Connaught Electronics

Operation is subject to the following conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

pg. 64 Remote keyless entry system

### **WARNING!**

Never use the transmitter to lock the doors from inside the car.

Doing so would **ACTIVATE**:


- the break-in alarm, which would sound if one of the doors were opened.
- the interior motion and inclination alarm sensors, if equipped.

Doing so would **DEACTIVATE**:

- the moonroof and interior courtesy light controls.
- the central locking buttons on the front door armrests, although the interior door handles would still function to allow occupants to leave the car.

Disabled features would remain disabled until the remote were used again to unlock the car.

In addition, locking an occupied vehicle would hinder rapid access to the occupants in an accident or emergency.

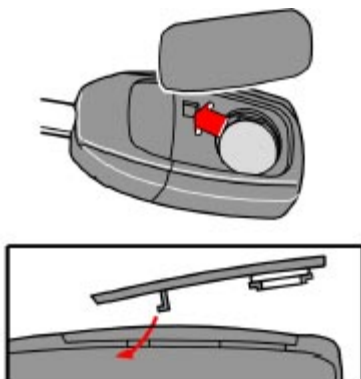

**Remote keyless entry system - replacing batteries**

If the range of the transmitter is noticeably reduced, this indicates that the battery is weak and should be replaced.

### To replace the battery

- Remove the cover by carefully prying up its rear edge with a small screwdriver
- Replace the battery with a new 3-volt, CR 2032 battery. The battery should be inserted with the plus side upward. Avoid touching the contact surfaces of the battery with your fingers.
- Press the cover back into place. Ensure that the rubber seal seats correctly to help prevent moisture from entering the unit.

**NOTE:** The old battery should be disposed of properly at a recycling center or at your Volvo retailer.

pg. 65 Locking and unlocking the car



### Unlocking the trunk with the master key

Normally, the trunk should be locked and unlocked via the central locking system using the remote control or by using the key in the driver's door lock. The master key should be used only if it is not possible to unlock the trunk via the central locking system.

**NOTE: Unlocking the trunk in this manner will cause the alarm to sound. See [page 67](#) for information on turning off the alarm.** Unlocking the trunk this way will not unlock the other doors.

If, for any reason, it should be necessary to unlock the trunk with the master key:

- Press the key into the upper or lower edge of the cover over the lock in the trunk lid.
- Move the key upward or downward to remove the cover.
- Insert the master key in the lock and unlock the trunk.



*Opening the trunk from the inside*

### Opening the trunk from the inside - (U.S. models only)

The S80 is equipped with a florescent handle on the inside of the trunk lid, which can be used in an emergency situation to open the trunk from the inside.

*Pull the handle down to release the trunk lid.*

**After use, the handle must be pushed back into its original position before the trunk can be closed.**

**NOTE:** This handle is not intended to be used to anchor the trunk lid when long loads are being transported.

### WARNING!

- Keep vehicle doors and trunk locked and keep keys out of a child's reach. Unsupervised children could lock themselves in an open trunk and risk injury. Children should be taught not to play in vehicles.
- On hot days, the temperature in the trunk or vehicle interior can rise very quickly. Exposure of people to these high temperatures for even a short period of time can cause heat-related injury or death. Small children are particularly at risk.

pg. 66 Locking and unlocking the car



*Central locking buttons*

### Central locking buttons

These buttons (located on the both front door armrests) can be used to lock/unlock all doors and the trunk and set the alarm.

The lock buttons on all doors can be used in the same way.



*Trunk lock button\**

## **Valet security locking**

The security locking feature of your car allow you to prevent unwanted access to your trunk and glove compartment, while still allowing a parking attendant to unlock, start, and relock the rest of your car. To prevent unwanted access to the trunk and glove compartment do the following:

- Give your service key to the parking attendant.
- Insert your master key into the glove compartment. Turn it 90 degrees clockwise and remove the key. The glove compartment cannot be unlocked with the service key.
- Insert your master key into the ignition and turn it to position II.
- Press the trunk lock button in the center console. An LED and a message in the text window will show that the trunk lock has be activated.
- Turn off the ignition and remove the master key.
- With the trunk lock activated, neither the service key nor the remote control will open the trunk.

The function can be turned off (deactivated) by turning the ignition key to position II and pressing the trunk lock button again (the LED in the button will go out and VALET LOCK OFF" will be displayed in the text window).

\* The position of this button may vary, depending on the specifications of your car.

pg. 67 Alarm

## **Alarm**

The alarm is automatically armed whenever you lock your car.

When armed, the alarm continuously monitors a number of points on the car. The following conditions will set off the alarm:

- The hood is forced opened.
- The trunk is forced opened.
- A door is forced opened.
- The ignition switch is tampered with.
- If there is movement in the passenger compartment (if the car is equipped with the optional movement sensor).
- The car is lifted or towed (if the car is equipped with the optional inclination sensor).
- The battery is disconnected (while the alarm is set).

### **Arming the alarm**

Press the LOCK button on the remote control, lock the car using the key in the driver's door or press the central lock button on one of the front doors with the door open. One long flash of the turn signals will confirm that the alarm is armed.

### **Disarming the alarm**

Press the UNLOCK button on the remote control or unlock the doors with the key.

### **Turning off (stopping) the alarm**

If the alarm is sounding, it can be stopped by pressing the UNLOCK button on the remote control or by unlocking the driver's door with the key.

### **Visual alarm signal**

The visual alarm signal is given by flashing all turn signals and turning on the interior lighting for approximately 5 minutes.

### **Audible alarm signal**

An audible alarm signal is given by a battery powered siren. One alarm cycle lasts for 25 seconds.

## "Panic" button

In an emergency situation, this feature can be used to attract attention.

Activate the "panic" button by pressing the red button on the remote control (see illustration on [page 63](#)) for at least 3 seconds or by pressing this button twice within 3 seconds. The turn signals will flash, and the car's horn will sound. **The function can be turned off by pressing any of the buttons on the remote control or will stop automatically after 25 seconds. When a button is pressed, there is a 5 second delay before the panic alarm is deactivated.**

**NOTE:** This button will **NOT** unlock the car.

pg. 68 Alarm



*The position of this button may vary, depending on the specifications of your car.*

## Temporarily turning off the inclination and movement alarm sensor(s) - accessory

This button will only be found in cars equipped with the accessory inclination and/or movement sensors.

---

FCC ID: MAYDA5823

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

---

Canadian IC: 4405A-DA5823

Movement sensor DA5823 by Dynex

Operation is subject to the following conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

---

In certain situations it may be desirable to turn off the optional inclination and movement alarm sensors if, for example, you drive your car onto a ferry where the rocking of the boat could trigger the alarm or if a pet is left in the car with the doors locked.

## To temporarily turn off the inclination and movement alarm sensor from the alarm system:

From the time the ignition key is turned from the Drive position (position II) until you lock the car, you can press the button in the center console. The LED in the switch will light up and a message will be displayed in the text window to indicate that the sensors are disconnected.

The car can then be locked in the usual way to set the alarm.

**NOTE:**



- This function will not turn off the vehicle's standard alarm.
- The optional sensors are automatically reconnected to the alarm system the next time the car is unlocked and then locked again.

### LED alarm status signals


The status of the alarm system is indicated by the red LED at the top of the dash:

- LED off - the alarm is not armed
- LED flashes once per second - the alarm is armed
- LED flashes rapidly before the ignition is switched on - the alarm has been triggered
- **Fault in the alarm system:** If a fault has been detected in the alarm system, a message will be displayed in the text window. Contact a Volvo retailer.

### Automatic re-lock/re-arm function

If the car is unlocked with the remote, the car will re-lock and the alarm will re-arm after 2 minutes unless a door or the trunk has been opened.

pg. 69 Child safety locks - rear doors

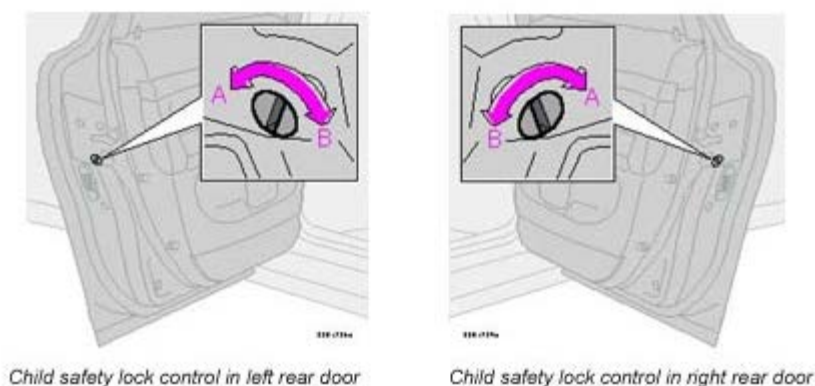

### Child safety locks - rear doors

The controls are located on the rear door jambs. Use the ignition key or a screwdriver to adjust these controls.

**A** The door cannot be opened from the inside. Normal operation from the outside.

**B** The door lock functions normally.

### WARNING!

Remember, in the event of an accident, the rear seat passengers cannot open the doors from the inside with the buttons in position A.

pg. 70

This page intentionally left blank.



2005  
VOLVO  
S80

Chapter 6 - Starting and driving

pg. 71 Starting and driving

<a href="#">Fuel requirements</a>	72
<a href="#">Refueling</a>	74
<a href="#">Starting the engine</a>	75
<a href="#">Automatic transmission</a>	76
<a href="#">Four-C active chassis system</a>	82
<a href="#">Front/rear park assist</a>	83
<a href="#">Driving economy</a>	84
<a href="#">Points to remember</a>	85
<a href="#">Roof racks/load carriers</a>	86
<a href="#">Emergency towing</a>	87
<a href="#">Vehicle towing information</a>	88
<a href="#">Towing a trailer</a>	89
<a href="#">Detachable trailer hitch</a>	90
<a href="#">Jump starting</a>	92
<a href="#">Winter driving</a>	93
<a href="#">Long distance trips</a>	94
<a href="#">Three-way catalytic converter</a>	95
<a href="#">All Wheel Drive (AWD)</a>	96

pg. 72 Fuel requirements

## Fuel requirements

## **Octane rating**

Volvo engines are designed for optimum performance on unleaded premium gasoline with an octane rating AKI of 91, or above. AKI (ANTI KNOCK INDEX) is an average of the Research Octane Number, RON, and the Motor Octane Number, MON. (RON + MON/2).

The minimum octane requirement is AKI 87 (RON 91).

## **Deposit control gasoline (detergent additives)**

Volvo recommends the use of gasoline containing deposit control additives. These additives have shown to be effective in keeping injectors and intake valves clean. Consistent use of deposit control gasolines will help ensure good driveability and fuel economy. If you are not sure whether the gasoline contains deposit control additives, check with the service station operator.

## **Unleaded fuel**

Each Volvo has a three-way catalytic converter and must use only unleaded gasoline. U.S. and Canadian regulations require that pumps delivering unleaded gasoline be labelled "UNLEADED". Only these pumps have nozzles which fit your car's filler inlet. It is unlawful to dispense leaded fuel into a vehicle labelled "unleaded gasoline only". Leaded gasoline damages the three-way catalytic converter and the heated oxygen sensor system. Repeated use of leaded gasoline will lessen the effectiveness of the emission control system and could result in loss of emission warranty coverage. State and local vehicle inspection programs will make detection of misfueling easier, possibly resulting in emission test failure for misfueled vehicles.

**NOTE:** Some U.S. and Canadian gasolines contain an octane enhancing additive called methyl-cyclopentadienyl manganese tricarbonyl (MMT). If such fuels are used, your Emission Control System performance may be affected, and the Check Engine light (malfunction indicator lamp) located on your instrument panel may light. If this occurs, please return your vehicle to an authorized Volvo retailer for service.

## **Gasoline containing alcohol and ethers**

### **"Oxygenated fuels"**

Some fuel suppliers sell gasoline containing "oxygenates" which are usually alcohols or ethers. In some areas, state or local laws require that the service pump be marked indicating use of alcohols or ethers. However, there are areas in which the pumps are unmarked. If you are not sure whether there is alcohol or ethers in the gasoline you buy, check with the service station operator. To meet seasonal air quality standards, some areas require the use of "oxygenated" fuel.

Volvo allows the use of the following "oxygenated" fuels; however, the octane ratings listed on this page must still be met.

**Alcohol - Ethanol:** Fuels containing up to 10% ethanol by volume may be used. Ethanol may also be referred to as Ethyl alcohol, or "Gasohol".

**Ethers - MTBE:** Fuels containing up to 15% MTBE may be used.

---

## **CAUTION!**

Do not use gasolines containing methanol (methyl alcohol, wood alcohol). This practice can result in vehicle performance deterioration and can damage critical parts in the fuel system. Such damage may not be covered under the New Vehicle Limited Warranty.

pg. 73 Fuel requirements

## **Carbon Monoxide - Important Warning**

Carbon monoxide is a poisonous, colorless, and odorless gas. It is present in all exhaust gases. If you ever smell exhaust fumes inside the vehicle, make sure the passenger compartment is ventilated, and immediately return the vehicle to your retailer for correction.

## **Fuel Formulations**

Do not use gasoline that contains lead as a knock inhibitor, and do not use lead additives. Besides damaging the exhaust emission control systems on your car, lead has been strongly linked to certain forms of cancer. Many fuels contain benzene as a solvent. Unburned benzene has been strongly linked to certain forms of cancer. If you live in an area where you must fill your own gas tank, take precautions. These may include:

- standing upwind away from the filler nozzle while refueling
- refueling only at gas stations with vapor recovery systems that fully seal the mouth of the filler neck during refueling
- wear neoprene gloves while handling a fuel filler nozzle.

### Use of Additives

With the exception of gas line antifreeze during winter months, do not add solvents, thickeners, or other store-bought additives to your car's fuel, cooling, or lubricating systems. Overuse may damage your engine, and some of these additives contain organically volatile chemicals. Do not needlessly expose yourself to these chemicals.

## pg. 74 Refueling



### Refueling

The fuel tank holds approximately 21.1 US gal. (80 liters) on T6 models, or 18 US gal. (68 liters) on the S80 All Wheel Drive and the S80 2.5T Front Wheel Drive with sufficient volume left over to accommodate possible expansion of the fuel in hot weather. Be aware that the "usable" tank capacity will be somewhat less than the specified maximum. When the fuel level is low, such factors as ambient temperature, the fuel's "Reid vapor pressure" characteristics, and terrain can affect the fuel pump's ability to supply the engine with an adequate supply of fuel. Therefore, it is advisable to refuel as soon as possible when the needle nears the red zone, or when the fuel warning light comes on.

### Fuel filler door

Press the button on the light switch panel (see illustration on [page 34](#)) when the car is at a standstill to unlock the fuel filler door. Please note that the fuel filler door will remain unlocked until the car begins to move forward. An audible click will be heard when the fuel filler door relocks.

If you intend to leave your car while it is being refueled, this feature enables you to lock the doors/trunk while leaving the fuel filler door unlocked.

You can also keep the car locked if you remain inside it during refueling. The central locking button does not lock the fuel filler door. Be sure the fuel filler door is not obstructed and is completely closed after refueling.

### Open the fuel filler cap slowly during hot weather conditions.

**NOTE:** During a transitional period, a small number of service stations may still have fuel nozzles that are not compatible with the fuel filler neck on cars equipped with the evaporative control system. Please refer to [page 131](#) for additional information.

### **WARNING!**

Never carry a cell phone that is **switched on** while refueling your vehicle. If the phone rings, this may cause a spark that could ignite gasoline fumes, resulting in fire and injury.

## CAUTION:

- Do not refuel with the engine running \*. Turn the ignition off or to position I. If the ignition is on, an incorrect reading could occur in the fuel gauge.
- After refueling, close the fuel filler cap by turning it clockwise until it *clicks* into place \*.
- Allow for fuel expansion by not overfilling the tank. Overfilling could also cause damage to the emission control systems.
- Avoid spilling gasoline during refueling. In addition to causing damage to the environment, gasolines containing alcohol can cause damage to painted surfaces, which may not be covered under the New Vehicle Limited Warranty.
- Do not use gasolines containing methanol (methyl alcohol, wood alcohol). This practice can result in vehicle performance deterioration and can damage critical parts in the fuel system. Such damage may not be covered under the New Vehicle Limited Warranty.

*\* If the fuel filler cap is not closed tightly or if the engine is running when the car is refueled, the Check Engine Light (malfunction indicator lamp) may indicate a fault. However, your vehicle's performance will not be affected. Use only Volvo original or approved fuel filler caps.*

pg. 75 Starting the engine

## Starting the engine

1. Fasten the seat belt.

### WARNING!

Before starting, check that the seat, steering wheel and mirrors are adjusted properly. Make sure the brake pedal can be depressed completely. Adjust the seat if necessary. See [page 54](#).

2. Apply the parking brake, if not already set. The gear selector is locked in the **(P)**ark position (**SHIFTLOCK**).

3. **Without touching the accelerator pedal**, turn the ignition key\* to the starting position. Allow the starter to operate for up to 5 seconds (turbo: 10 seconds). Release the key as soon as the engine starts. If the engine fails to start, repeat this step.

**NOTE:** On certain models, when the car is started, idle speed may be noticeably higher than normal for a short period, depending on the temperature of the engine.

This has been done to help bring components in the emission control system to their normal operating temperature as quickly as possible, which enables them to function normally.

For cold starts at altitudes above 6000 ft (1800 meters), depress the accelerator pedal halfway and turn the key to the starting position. Release the pedal slowly when the engine starts.

4. To release the gear selector from the **(P)**ark position, the engine must be running (or the ignition key must be in position II) and the brake pedal must be depressed. While keeping firm pressure on the brake pedal, release the parking brake.

5. Select the desired gear. The gear engages after a very slight delay which is especially noticeable when selecting R.

### NOTE:

- Your car is equipped with a **KEYLOCK** system. When the engine is switched off, the gear selector must be in the **(P)**ark position before the key can be removed from the ignition switch.
- When starting in cold weather, the transmission may shift up at slightly higher engine speeds than normal until the automatic transmission fluid reaches normal operating temperature.

### CAUTION:

- The engine should be idling when you move the gear selector. Never accelerate until after you feel the transmission engage! Accelerating immediately after selecting a gear will cause harsh engagement and premature transmission wear.
- Selecting P or N when idling at a standstill for prolonged periods of time will help prevent overheating of the automatic transmission fluid.
- Do not race a cold engine immediately after starting. Oil flow may not reach some lubrication points fast enough to prevent engine damage.

### WARNING!

- Always place the gear selector in Park and apply the parking brake before leaving the vehicle. Never leave the car unattended with the engine running.
- Always open the garage doors fully before starting the engine inside a garage to ensure adequate ventilation. The exhaust gases contain carbon monoxide, which is invisible and odorless but very poisonous.

\* Your car is equipped with an electronic start inhibitor (immobilizer). The keys you received with your car are specially coded. The code in the key is transmitted to an antenna in the ignition switch where it is compared to the code stored in the start inhibitor module. The car can only be started if a properly coded key is used. If two of the keys to your car are close together, e.g., on the same key ring, when you try to start the car, this could cause interference in the immobilizer system and result in the car not starting. If this should occur, remove one of the keys from the key ring before trying to start the car again.

pg. 76 Automatic transmission - four speed



### P (Park)

Use this position when starting the engine or parking the car.

**Never use P while the car is in motion.**

The parking brake should also be set whenever the car is parked.

**The gear selector is mechanically locked in the P position (SHIFTLOCK).** To release the gear selector from this position, the engine must be running (or the ignition key must be in position II) and the brake pedal must be depressed.

### WARNING!

Never leave the car unattended when the engine is running. If, by mistake, the gear selector is moved from P, the car may start moving.

### R (Reverse)

Never engage R while the car is moving.

### **N (Neutral)**

Neutral - no gear engaged. Use the parking brake.

### **D (Drive)**

D is the normal driving position and should be used as often as possible to help improve fuel economy. The car should not be moving when shifting from R to the D position.

### **3 (Intermediate gear)**

The transmission will shift automatically between gears 3, 2 or 1 from this position. **The transmission cannot shift up to (D)rive from third gear.**

### **2 (Intermediate gear)**

The transmission will shift automatically between gears 2 and 1 from this position. **The transmission cannot shift up to third gear from second gear.**

### **1 (Low gear)**

If you select this gear at speeds above 30 mph (50 km/h), the transmission will first shift to second gear and then to first gear at lower speeds.

**NOTE:** The intermediate and low gears can be used for:

- Driving in a mountainous area
- Towing a trailer
- Increasing the braking effect of the engine.
- The transmission has a built-in limiter designed to help prevent excessive engine speeds (high rpm) when gears 3, 2 or 1 are selected.


### **Kickdown**

Automatic shift to a lower gear (kickdown) is achieved by depressing the accelerator pedal fully and briskly. An upshift will occur when approaching the top speed for a particular gear or by releasing the accelerator pedal slightly. Kickdown can be used for maximum acceleration or when passing at highway speeds.

### **Automatic transmission - adaptive system**

The automatic transmission is controlled by an adaptive system that constantly monitors the way in which the transmission functions. It senses and adapts each gear shift for optimal performance.


pg. 77 Automatic transmission - four speed

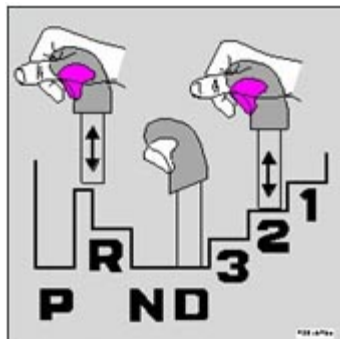

### **Automatic transmission - shift gate positions**

The gear selector can be moved freely between N and D.

Depressing the button on the front of the gear selector knob enables you to move the gear selector to positions P, R, N, D, 3, 2 and 1.

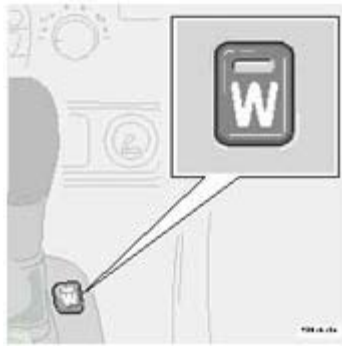


### **W Winter/Wet driving mode - enhanced vehicle traction**

- Mode W will only function if the gear selector is in the (D)rive position.
- Press the button at the base of the gear selector to engage/disengage this driving mode (see illustration).
- An LED in the button will light up to indicate that **W** is engaged and this will also be displayed in the instrument panel (see [page 27](#)).
- This mode may be selected for starting/moving off on slippery roads.

### **Cold starts**

When driving before the engine has reached its normal operating temperature, the transmission will shift up at slightly higher engine speeds to heat the three-way catalytic converter as quickly as possible.

pg. 78 Automatic transmission - five speed

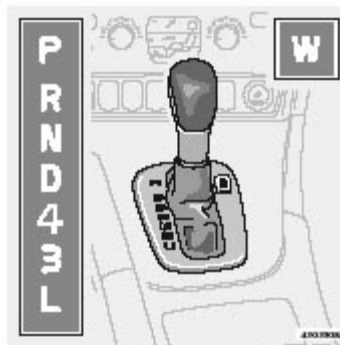

### **P (Park)**

Use this position when starting the engine or parking the car.

**Never use P while the car is in motion.**

The parking brake should also be set whenever the car is parked.

**The gear selector is mechanically locked in the P position (SHIFTLOCK).** To release the gear selector from this position, the engine must be running (or the ignition key must be in position II) and the brake pedal must be depressed.

### **WARNING!**

Never leave the car unattended when the engine is running. If, by mistake, the gear selector is moved from P, the car may start moving.



## **R (Reverse)**

Never engage R while the car is moving.

## **N (Neutral)**

Neutral - no gear engaged. Use the parking brake.

## **D (Drive)**

D is the normal driving position and should be used as often as possible to help improve fuel economy. The car should not be moving when shifting from R to the D position.

## **4 (Intermediate gear)**

The transmission will shift automatically between gears 4, 3, 2 or 1 from this position. **The transmission cannot shift up to (D)rive from fourth gear.**

## **3 (Intermediate gear)**

The transmission will shift automatically between gears 3, 2 and 1 from this position. **The transmission cannot shift up to fourth gear or (D)rive from third gear.**

## **L (Low gears)**

The transmission is locked in gears 1 and 2 when the selector is in this position.


## **NOTE:**

- Gears 4, 3, or L can be used if you are driving in a mountainous area, towing a trailer or to increase engine braking effect.
- The transmission has a built-in limiter designed to help prevent excessive engine speeds (high rpm) when gears 4, 3, or L are selected.

## **Automatic transmission - adaptive system**

The automatic transmission is controlled by an adaptive system that constantly monitors the way in which the transmission functions. It senses and adapts each gear shift for optimal performance.


pg. 79 Automatic transmission - five speed

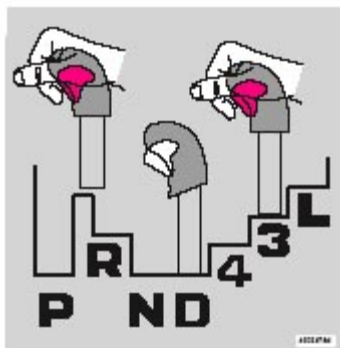

## **Automatic transmission - shift gate positions**

The gear selector can be moved freely between N and D.

Depressing the button on the front of the gear selector knob enables you to move the gear selector to positions P, R, N, D, 4, 3 and L.

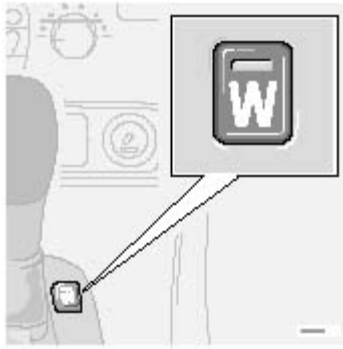

### **W Winter/Wet driving mode - enhanced vehicle traction**

- Mode W will only function if the gear selector is in the (D)rive position.
- Press the button at the base of the gear selector to engage/disengage this driving mode (see illustration).
- An LED in the button will light up to indicate that **W** is engaged and this will also be displayed in the instrument panel (see [page 27](#)).
- This mode may be selected for starting/moving off on slippery roads.

### **Kickdown**

Automatic shift to a lower gear (kickdown) is achieved by depressing the accelerator pedal fully and briskly. An upshift will occur when approaching the top speed for a particular gear or by releasing the accelerator pedal slightly. Kickdown can be used for maximum acceleration or when passing at highway speeds.

### **Cold starts**

When driving before the engine has reached its normal operating temperature, the transmission will shift up at slightly higher engine speeds to heat the three-way catalytic converter as quickly as possible.

pg. 80 Automatic transmission (Geartronic)



### **P (Park)**

Use this position when starting the engine or parking the car.

**Never use P while the car is in motion.**

The parking brake should also be set whenever the car is parked.

**The gear selector is mechanically locked in the P position (SHIFTLOCK).** To release the gear selector from this position, the engine must be running (or the ignition key must be in position II) and the brake pedal must be depressed.

### **WARNING!**

Never leave the car unattended when the engine is running. If, by mistake, the gear selector is moved from P, the car

may start moving.

### **R (Reverse)**

Never engage R while the car is moving forward.

### **N (Neutral)**


Neutral - no gear engaged. Use the parking brake.

### **D (Drive)**

D is the normal driving position and should be used as often as possible to help improve fuel economy. The car should not be moving when shifting from R to the D position.

### **Kickdown**

Automatic shift to a lower gear (kickdown) is achieved by depressing the accelerator pedal fully and briskly. An upshift will occur when approaching the top speed for a particular gear or by releasing the accelerator pedal slightly. Kickdown can be used for maximum acceleration or when passing at highway speeds. **Kickdown does not function when the transmission is in the manual shift (geartronic) mode (see next page).**

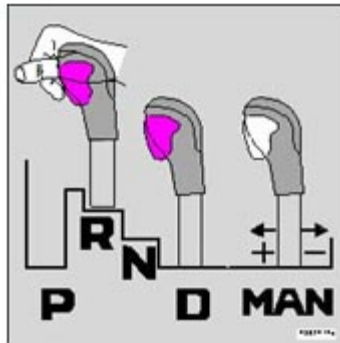

*Shift gate positions*

### **Automatic transmission - adaptive system**

The automatic transmission is controlled by an adaptive control system that constantly monitors the way in which the transmission functions. It senses and adapts each gear shift for optimal performance. The system also monitors your particular driving style and adapts gear shifting accordingly.

### **Automatic transmission - shift gate positions**

You can move the gear selector freely between the (MAN)ual and (D)rive positions while driving. Depress the button on the front side of the gear selector knob to move between the R, N, D and P positions. **Please see the following page for information on using the Geartronic manual shift mode.**

pg. 81 Automatic transmission (Geartronic)

### **Manual shifting - Geartronic**

You can move the gear selector freely between the (MAN)ual and (D)rive positions while driving. Gears 2, 3, and 4 have a "lock-up" function which reduces engine speed and helps save fuel. The currently selected gear will be displayed in the instrument panel (see [page 27](#)).

- To access the (MAN)ual shifting position from (D)rive, pull the gear selector back slightly from D and move it to the left to MAN.
- To return to the (D)rive position from MAN, move the gear selector to the right and push it forward to the (D)rive position.


### **While driving**

If you select the (MAN)ual position while driving, the gear that was being used in the (D)rive position will also initially be selected in (MAN)ual position.

- Move the gear selector forward (toward "+") to shift to a higher gear or rearward (toward "-") to shift to a lower gear.
- If you hold the gear selector toward "-", the transmission will downshift one gear, and will utilize the braking power of the engine. If the current speed is too high for using a lower gear, the downshift will not occur until the speed has decreased enough to allow the lower gear to be used.
- If you slow down to a very low speed, the transmission will automatically shift down.
- When starting in the (MAN)ual position, 3rd gear is the highest gear that may be selected.

**NOTE:** Kickdown (see previous page) **does not function** when the transmission is in the manual shift (geartronic) mode. The gear selector must be in D (Drive) position.

\* Models with a 5-cylinder turbo engine have a 5-speed transmission. Fifth gear also has the lock-up function.

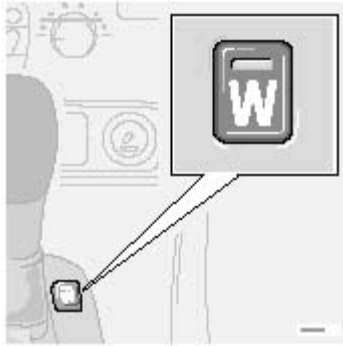

### **W Winter/Wet driving mode - enhanced vehicle traction**

- Mode W will only function if the gear selector is in the (D)rive position.
- Press the button at the base of the gear selector to engage/disengage this driving mode. The position of this button may vary slightly on certain models.
- An LED in the button will light up to indicate that **W** is engaged and this will also be displayed in the instrument panel (see [page 27](#)).
- This mode may be selected for starting/moving off on slippery roads.

pg. 82 Four-C active chassis system

### **Four-C (option)**

Your car can be optionally equipped with the Four-C (Continuously Controlled Chassis Concept) system.

This system is based on a number of sensors that continuously monitor factors such as the car's lateral and vertical movements, speed, and movements of the wheels. The sensors receive data up to 500 times per second, which is used to provide extremely fast and precise adjustment of each shock absorber. The system adjusts the stiffness of the shock absorbers approximately 100 times per second.

The button in the center console (see the illustration on [page 31](#)) can be used **at any time** to switch between the two driving modes: Comfort or Sport.

The system then adjusts the stiffness of the shock absorbers accordingly, for example when the type of road changes, or if the driver wishes to change driving style. This adjustment takes place instantaneously.

### **Comfort**

The Comfort mode chassis setting offers the greatest amount of shock absorption and the softest ride. This mode is recommended for long-distance driving, or when driving in slippery conditions.

If Comfort mode was selected when the engine was switched off, this mode will be active when the engine is restarted.


### **Sport**

An indicator lamp in the button will come on when this mode has been activated.

In Sport mode, shock absorption is stiffer to reduce the car's body sway during cornering and to provide more immediate steering response.

If this setting was selected when the engine was switched off, Sport mode will be active when the engine is restarted.

pg. 83 Front/rear park assist (option/accessory)

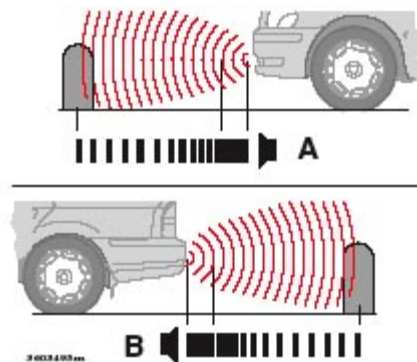

*A - front (accessory as available), B - rear (option)*

### **Front/rear park assist**

The park assist system(s) are designed to assist you when driving into parking spaces, garages, etc. They utilize ultrasound sensors located in the bumpers to measure the distance to a vehicle or other object, or a person who may be close to the front or rear of the vehicle.

#### **When is park assist active?**

**Front:** the system is active from the time the engine is started until the car exceeds a speed of approximately 10 mph (15 km/h).

**Rear:** when the engine is running and reverse gear is selected.

#### **NOTE:**

- If the vehicle is equipped with front and rear park assist, both systems will either be activated or deactivated together. They cannot be used separately.
- The indicator light in the button (see the illustration on [page 31](#)) will light up to indicate that park assist system(s) are activated.

#### **When park assist is actively working:**

1. The audio system's volume will be reduced.
2. An intermittent signal will be audible from the speakers to indicate that you are approaching a person, object, parked vehicle, etc.

The signals begin when the distance between the bumper and the object is:

**Rear:** approximately 5 feet (1.5 meters)

**Front:** approximately 2.5 ft (0.8 meters)

3. At a distance of approximately 1 foot (30 cm), the signal will become constant.

#### **Deactivating the system(s)**

- Press the Park assist button on the center console (see [page 31](#)) to temporarily deactivate the system(s).
- The indicator light in the button will go out when the system(s) have been deactivated.
- If the vehicle is equipped with front and rear park assist, both systems will be deactivated by pressing the button.

#### **NOTE:**

It may be necessary to deactivate one or both of the park assist systems in certain cases.

- **Rear park assist:** towing a trailer, carrying bicycles in a rear-mounted carrier, etc, could trigger the rear park assist system's sensors.
- **Front park assist:** it may not be possible to combine auxiliary headlights and front park assist since these lights could trigger the system's sensors.

#### **Faults in the system**

If a fault should occur in the system, the LED in the button will be switched off and a message will be displayed in the text window.

#### **Cleaning the sensors**

For the system to function properly, the sensors in the front and/or rear bumpers should be kept clean. They can be cleaned with car washing detergent and a sponge.

#### **WARNING!**

These systems are designed to be a supplementary aid when parking the vehicle. They are not, however, intended to replace the driver's attention and judgement.

pg. 84 Driving economy

#### **Economical driving conserves natural resources**

Better driving economy may be obtained by thinking ahead, avoiding rapid starts and stops and adjusting the speed of your vehicle to immediate traffic conditions. Observe the following rules:

- Bring the engine to normal operating temperature as soon as possible by driving with a light foot on the accelerator pedal for the first few minutes of operation. A cold engine uses more fuel and is subject to increased wear.
- Whenever possible, avoid using the car for driving short distances. This does not allow the engine to reach normal operating temperature.
- Drive carefully and avoid rapid acceleration and hard braking.
- Do not exceed posted speed limits.
- Avoid carrying unnecessary items (extra load) in the car.
- Maintain correct tire pressure. Check tire pressure regularly (when tires are cold).
- Remove snow tires when threat of snow or ice has ended.
- Note that roof racks, ski racks, etc., increase air resistance and also fuel consumption.
- Avoid using automatic transmission kickdown feature unless necessary.
- Avoid using the air conditioning when it is not required. When engaged, the A/C compressor places an additional load on the engine. However, at higher driving speeds, fuel consumption will be lower with the air conditioning on and the windows closed than with the air conditioning off and the windows open.
- Using the onboard trip computer's fuel consumption modes can help you learn how to drive more economically.

Other factors that decrease gas mileage are:

- Dirty air cleaner
- Dirty engine oil and clogged oil filter
- Dragging brakes
- Incorrect front end alignment

Some of the above mentioned items and others are checked at the standard Maintenance Service intervals.

**NOTE:** Vehicles equipped with automatic transmissions should use (D)rive as often as possible and avoid using "kickdown" to help improve fuel economy.

### **Cooling system**

The risk for engine overheating is greatest, especially in hot weather, when:

- Towing a trailer up steep inclines for prolonged periods at wide open throttle and low engine rpm.
- Stopping the engine suddenly after high speed driving (so-called "after-boiling" can occur).
- To avoid overheating, the following rules should be followed:

Do not drive for prolonged periods at engine speeds above 4500 rpm if you are towing a trailer in hilly terrain.

- Reduce speed when towing a trailer up long, steep inclines. The risk of overheating can be reduced by switching off the air conditioning system for a short time.
- Do not let the engine idle unnecessarily for prolonged periods.
- Do not mount auxiliary lamps in front of the grill.

When the risk of overheating is imminent, or in the event of overheating (the temperature gauge goes repeatedly into, or stays continually in, the red section), the following precautions should be taken:

- Switch off the air conditioning system.
- Pull off the road, away from traffic, stop the car and put the gear selector into Park. **Do not stop the engine!**
- Switch the heater to full (maximum) position. Increase the engine speed to approx. 2000 rpm (twice idling speed) until the temperature begins to drop.
- If the warning light in the center of the instrument panel is red, and the message "Coolant level low stop engine" is displayed, switch off the engine as soon as possible.

#### **WARNING!**

Do not remove coolant expansion tank cap. The coolant will be extremely hot.

If necessary, see [page 132](#) for information on checking and topping-up the coolant level.

---



[Contents](#) | [Top of Page](#)

2005  
VOLVO  
S80

Chapter 7 - Wheels and tires

pg. 97 Wheels and tires

<a href="#"><u>General information</u></a>	<a href="#"><u>98</u></a>
<a href="#"><u>Tire inflation</u></a>	<a href="#"><u>99</u></a>
<a href="#"><u>Tire inflation pressure tables</u></a>	<a href="#"><u>101</u></a>
<a href="#"><u>Tire Pressure Monitoring System (TPMS)</u></a>	<a href="#"><u>102</u></a>
<a href="#"><u>Self supporting run flat tires</u></a>	<a href="#"><u>103</u></a>
<a href="#"><u>Tire designations</u></a>	<a href="#"><u>104</u></a>
<a href="#"><u>Glossary of tire terminology</u></a>	<a href="#"><u>105</u></a>
<a href="#"><u>Vehicle loading</u></a>	<a href="#"><u>106</u></a>
<a href="#"><u>Uniform tire quality grading</u></a>	<a href="#"><u>107</u></a>
<a href="#"><u>Snow chains, snow tires, studded tires</u></a>	<a href="#"><u>108</u></a>
<a href="#"><u>Temporary spare</u></a>	<a href="#"><u>109</u></a>
<a href="#"><u>Changing a wheel</u></a>	<a href="#"><u>110</u></a>

pg. 98 Wheels and tires

### **General information**

Your vehicle is equipped with tires according to the vehicle's tire information placard on the B-pillar (the structural member at the side of the vehicle, at the rear of the driver's door opening), or on the inside of the fuel filler door on Canadian models.

The tires have good road holding characteristics and offer good handling on dry and wet surfaces. It should be noted however that the tires have been developed to give these features on snow/ice-free surfaces.


Certain models are equipped with "all-season" tires, which provide a somewhat higher degree of road holding on slippery surfaces than tires without the "all-season" rating. However, for optimum road holding on icy or snow-covered roads, we recommend suitable winter tires on all four wheels.

When replacing tires, be sure that the new tires are the same size designation, type (radial) and preferably from the



same manufacturer, on all four wheels. Otherwise there is a risk of altering the car's roadholding and handling characteristics.


**NOTE:** When storing wheel/tire assemblies (e.g. winter tires and wheels), either stand the assemblies upright, or suspend them off the ground. Laying wheel/tire assemblies on their sides for prolonged periods can cause wheel and/or tire damage.

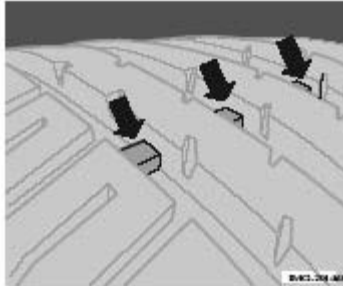

### **Tread wear indicator**

The tires have wear indicator strips running across or parallel to the tread. The letters TWI are printed on the side of the tire. When approximately 1/16" (1.6 mm) is left on the tread, these strips become visible and indicate that the tire should be replaced. Tires with less than 1/16" (1.6 mm) tread offer very poor traction.

When replacing worn tires, it is recommended that the tire be identical in type (radial) and size as the one being replaced. Using a tire of the same make (manufacturer) will prevent alteration of the driving characteristics of the vehicle.

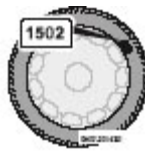


### **New tires**

Remember that tires are perishable goods. As of 2000, the manufacturing week and year will be indicated with 4 digits (e.g. 1502 means that the tire illustrated was manufactured during week 15 of 2002).

### **Improving tire economy:**

- Maintain correct tire pressure. See the tire pressure table on [page 101](#).
- Drive smoothly: avoid fast starts, hard braking and tire screeching.
- Tire wear increases with speed.
- Correct front wheel alignment is very important.
- Unbalanced wheels impair tire economy and driving comfort.
- Tires must maintain the same direction of rotation throughout their lifetime.
- When replacing tires, the tires with the most tread should be mounted on the rear wheels to reduce the chance of oversteer during hard braking.

Hitting curbs or potholes can damage the tires and/or wheels permanently.

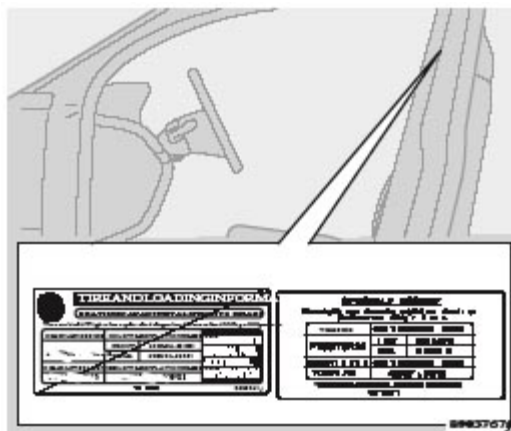


*Tire inflation placards on U.S. models*

## Tire inflation

Check tire inflation pressure regularly.

A table listing the recommended inflation pressure for your vehicle can be found on [page 101](#). Tire inflation pressure placards are also located on the driver's side B-pillar (the structural member at the side of the vehicle, at the rear of the driver's door opening), or on the inside of the fuel filler door on Canadian models. These placards indicate the designation of the factory-mounted tires on your vehicle, as well as load limits and inflation pressure.

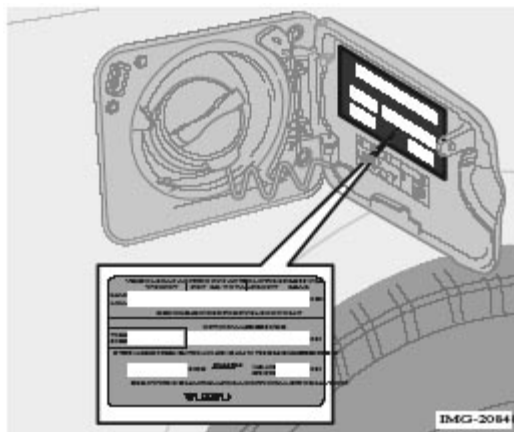

*Tire inflation placard on Canadian models*

**NOTE:** The placards shown indicate inflation pressure for the tires installed on the car at the factory only.

- Use a tire gauge to check the tire inflation pressure, including the spare, at least once a month and before long trips. You are strongly urged to buy a reliable tire pressure gauge, as automatic service station gauges may be inaccurate.
- Use the recommended cold inflation pressure for optimum tire performance and wear.
- Under-inflation or over-inflation may cause uneven treadwear patterns.

## **WARNING!**

- Under-inflation is the most common cause of tire failure and may result in severe tire cracking, tread separation, or "blowout," with unexpected loss of vehicle control and increased risk of injury.
- Under-inflated tires reduce the load carrying capacity of your vehicle.

When weather temperature changes occur, tire inflation pressures also change. A 10-degree temperature drop causes a corresponding drop of 1 psi (7 kPa) in inflation pressure. Check your tire pressures frequently and adjust them to the proper pressure, which can be found on the vehicle's tire information placard or certification label.

### **Checking tire pressure**

#### **Cold tires**

Inflation pressure should be checked when the tires are cold.

**The tires are considered to be cold when they have the same temperature as the surrounding (ambient) air.**

This temperature is normally reached after the car has been parked for at least 3 hours.

pg. 100 Wheels and tires

After driving a distance of approximately 1 mile (1.6 km), the tires are considered to be hot. If you have to drive farther than this distance to pump your tire(s), check and record the tire pressure first and add the appropriate air pressure when you get to the pump.

If checking tire pressure when the tire is hot, never "bleed" or reduce air pressure. The tires are hot from driving and it is normal for pressures to increase above recommended cold pressures. A hot tire at or below recommended cold inflation pressure could be significantly under-inflated.

#### **To check inflation pressure:**

1. Remove the cap from the valve on one tire, then firmly press the tire gauge onto the valve.
2. Add air to reach the recommended air pressure
3. Replace the valve cap.
4. Repeat this procedure for each tire, including the spare.
5. Visually inspect the tires to make sure there are no nails or other objects embedded that could puncture the tire and cause an air leak.
6. Check the sidewalls to make sure there are no gouges, cuts, bulges or other irregularities.

#### **NOTE:**

- If you overfill the tire, release air by pushing on the metal stem in the center of the valve. Then recheck the pressure with your tire gauge.
- Some spare tires require higher inflation pressure than the other tires. Consult the tire inflation table on [page 101](#) or see the inflation pressure placard.

pg. 101 Wheels and tires

## Tire inflation pressure tables

Tire pressures recommended by Volvo for your vehicle. Refer to the tire inflation placard for information specific to the tires installed on your vehicle at the factory.

Cold tire pressure for vehicle loads up to 890 lbs (400 kg) <sup>1</sup>		
Tire size	Front, psi (kPa)	Rear, psi (kPa)
<b>S80</b>		
205/65R15	39 (270)	39 (270)
215/55R16	39 (270)	39 (270)
225/50R17	39 (270)	39 (270)
235/45R17 SSRFT <sup>2</sup>	39 (270)	39 (270)
235/40R18	39 (270)	39 (270)
Temporary spare tire T125/80R17	61 (420)	61 (420)

<sup>1</sup> These weights include the weight of all occupants of the car plus cargo.

<sup>2</sup> Self supporting run flat tires. See [page 103](#) for more information.

Optional tire pressure. These inflation pressures may only be used when the vehicle is not fully loaded.

Optional cold tire pressure that may only be used for vehicle loads up to 495 lbs (225 kg). psi (kPa)		
Tire size	Front, psi (kPa)	Rear, psi (kPa)
<b>S80</b>		
205/65R15	32 (220)	30 (210)
215/55R16	32 (220)	30 (210)
225/50R17	32 (220)	30 (210)
235/45R17 RFT (SST)	-	-
235/40R18	35 (240)	35 (240)
Temporary spare tire T125/80R17	61 (420)	61 (420)


pg. 102 Wheels and tires

### Tire Pressure Monitoring System (TPMS) - option on certain U.S. models only

The tire pressure monitoring system uses sensors mounted in the tire valves to check inflation pressure levels. When the vehicle is moving at a speed of 20 mph (30 km/h) or faster, these sensors transmit inflation pressure data to a receiver located in the vehicle.

USA - FCC ID: MRXTG315AM04

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

When low inflation pressure is detected, TPMS will light up the tire pressure warning light () in the instrument panel, and will display a message in the text window. The wording of this message is determined by the degree of inflation pressure loss.

When the tire pressure monitoring system warning light is on, one or more of your tires is significantly under-inflated. You should stop and check your tires as soon as possible, and inflate them to the proper pressure as indicated on the vehicle's tire information placard.

Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability. Each tire, including the spare, should be checked monthly when cold and set to the recommended inflation pressure as specified in the vehicle placard and owner's manual.

**NOTE:** TPMS indicates low tire pressure but does not replace normal tire maintenance. For information on correct tire pressure, please refer to the table on [page 101](#), or consult your Volvo retailer.

### Erasing warning messages

When a low tire pressure warning message has been displayed, and the tire pressure warning light has come on:

1. Use a tire pressure gauge to check the inflation pressure of all four tires.
2. Re-inflate the tire(s) to the correct pressure (consult the tire pressure placard or the table on [page 101](#)).
3. Drive the car for at least one minute at a speed of 20 mph (30 km/h) or faster.

This will erase the warning text and the warning light will go out.

### **WARNING!**

Incorrect inflation pressure could lead to tire failure, resulting in a loss of control of the vehicle.

### Changing tires

Please note the following when changing or replacing the factory installed TPMS wheels/tires on the vehicle:

Only the factory-mounted wheels are equipped with TPMS sensors in the valves.

If the vehicle is equipped with a temporary spare tire, this tire does not have a TPMS sensor.

If, for example, winter wheels/tires are used that are not equipped with TPMS sensors, the message TIRE PRESSURE SYSTEM SERVICE REQUIRED will be displayed after the car has been driven for several minutes at approximately 35 mph (50 km/h) or faster.

This message will remain on until wheels with TPMS sensors are mounted on the vehicle and it has been driven for at least one minute at a speed of 20 mph (30 km/h) or faster.

TPMS valves can be fitted on winter wheels or full-size spare wheels/tires. Consult your Volvo retailer.

---

### **CAUTION!**

When inflating tires with TPMS valves, press the pump's mouthpiece straight onto the valve to help avoid bending or otherwise damaging the valve.

---

pg. 103 Wheels and tires


### Self supporting run flat tires (option)

Certain models equipped with the Tire Pressure Monitoring System (TPMS) can also be equipped with self supporting

run flat tires.

Tires of this type have specially reinforced sidewalls that make it possible to continue driving in the event of a drop in inflation pressure. Tires of this type are mounted on special rims.

**NOTE:** Self supporting run flat tires are only available in conjunction with TPMS.

If a self supporting run flat tire should lose inflation pressure, the yellow TPMS warning symbol (  ) in the instrument panel lights up to alert the driver, and a message will be shown in the text window in the instrument panel.

If this occurs, reduce vehicle speed to a maximum of 50 mph (80 km/h). The vehicle can be driven approximately 50 miles (80 km), or somewhat farther if the vehicle is not heavily loaded. The tire should be replaced as soon as possible.


Hard braking and sudden steering maneuvers should be avoided.

In certain cases, it may be difficult to see which self supporting run flat tire is defective. To determine which tire is damaged, check the inflation pressure of all four tires.

### **WARNING!**

- Only specially trained persons should mount self supporting run flat tires.
- If self supporting run flat tires are mounted, the vehicle must be equipped with a Tire Pressure Monitoring System.
- After a low pressure warning has been displayed, do not exceed 50 mph (80 km/h).
- Avoid severe cornering and hard braking, and minimize the distance traveled before replacing the self supporting run flat tire.
- Self supporting run flat tires cannot be repaired. They must be replaced if damaged or punctured.

pg. 104 Wheels and tires

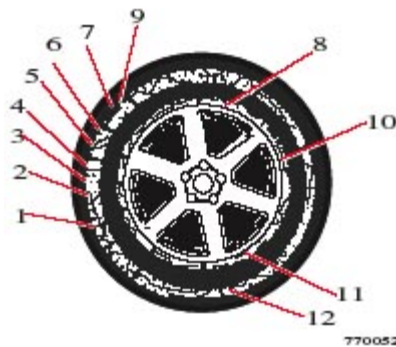

### **Tire designations**

Federal law mandates that tire manufacturers place standardized information on the sidewall of all tires (see the illustration).

The following information is listed on the tire sidewall:

The tire designation (the following figures are examples of a tire designation):

1. 215: the width of the tire (in millimeters) from sidewall edge to sidewall edge. The larger the number, the wider the tire.
  2. 65: The ratio of the tire's height to its width.
  3. R: Radial tire.
  4. 15: The diameter of the wheel rim (in inches).
  5. 95: The tire's load index. In this example, a load index of 95 equals a maximum load of 1521 lbs (690 kg).
  6. H: The tire's speed rating, or the maximum speed at which the tire is designed to be driven for extended periods of time, carrying a permissible load for the vehicle, and with correct inflation pressure. For example, H indicates a speed rating of 130 mph (210 km/h).
- NOTE:** This information may not appear on the tire because it is not required by law.
7. M+S or M/S = Mud and Snow, AT = All Terrain, AS = All Season
  8. U.S. DOT Tire Identification Number (TIN): This begins with the letters "DOT" and indicates that the tire meets all federal standards. The next two numbers or letters are the plant code where it was manufactured, the next two are the tire size code and the last four numbers represent the week and year the tire was built. For example, the numbers 317 mean the 31st week of 1997. After 2000 the numbers go to four digits. For example, 2501 means the 25th week of 2001. The numbers in between are marketing codes used at the manufacturer's discretion. This information helps a tire manufacturer identify a tire for safety recall purposes.
  9. Tire Ply Composition and Material Used: Indicates the number of plies indicates or the number of layers of rubber-coated fabric in the tire tread and sidewall. Tire manufacturers also must indicate the ply materials in the tire and the sidewall, which include steel, nylon, polyester, and others.
  10. Maximum Load: Indicates the maximum load in pounds and kilograms that can be carried by the tire. Refer to the vehicle's tire information placard or the safety certification label, located on the B-Pillar or the driver's door or on the inside of the fuel filler door on Canadian models, for the correct tire pressure for your vehicle.
  11. Treadwear, Traction, and Temperature grades: See [page 107](#) for more information.
  12. Maximum permissible inflation pressure: the greatest amount of air pressure that should ever be put in the tire. This limit is set by the tire manufacturer.

### **Glossary of tire terminology**

The tire suppliers may have additional markings, notes or warnings such as standard load, radial tubeless, etc.

### **Glossary of tire terminology**

- **Tire information placard:** A placard showing the OE (Original Equipment) tire sizes, recommended inflation pressure, and the maximum weight the vehicle can carry.
- **Tire Identification Number (TIN):** A number on the sidewall of each tire providing information about the tire brand and manufacturing plant, tire size and date of manufacturer.
- **Inflation pressure:** A measure of the amount of air in a tire.
- **Standard load:** A class of P-metric or Metric tires designed to carry a maximum load at 35 psi [37 psi (2.5 bar) for

Metric tires]. Increasing the inflation pressure beyond this pressure will not increase the tires load carrying capability.

- **Extra load:** A class of P-metric or Metric tires designed to carry a heavier maximum load at 41 psi [43 psi (2.9 bar) for Metric tires]. Increasing the inflation pressure beyond this pressure will not increase the tires load carrying capability.
- **kPa:** Kilopascal, a metric unit of air pressure.
- **PSI:** Pounds per square inch, a standard unit of air pressure.
- **B-pillar:** The structural member at the side of the vehicle behind the front door.
- **Bead area of the tire:** Area of the tire next to the rim.
- **Sidewall of the tire:** Area between the bead area and the tread.
- **Tread area of the tire:** Area of the perimeter of the tire that contacts the road when mounted on the vehicle.
- **Rim:** The metal support (wheel) for a tire or a tire and tube assembly upon which the tire beads are seated.
- **Maximum load rating:** a figure indicating the maximum load in pounds and kilograms that can be carried by the tire. This rating is established by the tire manufacturer.
- **Maximum permissible inflation pressure:** the greatest amount of air pressure that should ever be put in the tire. This limit is set by the tire manufacturer.
- **Recommended tire inflation pressure:** inflation pressure, established by Volvo, which is based on the type of tires that are mounted on a vehicle at the factory. This inflation pressure is affected by the number of occupants in the car, the amount of cargo, and the speed at which the vehicle will be driven for a prolonged period. This information can be found on the tire inflation placard(s) located on the driver's side B-pillar or on the inside of the fuel filler door on Canadian models, and in the tire inflation table in this chapter.
- **Cold tires:** The tires are considered to be cold when they have the same temperature as the surrounding (ambient) air. This temperature is normally reached after the car has been parked for at least 3 hours.

pg. 106 Wheels and tires

## Vehicle loading

Properly loading your vehicle will provide maximum return of vehicle design performance.

Before loading your vehicle, familiarize yourself with the following terms for determining your vehicle's weight ratings, with or without a trailer, from the vehicle's Federal/Canadian Motor Vehicle Safety Standards (FMVSS/CMVSS) label, and the vehicle's tire information placard:

### Curb weight

The weight of the vehicle including a full tank of fuel and all standard equipment. It does not include passengers, cargo, or optional equipment.

### Capacity weight

All weight added to the curb weight, including cargo and optional equipment. When towing, trailer hitch tongue load is also part of cargo weight.



**NOTE:** For trailer towing information, please refer to the section "Towing a trailer" on [page 89](#).

### **Permissible axle weight**

The maximum allowable weight that can be carried by a single axle (front or rear). These numbers are shown on the Federal/Canadian Motor Vehicle Safety Standards (FMVSS/CMVSS) label. The total load on each axle must never exceed its maximum permissible weight.

### **Gross vehicle weight (GVW)**

The vehicle's curb weight + cargo + passengers.

#### **NOTE:**

- The location of the various labels in your vehicle can be found on [page 144](#).
- A table listing important weight limits for your vehicle can be found on [page 145](#).

### **Steps for Determining Correct Load Limit**

- (1) Locate the statement "the combined weight of occupants and cargo should never exceed XXX pounds" on your vehicle's placard.
- (2) Determine the combined weight of the driver and passengers that will be riding in your vehicle.
- (3) Subtract the combined weight of the driver and passengers from XXX kilograms or XXX pounds.
- (4) The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1400 lbs. and there will be five 150 lb. passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs. (1400-750 (5 x 150) = 650 lbs.)
- (5) Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4.
- (6) If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual<sup>1</sup> to determine how this reduces the available cargo and luggage load capacity of your vehicle.

#### **WARNING!**

- Exceeding the permissible axle weight, gross vehicle weight, or any other weight rating limits can cause tire overheating resulting in permanent deformation or catastrophic failure.
- Do not use replacement tires with lower load carrying capacities than the tires that were original equipment on the vehicle because this will lower the vehicle's GVW rating. Replacement tires with a higher limit than the originals do not increase the vehicle's GVW rating limitations.

<sup>1</sup> See "Towing a trailer" on [page 89](#).

### **Uniform tire quality grading**

**ALL PASSENGER VEHICLE TIRES MUST CONFORM TO FEDERAL SAFETY REQUIREMENTS IN**

## **ADDITION TO THESE GRADES**

Quality grades can be found, where applicable, on the tire sidewall between the tread should and maximum section width. For example:

**Treadwear 200 Traction AA Temperature A**

### **TREADWEAR**

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course. For example, a tire graded 150 would wear one and one half (1 1/2) times as well on the government course as a tire graded 100. The relative performance of tires depends upon the actual conditions of their use, however, and many depart significantly from the norm due to variation in driving habits, service practices and differences in road characteristics and climate.

### **TRACTION**

The traction grades, from highest to lowest, are AA, A, B, and C, as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

#### **WARNING!**

The traction grade assigned to this tire is based on braking (straight-ahead) traction tests and does not include cornering (turning) traction.

### **TEMPERATURE**

The temperature grades are AA (the highest), A, B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel. Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a minimum level of performance that all passenger car tires must meet under the Federal Motor Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

#### **WARNING!**

The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, under-inflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

pg. 108 Wheels and tires

## **Snow chains, snow tire, studded tires**

### **Snow chains**

Snow chains can be used on your Volvo with the following restrictions:

- Snow chains should be installed on front wheels only. Use only Volvo approved snow chains.
- If accessory, aftermarket or "custom" tires and wheels are installed and are of a size different than the original tires and wheels, chains in some cases CANNOT be used. Sufficient clearances between chains and brakes, suspension and body components must be maintained.
- Some strap-on type chains will interfere with brake components and therefore CANNOT be used.
- All Wheel Drive models: Snow chains should only be installed on the front wheels. Only chains adapted for AWD models should be used.

Consult your Volvo retailer for additional snow chain information.

---

## **CAUTION!**

- Check local regulations regarding the use of snow chains before installing.
  - Always follow the chain manufacturer's installation instructions carefully. Install chains as tightly as possible and retighten periodically.
  - Never exceed the chain manufacturer's specified maximum speed limit. (Under no circumstances should you exceed 31 mph (50 km/h)).
  - Avoid bumps, holes or sharp turns when driving with snow chains.
  - The handling of the vehicle can be adversely affected when driving with chains. Avoid fast or sharp turns as well as locked wheel braking.
- 

## **Snow tires, studded tires<sup>1</sup>**

### **Tires for winter use:**

- Owners who live in or regularly commute through areas with sustained periods of snow or icy driving conditions are strongly advised to fit suitable winter tires to help retain the highest degree of traction.
- It is important to install winter tires on all four wheels to help retain traction during cornering, braking, and accelerating. Failure to do so could reduce traction to an unsafe level or adversely affect handling.
- Do not mix tires of different design as this could also negatively affect overall tire road grip.
- Winter tires wear more quickly on dry roads in warm weather. They should be removed when the winter driving season has ended.
- Studded tires should be run-in 300-600 miles (500-1000 km) during which the car should be driven as smoothly as possible to give the studs the opportunity to seat properly in the tires. The tires should have the same rotational direction throughout their entire lifetime.

**NOTE:** Please consult state or provincial regulations restricting the use of studded winter tires before installing such tires.

<sup>1</sup> Where permitted

pg. 109 Wheels and tires

### **Temporary Spare**

The spare tire in your car is called a "Temporary Spare".

Recommended tire pressure (see the placard on the B-pillar or on the fuel filler door) should be maintained irrespective of which position on the car the temporary spare tire is used on.

In the event of damage to this tire, a new one can be purchased from your Volvo retailer.

### **WARNING!**


Current legislation prohibits the use of the "Temporary Spare" tire other than as a temporary replacement for a punctured tire. It must be replaced as soon as possible by a standard tire. Road holding and handling may be affected with the "Temporary Spare" in use. Do not exceed 50 mph (80 km/h). Do not drive farther than 50 miles (80 km) on

a temporary spare tire.

## CAUTION!

The car must not be driven with wheels of different dimensions or with a spare tire other than the one that came with the car. The use of different size wheels can seriously damage your car's transmission.

pg. 110 Changing wheels

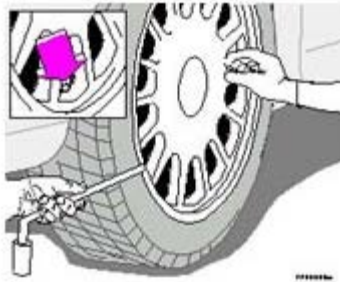


*Insert flat end of lug wrench and turn/pull straight out*

## Changing wheels

The spare wheel is located under the carpet on the trunk floor. The jack and crank are secured in the wheel recess. There are two jack attachment points on each side of the car.

## To change a wheel:

- Engage the parking brake.
- Put the gear selector in (P)ark.
- Remove the wheel cap (where applicable) using the lug wrench in the tool bag.
- With the car still on the ground, use the lug wrench to loosen the wheel bolts 1/2 - 1 turn by exerting downward pressure. Turn the bolts counterclockwise to loosen.

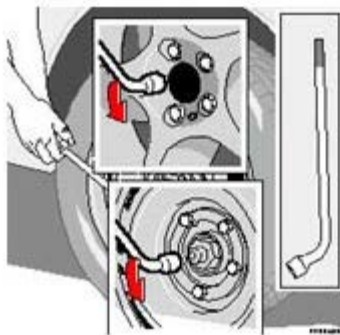


*Loosen wheel bolts*

- Position the jack on the bar in the attachment (A in the illustration below) and crank while simultaneously guiding

the base of the jack to the ground. **The base of the jack must be flat on a level, firm, non-slippery surface. Before raising the car, check that the jack is still correctly positioned in the attachment.**


- Raise the vehicle until the wheel to be changed is lifted off the ground.
- Unscrew the wheel bolts completely and carefully remove the wheel so as not to damage the thread on the studs.

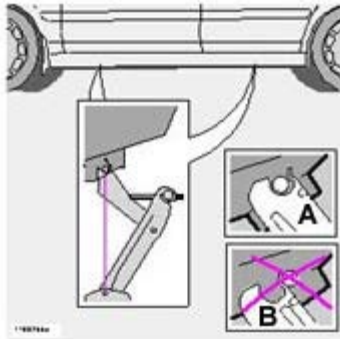


*Attaching the jack*

**NOTE:** To avoid excessive wear and the necessity of rebalancing, mark and reinstall wheels in the same location and position as before removal. To lessen the chance of imbalance, each wheel hub is equipped with a guide stud to ensure that a removed wheel can be reinstalled in its original position (as when changing over to winter tires/wheels).

pg. 111 Changing wheels

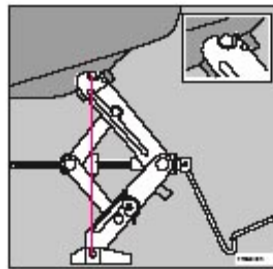

*Jack for All Wheel Drive models*

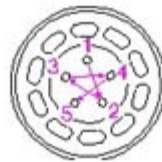

*Correct tightening order for wheel bolts*

### **Installing the wheel**

- Clean the contact surfaces on the wheel and hub.
- Lift the wheel and place it on the hub.
- Install the wheel bolts and tighten hand-tight. Using the lug wrench, tighten crosswise (see illustration above) until all bolts are snug.
- Lower the vehicle to the ground and alternately tighten the bolts crosswise to 102 ft. lbs. (140 Nm).

- Install the wheel cap (where applicable).

**WARNING!**

- The jack must correctly engage the bar in the jack attachment (A). The car's weight must not rest on the jack attachment (B). See illustration on [page 110](#).
- Be sure the jack is on a firm, level, non-slippery surface.
- Never allow any part of your body to be extended under a car supported by a jack.
- Use the jack intended for the car when replacing a wheel. For any other job, use stands to support the side of the car being worked on.
- Apply the parking brake and put the gear selector in the (P)ark position.
- Block the wheels standing on the ground, use rigid wooden blocks or large stones.
- The jack should be kept well-greased

**CAUTION:**

- The car must not be driven with wheels of different dimensions or with a spare tire other than the one that came with the car. The use of different size wheels can seriously damage your car's transmission.
- Correct tightening torque on wheel bolts must be observed. The wheel bolts should never be greased or lubricated. The extended, chromed wheel bolts must not be used with steel rims, as they make it impossible to fit the hub caps.

pg. 112

This page intentionally left blank.



[Contents](#) | [Top of Page](#)

2005  
VOLVO  
S80

Chapter 8 - Maintenance/Serviceing

pg. 113 Maintenance/Serviceing

Fuses 114

Replacing bulbs 119

Paint touch up 126

Washing the car 127

Cleaning the upholstery 129

Maintenance service, Warranty 130

Fuel/emissions systems 131

Drive belt, Coolant 132

Emissions maintenance 133

Washer fluid, Hoisting the car 134

Opening the hood, Engine compartment 135

Engine oil 136


Power steering/Brake fluid reservoirs 138

Replacing the battery 139

Battery maintenance 140

Replacing wiper blades 141

pg. 114 Fuses

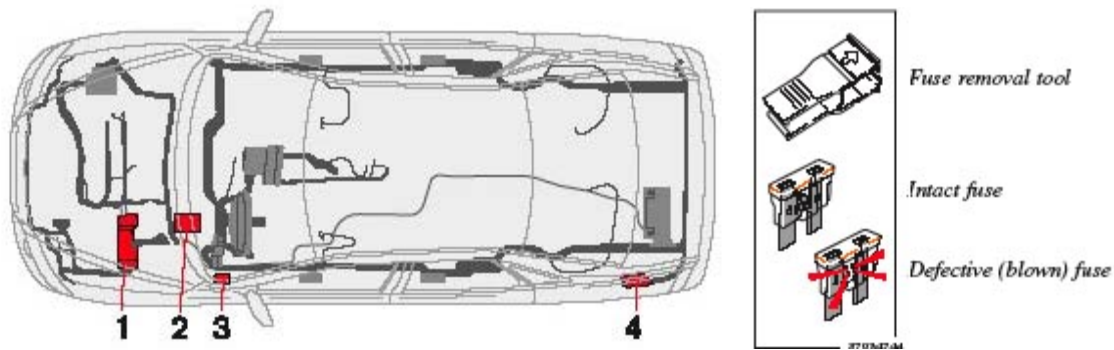

## Replacing fuses

If an electrical component fails to function, it is likely that a fuse has blown due to a temporary circuit overload.

Fuses are located in four different places:

1. Relays/fuse box in the engine compartment
2. Fuse box in the passenger compartment, behind the plastic cover
3. Fuse box in the passenger compartment, on the edge of the dashboard
4. Fuse box in the trunk

A label on the inside of each cover indicates the amperage and the electrical components that are connected to each fuse.

The easiest way to see if a fuse is blown is to remove it. Pull the fuse straight out. If a fuse is difficult to remove, you will find a special fuse removal tool in the passenger compartment fuse box. From the side, examine the curved metal wire to see if it is broken. If so, put in a new fuse of the **same color and amperage** (written on the fuse). Spare fuses are stored in the fuse box in the passenger compartment. If fuses burn out repeatedly, have the electrical system inspected by an authorized Volvo retailer.


### WARNING!

Never use fuses with higher amperage than those stated on the following pages. Doing so could overload the car's electrical system.

## pg. 115 Fuses in the engine compartment

### Relays/fuses in the engine compartment

When replacing fuses, be sure to replace a blown fuse with a new one of the **same color and amperage** (written on the fuse). Fuses in positions marked X are replacement fuses.

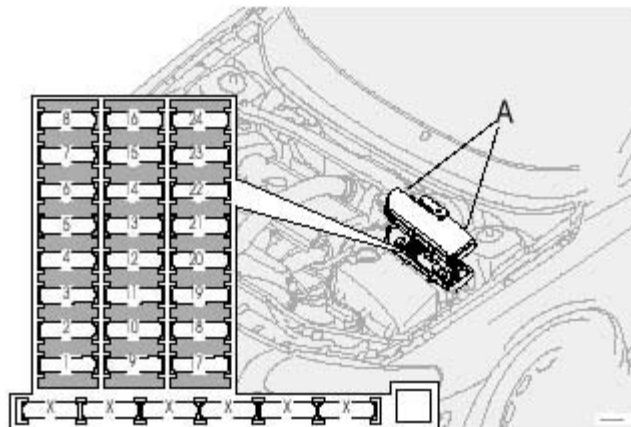


A - To open, press the plastic catches on the rear side of the fuse box cover and lift.



# Ordinary fuses

Location	Amperage
1 -	
2 Auxiliary lamps (option)	20A
3 -	
4 Oxygen sensors	20A
5 Crankcase ventilation heater, solenoid valves, fuel tank, leakage monitor	10A
6 Mass airflow sensor, engine control module, injectors	15A
7 -	
8 AC compressor, accelerator pedal position sensor, E-box fan	10A
9 -	
10 -	
11 Ignition coils	20A
12 -	
13 Windshield wipers	25A
14 ABS	30A
15 -	
16 -	
17 Driver's side low beam	20A
18 Front parking lights	15A
19 ABS	30A
20 Passenger's side low beam	20A
21 Fuel pump	15A
22 Starter motor	35A
23 Engine control module, engine relay	10A
24 -	

pg. 116 Fuses in the passenger compartment

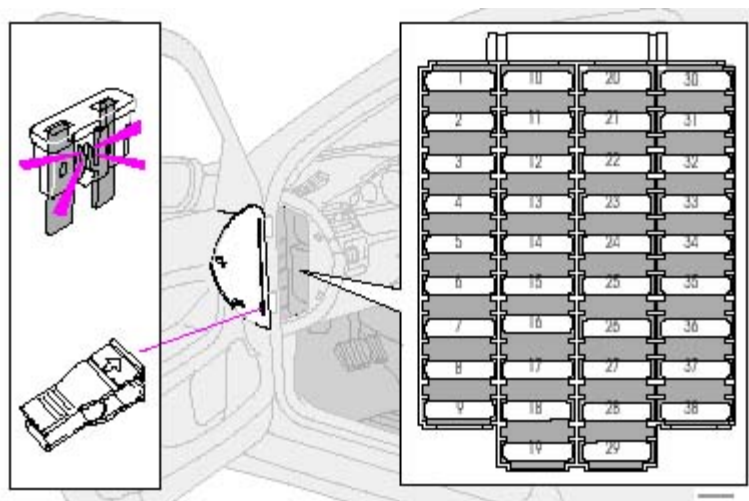


## Fuse box on the edge of the dashboard

Fuses are located inside the access panel on the edge of the dashboard. When replacing a blown fuse, be sure to replace it with a new one of the **same color and amperage** (written on the fuse).

<b>Location</b>	<b>Amperage</b>
1 Power driver's seat (option)	25A
2 Power passenger's seat (option)	25A
3 Climate system blower	30A
4 Control module - front passenger's door	25A
5 Control module - driver's door	25A
6 Ceiling lighting, upper electrical control module	10A
7 Moon roof (option)	15A
8 Ignition switch, SRS system, engine control module, immobilizer	7.5A
9 Onboard diagnostics, headlight switch, steering wheel angle sensor, steering wheel control module	5A
10 Audio system	20A
11 Audio system amplifier	30A
12 Navigation system display (option)	10A
13 -	
14 -	
15 -	
16 -	
17 -	
18 -	
19 -	
20 -	
21 -	
22 -	
23 -	
24 -	
25 -	
26 -	
27 -	
28 -	
29 -	
30 -	
31 -	
32 -	
33 -	
34 -	
35 -	
36 -	
37 -	

pg. 117 Fuses in the passenger compartment

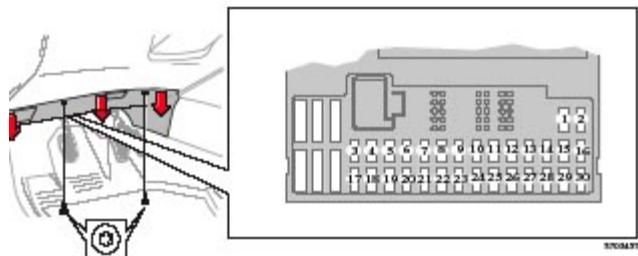


### Fuse box in the passenger compartment, behind the plastic cover

This fuse box is located behind the plastic cover below the steering wheel. When replacing a blown fuse, be sure to replace it with a new one of the **same color and amperage** (written on the fuse).

Location	Amperage
1 Heated passenger's seat (option)	15A
2 Heated driver's seat (option)	15A
3 Horn	15A
4 -	
5 -	
6 -	
7 -	
8 Alarm siren	5A
9 Brake light switch feed	5A
10 Instrument panel, climate system, power driver's seat (option)	10A
11 12-volt sockets - front and rear seats	15A
12 -	
13 -	
14 Headlight wipers (certain models)	15A
15 ABS, STC/DSTC	5A
16 Power steering, Bi-Xenon headlights (option)	10A
17 Driver's side front foglight (option)	7.5A
18 Passenger's side front foglight (option)	7.5A
19 -	
20 -	
21 Transmission control module, reverse gear block (M66 gearbox)	10A
22 Driver's side high beam	10A
23 Passenger's side high beam	10A
24 -	
25 -	
26 -	
27 -	
28 Power passenger's seat (option), audio system	5A

29	-	
30	-	
31	-	
32	-	
33	Vacuum pump	20A
34	Washer pump - headlight wipers (certain models)	15A
35	-	
36	-	

pg. 118 Fuses in the trunk

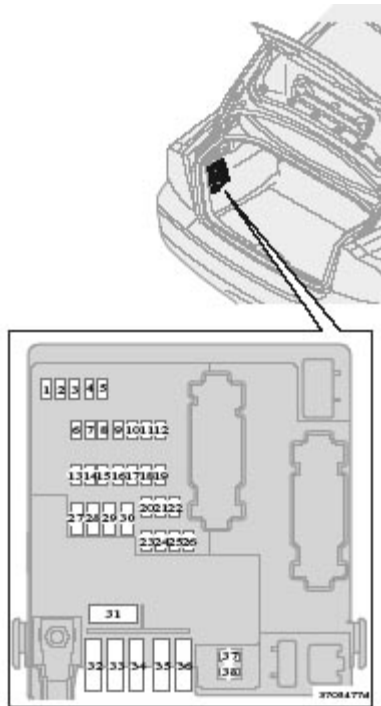


**Fuses in the trunk**

The fuses in the trunk are located behind the panel on the driver's side. When replacing a blown fuse, be sure to replace it with a new one of the **same color and amperage** (written on the fuse).

**Ordinary fuses**

Location		Amperage
1	Backup lights	10A
2	Parking lights, foglights, trunk lighting, license plate lighting, brake lights	20A
3	Accessory control module	15A
4	-	
5	Rear Electronic Module	10A
6	CD-changer (option), Navigation system (option)	7.5A
7	Trailer wiring (30-feed)	15A
8	12-volt socket - trunk	15A

9	Rear passenger's side door - power window, power window cut-out function	20A
10	Rear driver's side door - power window, power window cut-out function	20A
11	-	
12	-	
13	-	
14	-	
15	-	
16	-	
17	Accessory audio	5A
18	-	
19	Folding head restraints (option)	15A
20	Trailer wiring (15-feed)	20A
21	-	
22	-	
23	All Wheel Drive (option)	7.5A
24	Four-C chassis system (option)	15A
25	-	
26	Park assist (option)	5A
27	Main fuse: trailer wiring, Four-C, park assist, All Wheel Drive	30A
28	Central locking system	15A
29	Driver's side trailer lighting: parking lights, turn signal	25A
30	Passenger's side trailer lighting: parking light, brake light, fog light, turn signal	25A
31	Main fuse: fuses 37 and 38	40A
32	-	
33	-	
34	-	
35	-	
36	-	
37	Heated rear window	20A
38	Heated rear window	20A

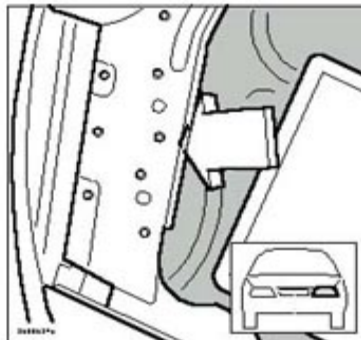


## Replacing high/low beam headlight bulbs

The headlight bulbs must be replaced from the engine compartment.

### CAUTION:


- Do not touch the glass on halogen bulbs with your fingers. Grease, oil or any other impurities can be carbonized onto the bulb and cause damage to the reflector.
- Be sure to use bulbs of the correct type and voltage.

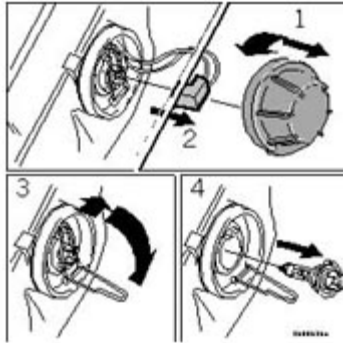

*Removing a defective bulb*

### To remove a defective bulb:

- Switch off the ignition.
- Open the hood.
- Remove the plastic cover over the bulb (1) by turning it counterclockwise.
- Remove the connector (2).
- Loosen the retaining spring (3) by first moving it to the right and then moving it down, out of the way.
- Pull out the defective bulb. Note the position of the guide lug on the base of the bulb (4).

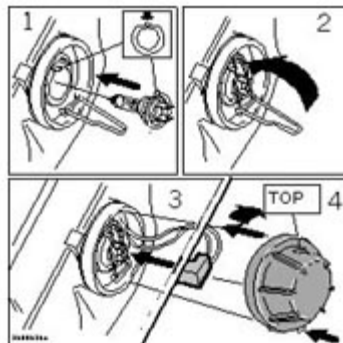


*Installing a new bulb*

### Installing a new bulb:

- Insert the new bulb, without touching the glass, with the guide lug upward (1). The bulb will only seat properly in this position.
- Move the retaining spring up and push it slightly to the left until it seats properly (2).
- Press the connector into place on the bulb (3).
- Reinstall the plastic cover and turn it clockwise until it is correctly in place (4). "TOP" must be upward.


**NOTE:** If the vertical aim of your headlights needs to be adjusted for any reason (e.g., towing a trailer for extended periods), this should be done by an authorized Volvo retailer.

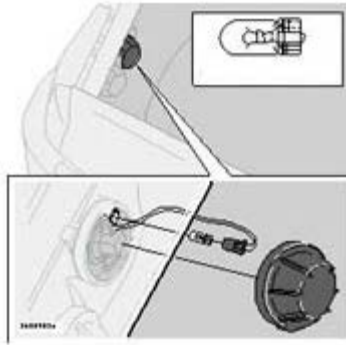

*Front parking light*

### **Front parking lights**


- Switch off the ignition.
- Remove the plastic cover over the high beam bulb by turning it counterclockwise.
- Pull out the bulb and its socket. Replace the bulb.
- Press the bulb and its socket back into place.
- Switch on the ignition to test the bulb.
- Reinstall the plastic cover and turn it clockwise until it is correctly in place. "TOP" must be upward (see illustration on previous page).

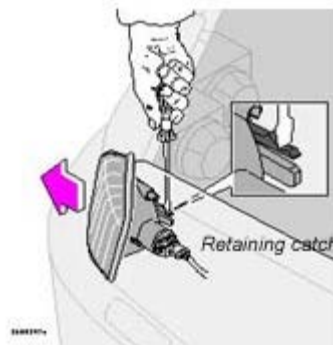

*Front turn signal*


### **Front turn signals**

- Switch off the ignition.
- Open the hood.
- Press down the retaining catch with a screwdriver and pull out the lamp housing.
- Press the retaining spring downward and pull the connector out of the lamp housing.
- Turn the bulb holder counterclockwise and remove it.
- Remove the defective bulb from the holder by first pressing it in slightly and then turning it counterclockwise.
- Install a new bulb in the holder and reinsert the bulb and holder in the lamp housing.

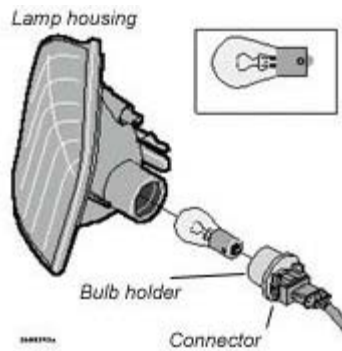

- Press the connector onto the bulb holder.
- Switch on the ignition to test the bulb.
- Press the lamp housing back into place on the fender. Be sure it seats properly.

## pg. 121 Replacing bulbs

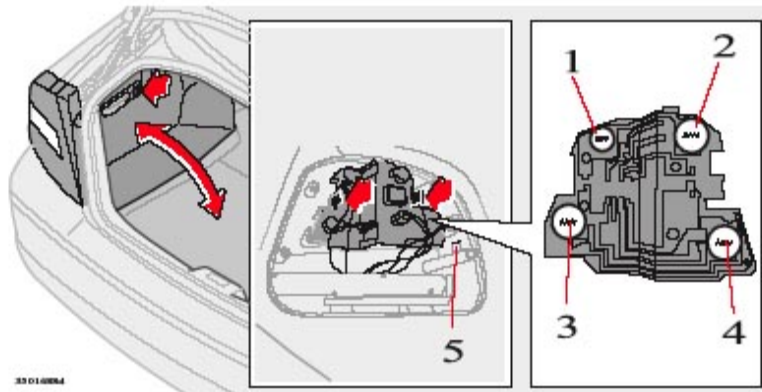

### Tail lights

1. Tail light
2. Tail light/fog light (left side only)
3. Turn signal
4. Back-up light
5. Side marker light

**NOTE:** The brake lights are Light Emitting Diodes (LEDs), which must be replaced by an authorized Volvo workshop.

All tail light bulbs are accessed from inside the trunk.

- Switch off the ignition and open the trunk.
- Fold the covering panel inward to access the bulbs. When replacing right tail light bulbs, access is made easier if you pull out the cargo net in the trunk completely before folding down the panel.

The bulbs are located in a holder that is held in place by two retaining catches.

### To replace bulbs 1-4:

- Press the retaining catches toward each other to release the bulb holder.
- Replace the defective bulb.




- Press the bulb holder back into place.
- Reconnect the wiring.
- Fold up and close the covering panel.

#### **To replace bulb 5:**

- Pull the bulb holder straight out of its retainer.
- Pull the bulb out of the holder.
- Press a new bulb into the holder.
- Press the bulb holder back into place.
- Fold up and close the covering panel.

pg. 122 Replacing bulbs

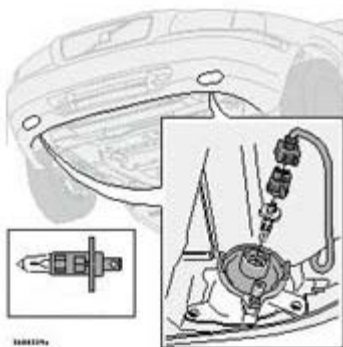


#### **Front fog lights (option)**

##### **CAUTION:**

Avoid touching the glass on the bulb with your fingers.


- Switch off the ignition.
- Turn the bulb holder slightly counterclockwise to release it.
- Replace the bulb. The shape of the foot of the bulb corresponds to the shape of the bulb holder.
- Reinstall the bulb holder by turning it slightly clockwise. "TOP" on the holder should be upward.

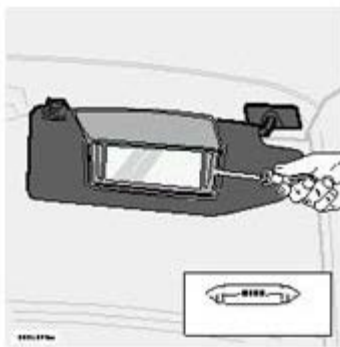

#### **Vanity mirror lights**


- Carefully insert a screwdriver and pry out the lens.
- Pry out the defective bulb and replace it.
- Carefully press the lower edge of lens onto the four tabs and press the upper edge of the lens into place.

## pg. 123 Replacing bulbs

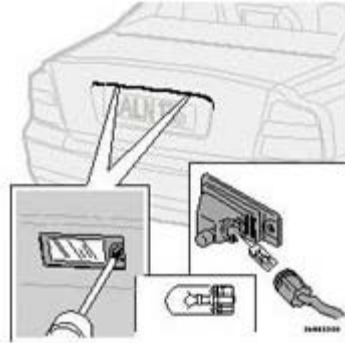

### License plate lights


- Switch off the ignition.
- Loosen the screws with a torx screwdriver.
- Carefully pull out the lamp housing.
- Turn the bulb holder counterclockwise and pull it out.
- Pull out the defective bulb and insert a new one.
- Reinsert the bulb holder into the housing and turn it clockwise.
- Reinstall the housing and screw it in place.

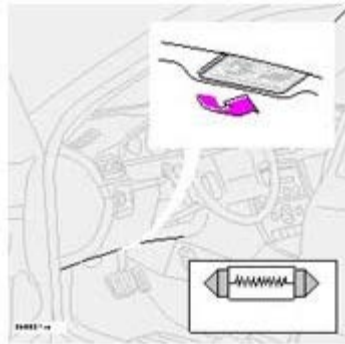

### Door step courtesy lights

The door step courtesy lights are located under the dash on the driver's and passenger's sides. To replace a bulb:

- Carefully insert a screwdriver and pry out the lens.
- Replace the defective bulb.
- Reinstall the lens.

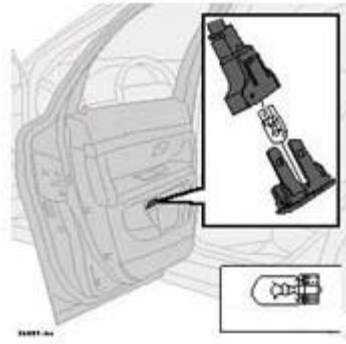

## Rear door step lights

- Carefully insert a screwdriver and pry out the lens.
  - Disconnect the wiring from the lamp housing.
  - Remove the lens from the lamp housing by pressing the two side catches out.
  - Pull out the defective bulb and replace it.
  - Reinstall the lamp housing in the reverse order.
- 



[Contents](#) | [Top of Page](#)

# 2005 VOLVO S80

## Chapter 9 - Specifications

pg. 143 Specifications

[Label information](#) 144

[Dimensions and weights](#) 145

[Engine specifications](#) 146

[Oil/fluid specifications and volumes](#) 147

[Fuel system, distributor ignition system, suspension](#) 148

[Electrical system](#) 149

[On Call Roadside Assistance](#) 150

pg. 144 Label information

### **1 Vehicle Emission Control Information**

Your Volvo is designed to meet all applicable emission standards, as evidenced by the certification label on the underside of the hood. For further information regarding these regulations, please consult your Volvo retailer.

### **2 Vacuum hose routing**

(underside of hood)

### **3 Loads and Tire Pressures**

(on inside of fuel filler door): Canadian models only.

### **4 Model plate**

Vehicle Identification Number (VIN). Codes for color and upholstery, etc. The plate is located in the engine compartment, on the inside of the left front fender.


### **5 Vehicle Identification Number (VIN) \***

The VIN plate is located on the top left surface of the dashboard. The VIN is also stamped on the right hand door pillar.

### **6 Federal Motor Vehicle Safety Standards (FMVSS) specifications (USA) and Ministry of Transport (CMVSS) standards (Canada)**

Your Volvo is designed to meet all applicable safety standards, as evidenced by the certification label on the facing side of the driver's door. For further information regarding these regulations, please consult your Volvo retailer.

## 7 Child safety latch label

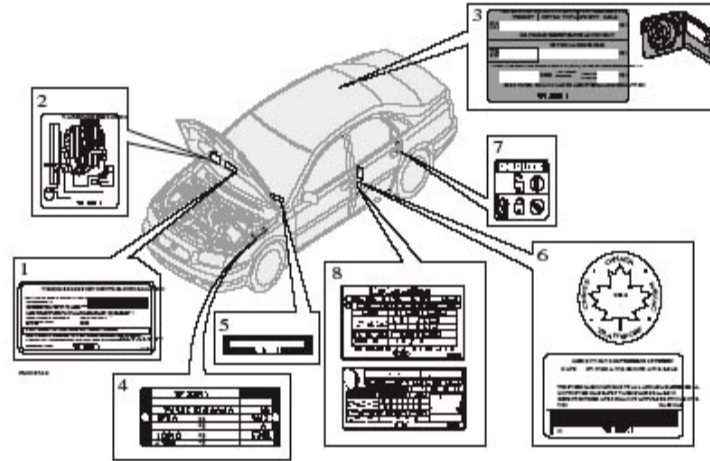

## 8 Loads and Tire Pressures - U.S. models only

Certain models will only have one decal, depending on the specifications of the vehicle.

\* The Vehicle Identification Number (VIN) should always be quoted in all correspondence concerning your vehicle with the retailer and when ordering parts.

**All specifications are subject to change without prior notice.**

pg. 145 Dimensions and weights

### Dimensions

Length	190.9 in. (485 cm)
Width	72.1 in. (183 cm)
Height	57.2 in. (145 cm)
Wheelbase	109.9 in. (279 cm)
Track, front	62.3 in. (158 cm)
Track, rear	61.4 in. (156 cm)
Turning circle (between curbs)	35.8 - 39 ft. (10.9 - 12 m)
Cargo capacity - trunk	14.2 cu. ft. (0.4 m <sup>3</sup> )

### Weights

AWD = All Wheel Drive	USA	Canada
<b>Gross vehicle weight (GVW)</b>		
5 cyl. automatic	4560 lbs	-
5 cyl. automatic AWD	4760 lbs	2160 kg
6 cyl. automatic	4670 lbs	2120 kg
<b>Capacity weight *</b>		

5 cyl. automatic	890 lbs	-
5 cyl. automatic AWD	890 lbs	400 kg
6 cyl. turbo automatic	890 lbs	400 kg

**Curb weight**

5 cyl. automatic	3520-3560 lbs	-
5 cyl. automatic AWD	3670-3710 lbs	1675-1690 kg
6 cyl. turbo automatic	3660-3700 lbs	1655-1675 kg

**Permissible axle weight, front**

5 cyl. automatic	2400 lbs	-
5 cyl. automatic AWD	2440 lbs	1110 kg
6 cyl. turbo automatic	2491 lbs	1130 kg

**Permissible axle weight, rear**

5 cyl. automatic	2293 lbs	-
5 cyl. automatic AWD	2400 lbs	1090 kg
6 cyl. turbo automatic	2293 lbs	1040 kg

<b>Max roof load</b>	220 lbs	100 kg
----------------------	---------	--------

**Max trailer weight**

<b>(w/o brakes)</b>	1650 lbs	750 kg
---------------------	----------	--------

**Max trailer weight**

**(with brakes)**

2" ball	3300 lbs **	1500 kg
1 7/8" ball	2000 lbs	900 kg

<b>Max tongue weight ***</b>	165 lbs	75 kg
------------------------------	---------	-------

**WARNING!**  
When adding accessories, equipment, luggage and other cargo to your vehicle, the total loaded weight capacity of the vehicle must not be exceeded.

\* The max permissible axle loads or the gross vehicle weight must not be exceeded.  
 \*\* When driving for prolonged periods at temperatures above 86° F (30° C), the maximum recommended weight is 2000 lbs (900 kg).  
 \*\*\* See also section "Trailer towing"

**All specifications are subject to change without prior notice.**

pg. 146 Engine specifications

**Engine specifications**

**Designation: Volvo B 6294 T**

Output	268 hp at 5200 rpm (200 KW/87 rps)	
Max torque	280 ft. lbs. at 1800-5000 rpm (380 Nm at 35-83 rps)	
Number of cylinders	6	
Bore	3.27" (83 mm)	
Stroke	3.54" (90 mm)	
Displacement	2.92 liters (115 cu. in.)	
Compression ratio	8.5:1	

Number of valves 24

### **Charge air cooler (Intercooler)**

Turbocharged engines employ a turbo-compressor to force air into the engine inlet manifold and a charge air cooler to cool the compressed inlet air. The resulting increase in air flow raises pressure in the intake manifold and increases engine power over that developed by the normally-aspirated engine. The charge air cooler (which resembles a radiator) is located between the turbo-compressor and inlet manifold.

#### **Designation: Volvo B 5254 T2**

Output 208 hp at 5000 rpm (154 kW/83 rps)  
Max. torque 236 ft. lbs. at 1500-4500 rpm (320 Nm/25-75 rps)  
Number of cylinders 5  
Bore 3.27" (83 mm)  
Stroke 3.67" (93.2 mm)  
Displacement 2.5 liters  
Compression ratio 9.0:1  
Number of valves 20

**All specifications are subject to change without prior notice.**

pg. 147 Oil/fluid specifications and volumes

### **Engine oil**

Meeting minimum ILSAC specification GF-2, including ACEA A1, API SJ, SJ/CF and SJ/Energy Conserving.

**Extra oil additives must not be used.**

**Volume:** (including filter):

5-cylinder turbo engine - 6.1 US qts (5.8 liters).

6-cylinder engines - 6.9 US qts (6.6 liters).

### **Automatic transmission fluid**

Total volume: 7.6 US qts (7.2 liters).

Type: JWS 3309

Different types of oil should never be mixed.

### **Cooling system**

Type: Positive pressure, closed system. The thermostat begins to open at 194 °F (90 °C).

Coolant: Volvo original coolant/antifreeze.

**Volume:** 9.5 US qts (9.0 liters)

### **Power steering fluid**

Volvo synthetic power steering fluid (Pentosin CHF 11S) P/N 1161529 or equivalent.

**Volume:** 0.95 US qt (0.9 liter).

### **Brake fluid**

DOT 4+ boiling point > 536°F (280° C) P/N 9437433

**Volume:** 0.6 US qt (0.6 liter)

### **Climate control system - refrigerant (R 134a)**

Oil: PAG

**Volume:** 2.2 lbs (1000 g) R134a.

## Fuel

Minimum octane requirement - AKI 87 (RON 91)

**Volume (fuel tank):** 21.1 US gals (80 liters) on T6 models, or 18 US gal. (68 liters) on the S80 All Wheel Drive and the S80 2.5T Front Wheel Drive.

## Washer fluid reservoir

**Volume:** 6 cyl: 4.7 US qts. (4.5 liters)

**All specifications are subject to change without prior notice.**

pg. 148 Fuel system, Distributor ignition system, Suspension

## Fuel system

The engine is equipped with a multiport fuel injection system.

## Distributor ignition system

Firing order: 15-3-6-2-4

Distributor ignition setting: Not adjustable

Spark plugs: B 6284 T: P/N 271367-4 (or equivalent)

B 5254 T2: Champion RC8PYP 8 (or equivalent)

Spark plug gap: 0.028-0.032" (0.7-0.8 mm)

Tightening torque: 18.4 ft. lbs. (25 Nm)

### **WARNING!**

The distributor ignition system operates at very high voltages. Special safety precautions must be followed to prevent injury. Always turn the ignition off when:

- Replacing distributor ignition components e.g. plugs, coil, etc.
- Do not touch any part of the distributor ignition system while the engine is running. This may result in unintended movements and body injury.

## Front suspension

Spring strut suspension with integrated shock absorbers and control arms linked to the support frame. Power-assisted rack and pinion steering. Safety type steering column.

The alignment specifications apply to an unladen car but include fuel, coolant and spare wheel.

## Rear suspension

Individual rear wheel suspension with longitudinal support arms, double link arms and track rods.

## Vehicle loading


The tires on your Volvo should perform to specifications at all normal loads when inflated as recommended on the tire information label. The label is located on the inside of the fuel filler door and lists vehicle design limits. Do not load your car beyond the load limits indicated.

### **WARNING!**

Improperly inflated tires will reduce tire life, adversely affect vehicle handling and can possibly lead to failure resulting in loss of vehicle control without prior warning.

**All specifications are subject to change without prior notice.**



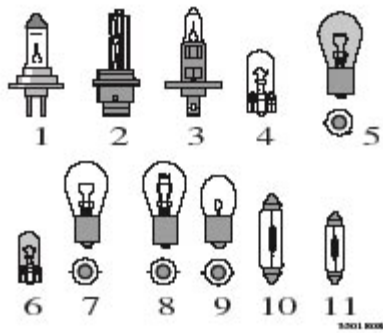

## Bulbs

Bulb	Type	Socket
1. High/low beams	55W H7	
2. Bi-Xenon headlight (option)	35W D2R	
3. Front foglights	55W H1	
4. Front parking lights, rear side marker lights, rear footwell lighting	W5W	W2.1x9.5d
Front side marker lights	W3W	W2.1x9.5d
5. Front turn signals	PY21W	BAU 15s
6. Side turn signals (amber)	WY5W	W2.1x9.5d
7. Brake lights, backup lights, rear turn signals	P21W	BA15s
8. Rear foglight, parking light	P21/4W	BAZ15d
9. Rear parking light	R5W	BA15s
10. License plate lighting, front footwell lighting, trunk lighting	C5W	SV8.5
11. Vanity mirror	1.2W	SV5.5

### **WARNING!**

Bi-Xenon headlights (option) - due to the high voltage used by these headlights, these bulbs should only be replaced by an authorized Volvo service technician.

## Electrical system

12 Volt, negative ground.

Voltage-controlled generator. Single-wire system with chassis and engine used as conductors. Grounded on chassis.

## Battery

Voltage: 12 Volt, capacity: 600 A/115 min. reverse capacity

The battery contains corrosive and poisonous acids. It is of the utmost importance that old batteries are disposed of correctly. Your Volvo retailer can assist you in this matter.

## Generator

Rated output: max. current: 140 A

**Starter motor:**  
Output: 1.7 kW

**All specifications are subject to change without prior notice.**

pg. 150 On Call Roadside Assistance



### **Volvo On Call Roadside Assistance**

Your new Volvo comes with a four-year On Call Roadside Assistance program. Additional information, features, and benefits are described in a separate information package in your glove compartment.

If you have misplaced your package, dial:

#### **In the U.S.A.**

1-800-63-VOLVO (1-800-638-6586)

#### **In Canada:**

1-800-263-0475



### **Technician certification**

In addition to Volvo factory training, Volvo supports certification by the National Institute for Automotive Excellence (A.S.E.). Certified technicians have demonstrated a high degree of competence in specific areas. Besides passing exams, each technician must also have worked in the field for two or more years before a certificate is issued. These professional technicians are best able to analyze vehicle problems and perform the necessary service procedures to keep your Volvo at peak operating condition.



[Contents](#) | [Top of Page](#)

2005  
VOLVO  
S80

Chapter 10 - Audio systems

pg. 151 Audio systems

[Introduction](#) 152

[HU-650 overview](#) 153

[HU-850 overview](#) 154

[Audio functions HU-650/HU-850](#) 155

[Radio functions HU-650/HU-850](#) 157

[CD player HU-650](#) 162

[Internal CD changer - HU-850](#) 163

[External CD changer \(option\) - HU-650/HU-850](#) 164

[Cassette deck HU-650](#) 165

[Dolby Surround Pro Logic II HU-850](#) 166

[Audio systems - specifications](#) 168

[HomeLink® Universal Transceiver \(option\)](#) 169

pg. 152 Introduction

The audio system in your car is operated with the buttons and knobs in the system's front panel. Certain functions, such as adjusting the volume, changing radio stations or tracks on a CD, etc. can also be controlled with the optional steering wheel-mounted keypad.

The audio system is available in two versions:

**HU-650**

Features: AM/FM radio, single-disc CD player, cassette player, 4x25W output, six speakers.

**HU-850**

Features: AM/FM radio, integrated 6-disc CD changer, 4x50W or 4x70W output plus 25W Dolby Pro Logic II, eleven speakers.

## **Compact disc care**


- Before using a new disc for the first time, remove any burrs in the center/outer edge by running the stem of a pen or similar object around the hole/edge of the disc.
- Use high quality discs only.
- Keep the discs clean. Wipe them with a soft, clean, lint-free cloth, working from the center outwards. If necessary, dampen the cloth with a neutral soap solution. Dry thoroughly before using.
- Never use cleaning spray or antistatic liquid. Use only cleaners specifically made for CDs.
- Use discs of the correct size only (3.5" discs should never be used). The discs should conform to the norms EN60908 (IEC60908).
- Do not put tape or labels on the disc itself.
- Volvo does not recommend the use of plastic outer rings on the disc.
- Condensation may occur on discs/optical components of the changer in cold winter weather. The disc can be dried with a clean, lint-free cloth. Optical components in the CD changer may, however, take up to one hour to dry off.
- Never attempt to play a disc which is damaged in any way.
- When not in use, the discs should be stored in their covers. Avoid storing discs in excessive heat, direct sunlight or dusty locations.

## **Cassettes**


- Store cassettes in their cases.
- Do not touch the tape surface with your fingers.
- Tapes should not be exposed to direct sunlight or extreme temperatures.
- Keep tapes away from oil, grease and other contaminants.
- For optimal tape deck performance Volvo does not recommend the use of C-120 tapes.
- Take up slack using a pen or a pencil before inserting a cassette in the cassette slot.

## **Cassette cleaning**

We recommend the use of the Volvo Cleaning Cassette available as a genuine Volvo accessory. Regular use improves sound quality, cleans vital parts and prevents tape tangle.

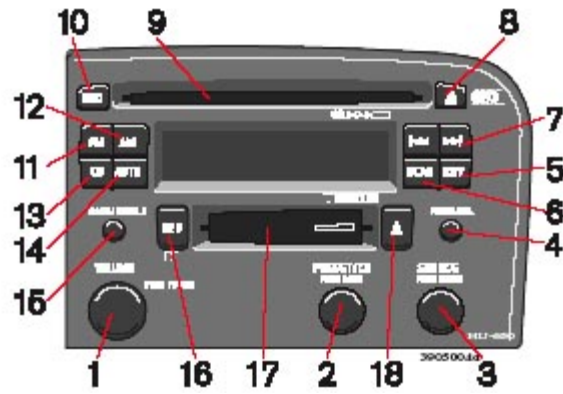

1. On/off - press  
Volume - turn
2. Selector knob for:  
Stored radio stations  
Press to store a station  
CD changer - selecting disc (option)
3. Selector knob:  
Radio \_ FM, AM  
Cassette  
CD  
CD changer (option)  
Press to open the main menu.
4. Fader - press and turn  
Balance - press to release the control, pull and turn to adjust
5. Exit (exit the menu)
6. Scan function (automatically search for radio stations)
7. Navigations buttons (seek/change radio station or CD track)
8. CD eject
9. CD slot
10. CD random play
11. FM
12. AM
13. CD player
14. Automatically search for radio stations
15. Bass - press and turn  
Treble - press to release the control, pull and turn to adjust
16. Tape direction selector  
CD changer (option) - random play
17. Cassette opening
18. Cassette eject

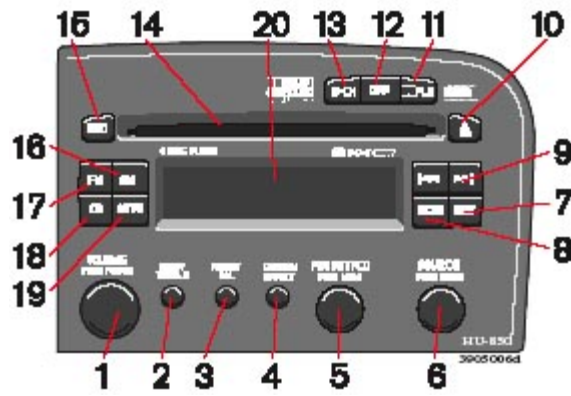

1. On/off - press  
Volume - turn
2. Bass - press and turn  
Treble - press to release the control, pull and turn to adjust
3. Fader - press and turn  
Balance - press to release the control, pull and turn to adjust
4. Center volume - press and turn  
Effect channel volume - press, pull and turn
5. Selector knob for:  
Stored radio stations  
CD - changer (option), selecting a disc
6. Source/Menu  
Press to open main menu  
Turn to select FM, AM, CD,  
CD changer (option), selecting a disc
7. Exit (exit the menu)
8. Scan function (automatically search for radio stations)
9. Navigations buttons (seek/change radio station or CD track)
10. CD eject
11. Dolby Pro Logic II
12. 2 channel stereo
- 13 3 channel stereo
14. CD slot
15. CD random play
16. AM
17. FM
18. CD player
19. Automatically search for radio stations
20. Display



### Switch on/off

Press the knob to switch on or turn off the radio.

### Volume control

Turn the knob clockwise to increase volume. Volume control is electronic and does not have an end stop. If you have a key pad in the steering wheel, increase or decrease the volume with the + or- buttons.

### Volume control - ALARM

If a CD is playing when the radio receives an alarm bulletin (available in certain areas only), the CD player enters pause mode. The bulletin is broadcast at the volume selected for this type of message.

After the bulletin has been completed, the audio system reverts to the originally selected sound source (radio or CD), which is played at the volume that was selected for that source.

If the bulletin volume is adjusted while the bulletin is being broadcast, this new volume is saved and used for subsequent bulletins.

### Bass

Adjust the bass by pressing the button to extend the control and turning it to the left (less bass) or to the right (more bass). A "detent" indicates "equalized" bass. Press the button back in when you have made the adjustment.

### Treble

Adjust the treble by pressing the button to extend the control, pulling it out as far as possible, and then turning it to the left (less treble) or to the right (more treble). A "detent" indicates "equalized" treble. Press the button back in when you have made the adjustment.



### MID EQ level

This function is used to fine-tune the balance of sound in the speakers. To set the level:

1. Press SOURCE.
2. Turn the SOURCE knob, select ADVANCED MENU and press SOURCE.
3. Turn the SOURCE knob, select AUDIO SETTINGS and press SOURCE.
4. Turn the SOURCE knob, select MID EQ LEVEL and press SOURCE.
5. Turn the SOURCE knob, select the desired level and press SOURCE.
6. Press EXIT.




### Fader - Balance front/rear

Adjust front/rear speaker balance by pressing the button to extend the control and turning it to the left (more sound from the rear speakers) or to the right (more sound from the front speakers). A "detent" indicates "equalized" balance. Press the button back in when you have made the adjustment.

### Balance right/left

Adjust left/right speaker balance by pressing the button to extend the control, pulling it out as far as possible and then turning it to the left (more sound from the left speakers) or to the right (more sound from the right speakers). A "detent" indicates "equalized" balance. Press the button back in when you have made the adjustment.

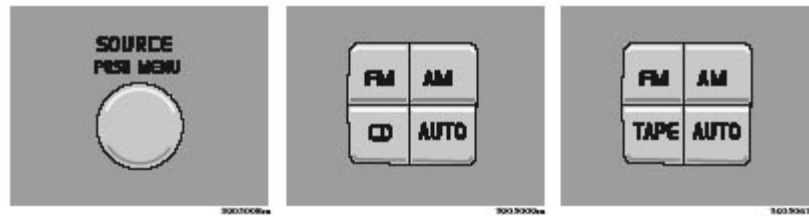


### Selecting a sound source

The sound source (e.g. AM, FM, etc) can be selected in two ways:

- Use the sound source buttons (see the right illustrations above).
- Turn the SOURCE knob (see illustration above) to select a sound source (AM, FM, cassette, or CD). Press the knob to select the AM or FM band of your choice.

The sound source selected will be shown in the display.

pg. 157 Audio systems HU-650/HU-850

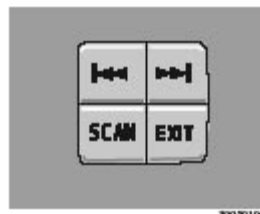



### Scan



Press the SCAN button to start the station scan function. When a station is found, scanning stops for approximately 10 seconds, after which scanning will continue.

Press the SCAN or EXIT button when a station has been found if you would like to listen to that station and to discontinue the scan function.

### Station seek up/down



Press  or  to start the seek function. The radio seeks the next audible station and tunes it in. Repeat the procedure to continue the seek function.

### Manual station search

Press  or  and hold it down. MAN will be shown in the display. The radio scans slowly in the selected direction and will increase the scanning speed after a few seconds. Release the button when the desired frequency appears in the



display.

The frequency can be fine-tuned by short presses on the  or  keys.

The system will remain in manual search mode for 5 seconds after the button is released, after which it will return to seek mode.



*Audio system controls on the steering wheel*

### **Steering wheel key pad (option)**

If the vehicle is equipped with the key pad in the steering wheel press the right or left arrow to switch between preset stations.

pg. 158 Radio functions HU-650/HU-850




### **Storing stations**

1. Tune to the desired station.
2. Press the knob. Choose a number by turning the knob. Press again to store the station.

### **Preset**

To choose a preset station, turn button to the stored number. The currently selected station is displayed.

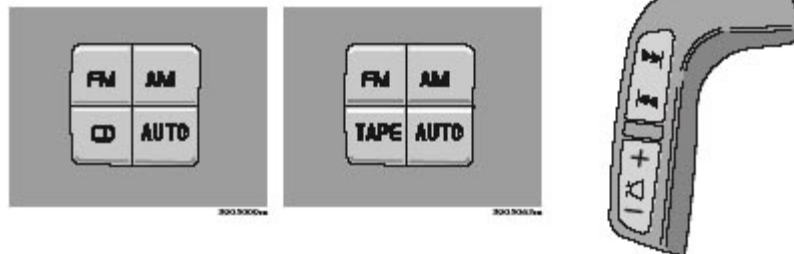

### **Storing stations automatically**

This function automatically searches for and stores up to 10 strong AM or FM stations in a separate memory. If more than ten stations are found, the ten strongest ones are stored. This function is especially useful in areas in which you are not familiar with radio stations or their frequencies.

To use the AUTO function:

1. Select radio mode using the AM or FM buttons.
2. Start the search by pressing AUTO for more than 2 seconds.
3. AUTO appears in the display and a number of stations with strong (max. 10) from the selected frequency band will be stored in the auto-store memory. If there are no stations with sufficient signal strength, NO STATION is displayed.
4. Press the AUTO button or the arrow keys on the optional steering wheel controls briefly to select the stored stations.

When the radio is in auto-store mode, AUTO is shown in the display. AUTO disappears when you return to the normal radio mode.

Return to the normal radio mode by pressing the AM, FM, or EXIT button or turn the PRESET/CD knob.

To return to the Auto-store mode, press the AUTO button briefly.

## **Radio Broadcast Data System - RBDS**

This feature, which may not be available in your area, functions only with FM broadcasts. The radio in your car is equipped with an advanced system allowing information from broadcasters to be transmitted visually, as text, together with the audio signal. This information is then decoded by the radio and made available for several new and unique features.

The RBDS or Radio Broadcast Data System operates in the FM band only, and the information transmitted is supplied exclusively by participating broadcasters. Volvo has no control over the accuracy of the data or information.

Coverage by local broadcasters may be limited at this time, but as the technology and benefits grow, you will find the radio in your car is equipped to take advantage of this system.

### **PI (Program Information) Seek:**

When an FM station has been stored as a preset, the radio also stores RBDS program information if it is available. When the preset is selected at a later time, the radio tries to access updated program information. In weak signal areas, there may be a delay before the station becomes audible. During this delay, "PI seek" will be displayed and there will be no sound.

PI seek can be interrupted by pressing EXIT.

### **Radio text**

Certain RBDS stations broadcast program information, which can be shown in the display. The text will be shown twice in the display.

#### **To start this function:**

Press the FM button for several seconds.

#### **To deactivate this function:**

Press FM briefly.

Station information will be shown twice in the display.

### **Alarm**

Alarms bulletins are transmitted automatically by certain RBDS stations. The function cannot be deactivated.

"Alarm!" is shown in the radio display when an alarm message is sent. The function is used to warn motorists of

serious accidents, etc.

### **Program type/station format -PTY**

The PTY function allows you to find stations whose programs suit your taste. Use the PTY function to select among the different station formats shown in the list.

To select a station format:

1. Select radio mode using the FM button, or by turning the SOURCE knob.
2. Press the SOURCE knob, select PTY and press SOURCE.
3. Turn the SOURCE knob, select a station format from the list and press SOURCE to confirm the selected station format. The PTY (station format) of the selected station is now shown in the display.

**NOTE:** Not all RBDS radio stations have PTY designations.

### **Deactivate:**

1. Select radio mode using the FM button and press the SOURCE knob.
2. Turn the SOURCE knob, select PTY and press SOURCE.
3. Turn the SOURCE knob, select PTY OFF and press SOURCE.
4. Press EXIT.

The PTY symbol in the display turns off and the radio returns to normal.

<b>Program type</b>	<b>Display text</b>
Off	PTY OFF
News	NEWS
Current affairs	AFFAIRS
Information	INFO
Sports	SPORT
Education	EDUCATION
Drama	DRAMA
Art and culture	CULTURE
Science	SCIENCE
Entertainment	VARIED
Pop music	POP M
Rock music	ROCK M
Easy listening	EASY M
Light classics	LIGHT M
Classical music	CLASSICS
Other music	OTHER M

Weather	WEATHER
Finance	FINANCE
Religious programs	RELIGION
Travel	TRAVEL
Leisure	LEISURE
Jazz music	JAZZ
Country music	COUNTRY
National music	NATION M
Oldies	"OLDIES"
Folk music	FOLK M
Documentary	DOCUMENT

---




[Contents](#) | [Top of Page](#)

# 2005 VOLVO S80

## HomeLink® Universal Transceiver (option)

pg. 169 HomeLink® Universal Transceiver (option)

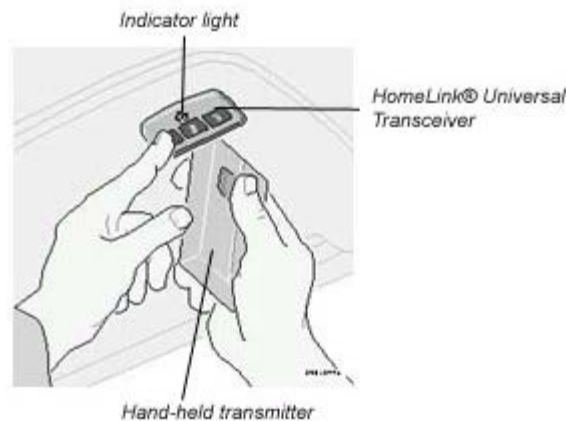

### HomeLink® Universal Transceiver

HomeLink® is an advanced system that can be programmed to learn the codes of three different remote controlled-devices (e.g., garage door openers, remote lighting, entry door lock). HomeLink®'s sun visor-mounted transceiver, powered by your car's electrical system, may then be used in place of your hand-held remote controls.

**NOTE:** For your security, the HomeLink® Universal Transceiver is designed to **not** function if the car has been locked from the *outside*.

### Programming the transceiver

1. The ignition switch must be turned to the "accessory" position (II) before programming the HomeLink® Universal Transceiver.
2. Begin by erasing all 3 factory default channels. Hold down the two outside buttons (buttons 1 and 3 in the illustration) on the HomeLink® Universal Transceiver for about 20 seconds, until HomeLink®'s indicator light begins to flash. Then release the buttons.
3. Hold your hand-held transmitter (garage door opener, for example) 2 to 5 in. (5 to 12 cm) away from the HomeLink® surface, keeping the indicator light in view. For placement questions, contact HomeLink® toll-free 1-800-355-3515 (Internet: [www.HomeLink.com](http://www.HomeLink.com)).
4. Using two hands, push and hold both your hand-held transmitter's button and the transceiver button you wish to program. The indicator light will flash first slowly, then rapidly. Rapid flashing tells you the HomeLink® button has been successfully programmed. Release both buttons.
5. If you are programming a rolling code-equipped device (e.g., garage door opener or entry door lock), refer to "Programming rolling codes" on the next page to complete the programming process.

Repeat steps 3 and 4 to program the other two transceiver buttons.

If, after several attempts, you are unable to successfully train the HomeLink® Universal Transceiver to learn your hand-held transmitter's signal, contact HomeLink® toll-free 1-800-355-3515 (Internet: [www.HomeLink.com](http://www.HomeLink.com)).

## pg. 170 HomeLink® Universal Transceiver (option)

### **WARNING!**

- If you use HomeLink® to open a garage door or gate, be sure no one is near the gate or door while it is in motion.
- Do not use the HomeLink® Universal Transceiver with any garage door opener that lacks safety "stop" and "reverse" features as required by federal safety standards. (This includes any garage door opener model manufactured before April 1, 1982) A garage door opener that cannot "detect" an object, signalling the door to "stop" and "reverse" does not meet current federal safety standards. Using a garage door opener without these features increases the risk of serious injury or death. For more information on this matter, call toll-free 1-800-355-3515 (Internet: [www.HomeLink.com](http://www.HomeLink.com)).

### **NOTE - Canadian residents:**

During programming, your hand-held transmitter may automatically stop transmitting. To successfully train HomeLink®, continue to hold the HomeLink® button. At the same time, repeatedly press and hold your hand-held transmitter's button at *two-second intervals* until HomeLink® has learned your transmitter's code. The HomeLink® indicator light will flash first slowly, and then rapidly to indicate that the button has been successfully programmed.

### **Determining if your garage door uses a rolling code**

Determine, in one of the following ways, if your garage door uses a rolling code system and is manufactured after 1996:

- Refer to the garage door opener owner's manual for verification.
- If your hand-held transmitter appears to program the HomeLink® Universal Transceiver but the programmed button does not activate the garage door, your garage door opener may have a rolling code.
- Press the programmed HomeLink® button. If the garage door opener has the rolling code feature, the HomeLink® indicator light flashes rapidly and then glows steadily after approximately 2 seconds.

**To train a rolling code garage door opener**, follow these instructions after programming the desired transceiver button according to "Programming the transceiver." The help of a second person may make training easier.

1. Locate the training button on the *garage door opener motor head unit*. The location and color of the training button may vary. If you encounter difficulty, refer to the garage door opener owner's manual or call toll-free 1-800-355-3515 (Internet: [www.HomeLink.com](http://www.HomeLink.com)).
2. Press the "training" button on the garage door opener motor head unit until the "training" light comes on.
3. Press and release the programmed HomeLink® button. Press and release the programmed HomeLink® button a *second* time to complete the training process.

Some garage door openers may require you to do this procedure a *third time* to complete the training.

The programmed button on your HomeLink® Universal Transceiver should now operate your garage door opener. The original hand-held transmitter can also be used, as desired, to operate the garage door.

The remaining two HomeLink® buttons can be programmed in the same way. In the event of any problems in

programming the HomeLink® Universal Transceiver, call toll-free 1-800-355-3515 (Internet: [www.HomeLink.com](http://www.HomeLink.com)).

### **Operating the HomeLink® Universal Transceiver**

Once programmed, the HomeLink® Universal Transceiver can be used in place of hand-held transmitters.

To operate, the key must be turned to the "accessory" position (II) or the engine must be running. Press the programmed HomeLink® button to activate the garage door, driveway gate, security lighting, home security system, etc.

Your original hand-held transmitters may, of course, be used at any time.

pg. 171 HomeLink® Universal Transceiver (option)

### **Erasing programmed buttons**

Individual buttons cannot be erased. To erase all three programmed buttons:

1. Turn the ignition key to the "accessory" position (II).
2. Hold down the two outside buttons on the HomeLink® Universal Transceiver for about 20 seconds, until HomeLink®'s indicator light begins to flash.
3. Release both buttons.

The HomeLink® buttons can be reprogrammed using the procedures described on the previous pages.

### **Reprogramming a single HomeLink® button**

1. Press and hold the desired HomeLink® button. **Do not release** the button until step 3 has been completed.
2. When the indicator light begins to flash slowly (after approximately 20 seconds), position the hand-held transmitter 2 to 5 in. (5 to 12 cm) away from the HomeLink® surface.
3. Press and hold the hand-held transmitter button. The HomeLink® indicator light will flash first slowly, then rapidly. When the indicator light flashes rapidly, release both buttons.

The previously programmed device has now been erased and the new device can be activated by pressing the HomeLink® button that has just been programmed. This procedure will not affect any other programmed HomeLink® buttons.

### **NOTE:**

- Retain the original transmitter(s) for future programming procedures (i.e., if you purchase a new car).
- For your own security, erase all programmed buttons on the HomeLink® Universal Transceiver when you sell your car.
- Metallic sun protection films should not be used on any windows in a car equipped with HomeLink® Universal Transceiver. This could interfere with the transceiver's function.



[Contents](#) | [Top of Page](#)

**2005  
VOLVO  
S80**

**Index**

pg. 173 Index

**A**

- [ABS.....19](#)
- [ABS - warning light.....29](#)
- [Active chassis system \(Four-C\).....82](#)
- [Adjusting the steering wheel.....38](#)
- [Air conditioning.....47- 49, 51](#)
- [Air filter - engine.....133](#)
- [Air vents.....46](#)
- [Airbag \(SIPS\).....10](#)
- [Airbag \(SRS\).....4](#)
- [Alarm.....67, 68](#)
- [Alarm - "panic" function.....67](#)
- [All Wheel Drive \(AWD\) general information.....96](#)
- [ALR/ELR.....16](#)
- [Anti-lock Brake System \(ABS\).....19](#)
- [Anti-lock Brake System - warning light.....29](#)
- [Antifreeze.....93, 132](#)
- [Approach lighting.....62](#)
- [Ashtrays.....40](#)
- [Audio systems.....151](#)
  - [\\_ CD player.....163](#)
  - [\\_ HU-650 - overview.....153](#)
  - [\\_ HU-850 - overview.....154](#)
  - [\\_ specifications.....168](#)
- [Automatic car washing.....128](#)
- [Automatic Locking Retractor \(ALR\).....16](#)
- [Automatic transmission](#)
  - [\\_ five speed.....78](#)
  - [\\_ four speed.....76](#)
  - [\\_ Geartronic.....80](#)
- [Auxiliary socket.....40](#)



## **B**

- [Backrests, rear seat - folding.....60](#)
- [Battery.....93, 149](#)
  - [\\_ maintenance.....140](#)
  - [\\_ replacing.....139](#)
  - [\\_ ventilation hose.....139](#)
- [Blinds - rear/side rear windows.....44](#)
- [Booster cushion - integrated.....15](#)
- [Brake failure warning light .....28](#)
- [Brake fluid.....138, 147](#)
- [Brake system.....18](#)
- [Bulbs \(list\).....149](#)
- [Bulbs - replacing.....119-125](#)

## **C**

- [Capacities \(oils and fluids\).....143, 147](#)
- [Cargo net in trunk.....59](#)
- [Cassette deck \(HU-650\).....165](#)
- [Catalytic converters - three-way.....95, 96](#)
- [Center console - switches.....31](#)
- [Center head restraint - rear seat.....3](#)
- [Central locking buttons.....65](#)
- [Changing wheels.....110, 111](#)
- [Chassis setting .....82](#)
- [Child booster cushion ..... 15](#)
- [Child restraint anchorages ..... 14](#)
- [Child safety.....14 -17](#)
- [Child safety locks - rear doors.....69](#)
- [Child seat anchors ISOFIX ..... 14](#)
- [Climate controls.....47 - 49, 51](#)
- [Climate system - general information.....50](#)
- [Clock.....27](#)
- [Coat hanger.....55](#)
- [Cold weather driving.....93](#)
- [Combination filter.....47, 51](#)
- [Coolant.....132, 147](#)
- [Cooling system.....86, 147](#)
- [Courtesy light.....56](#)
- [Courtesy lights \(front\) - replacing.....125](#)
- [Courtesy lights - exterior.....62](#)
- [Cruise control.....33](#)
- [Cup holder - opening.....58](#)

## **D**

- [Dimensions.....145](#)
- [Distributor ignition system.....148](#)

[Door step courtesy lights - replacing.....123](#)

[Doors and locks.....62](#)

[Drive belt.....132](#)

[Driving economy.....84](#)

[Driving mode indicator.....27](#)

[Driving mode W.....77, 79, 81](#)

[Driving with trunk open.....85](#)

## **E**

[Economical driving.....84](#)

[Electrical system.....149](#)

[Electrical system - general information.....85](#)

[Electrically operated front seats.....54](#)

[Electrically operated moonroof.....43](#)

[Electrically operated sideview mirrors.....42](#)

[Electrically operated windows.....41](#)

[Electronic Brake Force Distribution.....19](#)

[Electronic Climate Control\(ECC\).....47 - 49, 51](#)

[Emergency Locking Retractor \(ELR\).....16](#)

[Emergency towing.....87, 88](#)

[Emergency warning flashers.....39](#)

[Emissions systems.....131](#)

[Engine - specifications.....146](#)

[Engine - starting.....75](#)

[Engine air filter.....133](#)

[Engine compartment.....135](#)

[Engine oil.....93, 136, 137, 147](#)

[Exterior courtesy lights.....62](#)

[Exterior features - overview.....25](#)

## **F**

[Fog light - rear.....29, 35](#)

[Fog lights - front.....34](#)

[Folding passenger's seat backrest.....55](#)

[Folding rear seat backrests .....60](#)

[Four-C \(active chassis system\).....82](#)

[Front airbags - SRS.....4-9](#)

[Front airbags - SRS - warning light.....28](#)

[Front courtesy lights - replacing.....125](#)

[Front fog lights.....34](#)

[Front fog lights - replacing .....122](#)

[Front reading lights.....56](#)

[Front seats - adjusting.....54](#)

[Front seats - heated.....39](#)

[Front suspension.....148](#)

[Fuel.....72, 147](#)

[Fuel filler cap.....74](#)  
[Fuel filler door.....74](#)  
[Fuel filler door - unlocking manually.....35](#)  
[Fuel filter .....133](#)  
[Fuel gauge.....27](#)  
[Fuel requirements.....72](#)  
[Fuel system.....131, 133, 148](#)  
[Fuel/emissions systems.....131](#)  
[Fuses.....114 - 118](#)

## **G**

[Gas cap.....74](#)  
[Gasoline.....72](#)  
[Gear indicator.....27](#)  
[Geartronic .....80](#)  
[Generator.....149](#)  
[Generator warning light.....28](#)  
[Glossary of tire terminology.....105](#)

## **H**

[Hand brake.....40](#)  
[Handling.....85](#)  
[Hazard warning flashers.....39](#)  
[Head restraint - center rear.....3](#)  
[Headlight bulbs - replacing.....119](#)  
[Headlight wiper blades - replacing.....141](#)  
[Headlights.....34](#)  
[Heated front seats.....39](#)  
[Heated rear window.....39](#)  
[Heated sideview mirrors.....39](#)  
[Heating.....47 - 49, 51](#)  
[Hoisting the car.....134](#)  
[Home Safe System.....62](#)  
[HomeLink® .....169, 170, 171](#)  
[Hood - opening.....135](#)

## **I**

[Ignition switch.....38](#)  
[Immobilizer \(start inhibitor\).....65,75](#)  
[Indicator lights.....28, 29](#)  
[Inflatable curtain \(IC\).....11](#)  
[Inflation pressure tables.....101](#)  
[Instrument illumination.....34](#)  
[Instrument panel.....27](#)  
[Instruments.....26](#)  
[Integrated booster cushion ..... 15](#)  
[Interior Air Quality system .....51](#)

[Interior features - overview.....24](#)

[Interior lighting.....56](#)

[ISOFIX Child seat anchors..... 14](#)

## **J**

[Jack.....59, 110, 111](#)

[Jump starting.....92](#)

## **K**

[Key - removing from ignition switch.....75](#)

[Keyless entry system.....63, 64](#)

[Keyless entry system - replacing batteries.....64](#)

[Keylock.....75](#)

[Keys.....62](#)

[Kickdown.....79, 80](#)

## **L**

[Label information.....144](#)

[Laminated side windows.....128](#)

[LATCH/ISOFIX anchors..... 14](#)

[License plate lights - replacing.....123](#)

[Lifting the car.....134](#)

[Load carriers.....86](#)

[Locking and unlocking the car.....62](#)

[Locking steering wheel.....38](#)

[Long distance trip.....94](#)

[Long loads.....55](#)

## **M**

[Maintenance service.....130](#)

[Malfunction indicator lamp.....29](#)

[Manually unlocking the fuel filler door.....35](#)

[Mirrors.....42](#)

[Mirrors, sideview - memory function.....42](#)

[Moonroof.....43](#)

## **O**

[Occupant safety.....13](#)

[Octane rating.....72](#)

[Odometer.....27](#)

[Oil - engine.....93, 136, 137, 147](#)

[Oil pressure warning light ..... 28](#)

[Opening the hood.....135](#)

[Opening the trunk from the inside.....65](#)

## **P**

[Paint touch-up.....126](#)

[Panic function \(alarm\).....67](#)

[Park Assist.....83](#)

[Parking brake.....40](#)

<a href="#">Parking brake reminder light.....</a>	<a href="#">28</a>
<a href="#">Parking lights.....</a>	<a href="#">34</a>
<a href="#">Passenger's seat backrest - folding.....</a>	<a href="#">55</a>
<a href="#">PCV system.....</a>	<a href="#">133</a>
<a href="#">PI (Program Information) Seek.....</a>	<a href="#">159</a>
<a href="#">Polishing.....</a>	<a href="#">128</a>
<a href="#">Power moonroof.....</a>	<a href="#">43</a>
<a href="#">Power seats.....</a>	<a href="#">54</a>
<a href="#">Power steering - speed-sensitive.....</a>	<a href="#">85</a>
<a href="#">Power steering fluid .....</a>	<a href="#">138, 147</a>
<a href="#">Power windows.....</a>	<a href="#">41</a>

## **R**

<a href="#">Radio.....</a>	<a href="#">153, 154</a>
<a href="#">Radio Broadcast Data System - RBDS.....</a>	<a href="#">159</a>
<a href="#">Rain sensor - windshield wipers.....</a>	<a href="#">37</a>
<a href="#">Reading lights - front/rear .....</a>	<a href="#">56</a>
<a href="#">Rear door step lights - replacing.....</a>	<a href="#">123</a>
<a href="#">Rear fog light.....</a>	<a href="#">29, 35</a>
<a href="#">Rear reading lights.....</a>	<a href="#">56</a>
<a href="#">Rear seat backrests - folding.....</a>	<a href="#">60</a>
<a href="#">Rear suspension.....</a>	<a href="#">148</a>
<a href="#">Rear window - heated.....</a>	<a href="#">39</a>
<a href="#">Rearview mirror.....</a>	<a href="#">42</a>
<a href="#">Refrigerant.....</a>	<a href="#">50, 147</a>
<a href="#">Refueling.....</a>	<a href="#">74</a>
<a href="#">Remote control - keyless entry system and sideview mirrors.....</a>	<a href="#">42</a>
<a href="#">Remote keyless entry system.....</a>	<a href="#">63</a>
<a href="#">Remote keyless entry system - replacing batteries.....</a>	<a href="#">64</a>
<a href="#">Remote keyless entry system and the driver's seat.....</a>	<a href="#">55</a>
<a href="#">Replacing bulbs.....</a>	<a href="#">119-125</a>
<a href="#">Replacing fuses.....</a>	<a href="#">114</a>
<a href="#">Replacing the battery.....</a>	<a href="#">139</a>
<a href="#">Replacing wiper blades.....</a>	<a href="#">141</a>
<a href="#">Reporting safety defects.....</a>	<a href="#">13</a>
<a href="#">Road assistance.....</a>	<a href="#">150</a>
<a href="#">Roadholding.....</a>	<a href="#">85</a>
<a href="#">Roof load - maximum.....</a>	<a href="#">145</a>
<a href="#">Roof racks.....</a>	<a href="#">86</a>
<a href="#">Run flat tires.....</a>	<a href="#">103</a>

## **S**

<a href="#">Safety defects - reporting.....</a>	<a href="#">13</a>
<a href="#">Safety locks - child.....</a>	<a href="#">69</a>
<a href="#">Seat belt maintenance.....</a>	<a href="#">13</a>
<a href="#">Seat belts.....</a>	<a href="#">2, 3, 16</a>

<a href="#">Seat belts - cleaning.....</a>	<a href="#">129</a>
<a href="#">Seats - front.....</a>	<a href="#">54</a>
<a href="#">Self supporting run flat tires.....</a>	<a href="#">103</a>
<a href="#">Servicing.....</a>	<a href="#">133, 134</a>
<a href="#">Shiftlock.....</a>	<a href="#">75, 76, 78, 80</a>
<a href="#">Side impact airbag system (SIPS).....</a>	<a href="#">10</a>
<a href="#">Side marker lights - replacing.....</a>	<a href="#">124</a>
<a href="#">Side turn signals - replacing.....</a>	<a href="#">124</a>
<a href="#">Sideview mirrors.....</a>	<a href="#">42</a>
<a href="#">Sideview mirrors - heated.....</a>	<a href="#">39</a>
<a href="#">Sideview mirrors - memory function.....</a>	<a href="#">42</a>
<a href="#">Spare tire.....</a>	<a href="#">59</a>
<a href="#">Spark plugs.....</a>	<a href="#">133, 148</a>
<a href="#">Specifications.....</a>	<a href="#">146</a>
<a href="#">Speed-sensitive power steering.....</a>	<a href="#">85</a>
<a href="#">SRS.....</a>	<a href="#">6</a>
<a href="#">SRS diagnostic system.....</a>	<a href="#">28</a>
<a href="#">Stability Traction Control (STC).....</a>	<a href="#">19</a>
<a href="#">Start inhibitor (immobilizer).....</a>	<a href="#">62, 75</a>
<a href="#">Starting the engine.....</a>	<a href="#">75</a>
<a href="#">Steering wheel adjustment .....</a>	<a href="#">38</a>
<a href="#">Steering wheel lock.....</a>	<a href="#">38</a>
<a href="#">Storage compartment in center console.....</a>	<a href="#">58</a>
<a href="#">Storage compartments.....</a>	<a href="#">57</a>
<a href="#">Sun blinds.....</a>	<a href="#">44</a>
<a href="#">Supplemental Restraint System.....</a>	<a href="#">4, 28</a>
<a href="#">Suspension.....</a>	<a href="#">148</a>
<a href="#">Switches in center console .....</a>	<a href="#">31</a>
<b>T</b>	
<a href="#">Tachometer.....</a>	<a href="#">27</a>
<a href="#">Tail light bulbs - replacing .....</a>	<a href="#">121</a>
<a href="#">Temperature gauge.....</a>	<a href="#">27</a>
<a href="#">Text window.....</a>	<a href="#">30</a>
<a href="#">Three-way catalytic converters.....</a>	<a href="#">95, 96</a>
<a href="#">Timing belt.....</a>	<a href="#">133</a>
<a href="#">Tire inflation.....</a>	<a href="#">99</a>
<a href="#">Tire inflation pressures tables.....</a>	<a href="#">101</a>
<a href="#">Tire Pressure Monitoring System (TPMS).....</a>	<a href="#">102</a>
<a href="#">Tires.....</a>	<a href="#">85, 98 - 109</a>
<a href="#">Tires - changing.....</a>	<a href="#">110, 111</a>
<a href="#">Tool bag.....</a>	<a href="#">59</a>
<a href="#">Towing a trailer.....</a>	<a href="#">89</a>
<a href="#">Towing eyelet.....</a>	<a href="#">87</a>
<a href="#">Towing the car.....</a>	<a href="#">87, 88</a>

<a href="#">Trailer towing.....</a>	<a href="#">89</a>
<a href="#">Trailer weight - maximum.....</a>	<a href="#">145</a>
<a href="#">Transmission - automatic.....</a>	<a href="#">77, 81, 82</a>
<a href="#">Transmission fluid (automatic).....</a>	<a href="#">147</a>
<a href="#">Trip computer.....</a>	<a href="#">32</a>
<a href="#">Trip odometer.....</a>	<a href="#">27</a>
<a href="#">Trunk - opening from the inside.....</a>	<a href="#">65</a>
<a href="#">Trunk - unlocking with master key.....</a>	<a href="#">65</a>
<a href="#">Trunk lights - replacing.....</a>	<a href="#">124</a>
<a href="#">Turn signal bulbs (front).....</a>	<a href="#">120</a>
<b>U</b>	
<a href="#">Unlocking the trunk with key.....</a>	<a href="#">65</a>
<a href="#">Upholstery - cleaning.....</a>	<a href="#">129</a>
<b>V</b>	
<a href="#">Vanity mirror lights - replacing.....</a>	<a href="#">122</a>
<a href="#">Vehicle Identification Number (VIN).....</a>	<a href="#">144</a>
<a href="#">Vehicle loading.....</a>	<a href="#">148</a>
<a href="#">Ventilation.....</a>	<a href="#">46</a>
<a href="#">Ventilation hose, battery .....</a>	<a href="#">139</a>
<a href="#">Volumes (oils and fluids) .....</a>	<a href="#">147</a>
<a href="#">Volvo On Call.....</a>	<a href="#">150</a>
<b>W</b>	
<a href="#">Warning lights.....</a>	<a href="#">28, 29</a>
<a href="#">Warranty.....</a>	<a href="#">130</a>
<a href="#">Washer fluid reservoir.....</a>	<a href="#">134</a>
<a href="#">Washer fluid solvent.....</a>	<a href="#">93</a>
<a href="#">Washing the car.....</a>	<a href="#">127 - 129</a>
<a href="#">Water repellent glass.....</a>	<a href="#">128</a>
<a href="#">Waxing.....</a>	<a href="#">128</a>
<a href="#">Weight distribution.....</a>	<a href="#">85</a>
<a href="#">Weights.....</a>	<a href="#">145</a>
<a href="#">Wheels - changing.....</a>	<a href="#">110, 111</a>
<a href="#">Wheels and tires.....</a>	<a href="#">98 - 111</a>
<a href="#">Whiplash Protection System (WHIPS).....</a>	<a href="#">12</a>
<a href="#">Windows - electrically operated.....</a>	<a href="#">41</a>
<a href="#">Windshield washer solvent .....</a>	<a href="#">93</a>
<a href="#">Windshield wiper blades - replacing.....</a>	<a href="#">141</a>
<a href="#">Windshield wipers/washers.....</a>	<a href="#">37</a>
<a href="#">Winter driving.....</a>	<a href="#">93</a>
<a href="#">Winter/Wet driving mode.....</a>	<a href="#">77, 79, 81</a>
<a href="#">Wiper blades - replacing.....</a>	<a href="#">141</a>







# 2005 VOLVO S80

## Back Cover

## Back Cover

### **Accessory Installation - Important Warning**


- We strongly recommend that Volvo owners install only genuine, Volvo-approved accessories, and that accessory installations be performed only by the factory-trained technicians at your authorized Volvo retailer.
- Genuine Volvo accessories are tested to ensure compatibility with the performance, safety, and emission systems in your car. Additionally, your authorized Volvo retailer knows where accessories may and may not be safely installed in your Volvo. In all cases, please consult your authorized Volvo retailer before installing any accessory in or on your car.
- Accessories that have not been approved by Volvo may or may not be specifically tested for compatibility with your car. Additionally, an inexperienced installer may not be familiar with some of your car's systems.
- Any of your car's performance and safety systems could be adversely affected if you install accessories that Volvo has not tested, or if you allow accessories to be installed by someone unfamiliar with your car.
- Damage caused by unapproved or improperly installed accessories may not be covered by your new car warranty. See your Warranty and Service Records Information booklet for more warranty information. Volvo assumes no responsibility for death, injury, or expenses that may result from the installation of non-genuine accessories.

### **Driver Distraction**

- Driver distraction results from driver activities that are not directly related to controlling the car in the driving environment. Your new Volvo is, or can be, equipped with many feature-rich entertainment and communication systems. These include hands-free cellular telephones, navigation systems, and multipurpose audio systems. You may also own other portable electronic devices for your own convenience. When used properly and safely, they enrich the driving experience. Improperly used, any of these could cause a distraction.
- For all of these systems, we want to provide the following warning that reflects the strong Volvo concern for your safety:
  - Never use these devices or any feature of your vehicle in a way that distracts you from the task of driving safely. Distraction can lead to a serious accident.
  - In addition to this general warning, we offer the following guidance regarding specific newer features that may be found in your vehicles:
    - Never use a hand-held cellular telephone while driving. Some jurisdictions prohibit cellular telephone use by a driver while the vehicle is moving.
    - If your car is equipped with a navigation system, set and make changes to your travel itinerary only with the vehicle parked.
    - Never program your audio system while the vehicle is moving. Program radio presets with the vehicle parked, and use your programmed presets to make radio use quicker and simpler.
    - Never use portable computers or personal digital assistants while the vehicle is moving.

A driver has a responsibility to do everything possible to ensure his or her own safety and the safety of passengers in

the vehicle and others sharing the roadway. Avoiding distractions is part of that responsibility.

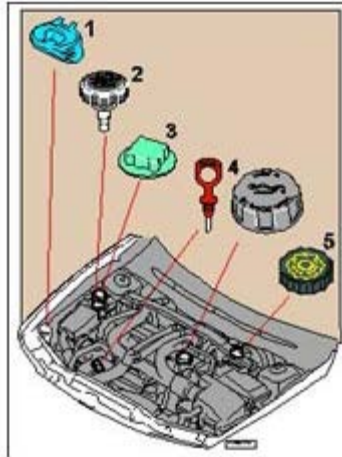

## The following should be checked regularly: \*

**1 Washer fluid** reservoir should be filled with water and solvent (wintertime: windshield washer anti-freeze). See [page 93](#).

 
**2 Power steering** - When cold, the level must not be above the COLD mark and when hot it must not be above the HOT mark. Top up if the level drops to the ADD mark with ATF fluid. See [page 138](#).

**3 Coolant** level should be between the expansion tank marks. Mixture: 50% anti-freeze and 50% water. See [page 132](#).

**4 Engine oil** level should be between the dipstick marks. The distance between the marks represents approx. 1.6 US qts (1.5 liters). See [page 136](#).


**5 Brake fluid** - check, without removing the cap, that the level is above the MIN mark. Use brake fluid DOT 4+. See [page 138](#).

\* Engine oil should be checked each time the car is refuelled.



Octane rating, see [page 72](#).

Tire pressure, see label located on the rear edge of the right front door.

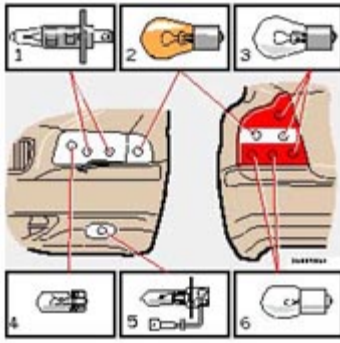

[Contents](#) | [Top of Page](#)